



User Guide 5G AX3000 Whole Home Mesh Wi-Fi 6 Gateway



1910013273 REV1.0.0 © 2022 TP-Link

Contents

About This Guide1
Appearance2
Before You Start3
Set Up Your Deco for 4G/5G Router Mode4
Set Up Your Deco for Wi-Fi Router Mode8
Troubleshooting12
Authentication15

About This Guide

This guide provides a brief introduction to 5G AX3000 Whole Home Mesh Wi-Fi 6 Gateway and regulatory information.

Features available in Deco may vary by model and software version. Deco availability may also vary by region or ISP. All images, steps, and descriptions in this guide are only examples and may not reflect your actual Deco experience.

Conventions

In this guide, the following conventions are used:

Convention	Description
Deco	Stands for Deco Whole Home Mesh Wi-Fi System/ Unit.
<u>Underline</u>	Hyperlinks are in teal and underlined. You can click to redirect to a website or a specific section.
Teal	Key information appears in teal, including management page text such as menus, items, buttons and so on.
Note:	Ignoring this type of note might result in a malfunction or damage to the device.
Ø Tips:	Indicates important information that helps you make better use of your device.

More Info

- Specific product information can be found on the product page at <u>https://www.tp-link.com</u>.
- A Technical Community is provided for you to discuss our products at https://community.tp-link.com.
- Our Technical Support contact information can be found at the Help center of the Deco app and the Contact Technical Support page at https://www.tp-link.com/support.

5G Speed Disclaimer

Maximum 5G download and upload speeds depend on external factors such as the local 5G network coverage, data plan, real-time network capacity, client limitations, and environmental factors.

5G Band Disclaimer

Supported 5G frequency bands: n1/n3/n5/n7/n8/n20/n28/n38/n40/n41/ n77/n78. Actual supported frequency bands may vary slightly in different regions due to certifications.

Speed/Coverage/Device Quantity Disclaimer

Maximum wireless signal rates are the physical rates derived from IEEE Standard 802.11 specifications. Actual wireless data throughput and wireless coverage, and quantity of connected devices are not guaranteed and will vary as a result of network conditions, client limitations, and environmental factors, including building materials, obstacles, volume and density of traffic, and client location.

Wi-Fi 6 Disclaimer

Use of Wi-Fi 6 and other features including OFDMA, MU-MIMO, 1024-QAM, and BSS Color require clients to support the corresponding features.

Seamless Roaming Disclaimer

Clients need to support 802.11k/v/r and may require additional set up. Performance may vary depending on the client device.

WPA3 Disclaimer

Use of WPA3 encryption requires clients to also support the corresponding feature.


HomeShield Disclaimer

HomeShield includes the Free Basic Plan. Fees apply for the Pro Plan. Visit <u>https://www.tp-link.com/homeshield/</u> for more information.

Appearance

Each Deco has an LED that changes color according to its status, three RJ-45 Ethernet ports, two external antennas port, a SIM card slot, a power slot, and a Reset button.

Tip: The product label can be found at the bottom of the product.

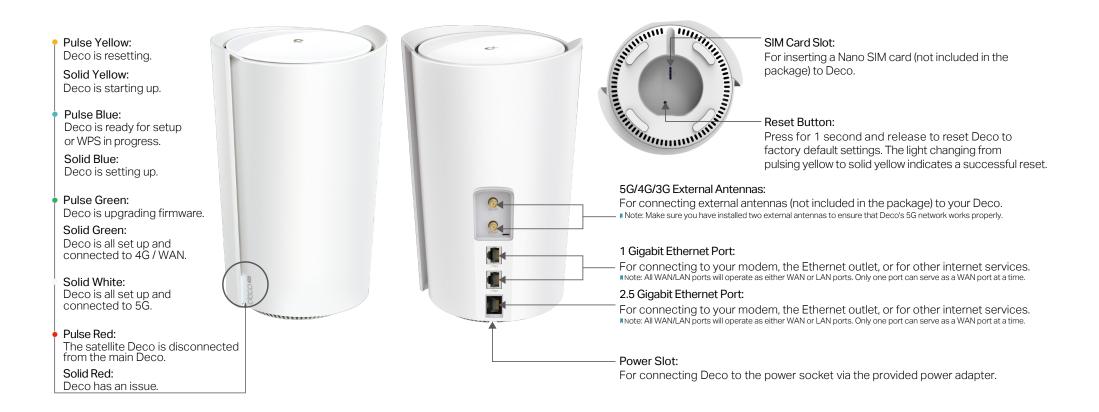


Before You Start

You can set your Deco as a 4G/5G router or a Wi-Fi router to meet the needs of different network scenarios.

4G/5G Router Mode

When working in 4G/5G Router mode, Deco connects to the internet via a SIM card inserted. Follow <u>Set Up Your Deco for 4G/5G Router Mode</u> to set up your Deco.

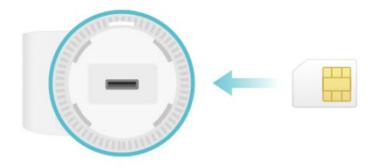

Wi-Fi Router Mode

When working in Wi-Fi Router mode, Deco connects to the internet via an Ethernet cable. If you already have a modem or your internet comes via an Ethernet cable from the wall, you can set the Deco as a regular Wi-Fi router to share the internet.

Follow Set Up Your Deco for Wi-Fi Router Mode to set up your Deco.




Set Up Your Deco for 4G/5G Router Mode

When working in 4G/5G Router mode, Deco connects to the internet via a SIM card inserted. The intuitive Deco app guides you through an easy setup process that gets each unit up and all your devices connected and online.

Follow the steps below to set up your Deco for 4G/5G Router mode.

1. Download and install the Deco app


Scan the QR code below or go to Google Play or the App Store to download the Deco app. Install the app on your Android or iOS smartphone or tablet.

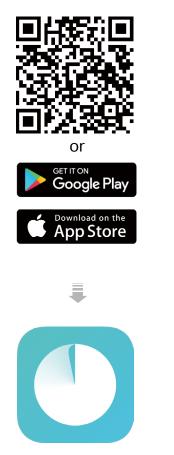

2. Log in or sign up with TP-Link ID

Open the app and log in with your TP-Link ID. If you don't have a TP-Link ID, create one first.

Note: If you forgot your login password, tap Forgot Password?. The app will help you reset your password.

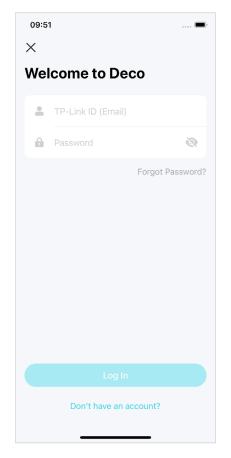


3. Select your Deco model

Search for and select your Deco model. If you have more than one Deco model, tap the question below the search box to check how to maximize the overall network.


3:40		## 4G
×	Select Your Deco	
Q Sear	rch for Deco model	
	X20-DSL	>
-	X25	>
	X50	>
	X50-4G	>
Ũ	X50-5G	>
	X50-DSL	>
	X50-Outdoor	>
0	X50-PoE	>
	X55	>
	X58-4G	>
	X60	>
	X68	>
	X73-DSI	>

4. Choose an operation mode Select Use as a 4G/5G Router.

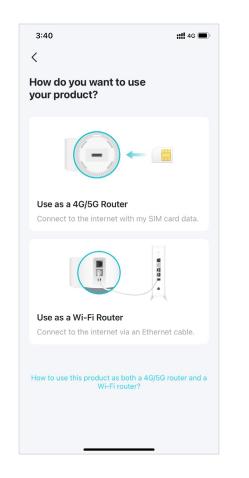


5. Insert the SIM card

Push the SIM card into the slot of Deco.

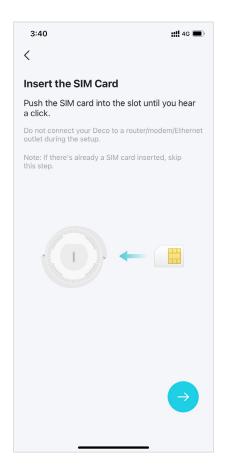

6. Power on Deco

Power on your Deco and wait until the LED pulses blue.

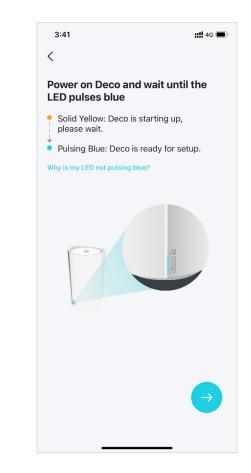

7. Specify your Deco's location

Select or custom a location for your Deco. The location will be used as the name of your Deco.

2:24 ×	• • • • • • • • • • • • • • • • • • •	
Whe	re have you placed this Deco? ation will be used as this Deco's name.	
	Bedroom	
	Hallway	
	Kitchen	
	Living Room	
	Main Bedroom	
	Office	
	Study	
	Custom	

8. Set up your SIM card

Confirm or customize the SIM card information. If you are not sure, contact your ISP.

2:24	
×	
Set Up Your SIM Card	
Carrier	China Unicom >
PDP Type	ipv4
APN Type	static
APN	3gnet
Username	
Password	
Authentication Type	chap >
Next	
Update Carrier Pr	rofile
	_
Username Password Authentication Type Next	chap >


9. Create your Wi-Fi network

Set a network name and a password. These will be the name and password you use to connect your devices to Wi-Fi.

2:2	5 ••	4G (
×		
Crea	ate your Wi-Fi Network	
acces	vill be the name and password you'll use is your network. Your password must be racters.	to at lea
((+	Network Name	
â	Password	
We re and sy	commend using a combination of letters, n ymbols for your password.	umbe
We re and sy	commend using a combination of letters, n mbols for your password.	umbe

10. Connect to your Wi-Fi network

Connect your smartphone/tablet to the Deco's Wi-Fi.

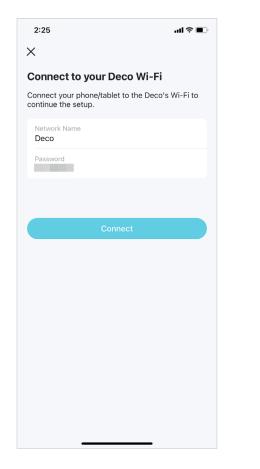

11. Setup complete

Your Deco network is now up. Connect all devices to the network.




Set Up Your Deco for Wi-Fi Router Mode

When working in Wi-Fi Router mode, Deco connects to the internet via an Ethernet cable. If you already have a modem or your internet comes via an Ethernet cable from the wall, you can set the Deco as a regular wireless router to share the internet.

Follow the steps below to set up your Deco for Wi-Fi Router mode.

1. Download and install the Deco app


Scan the QR code below or go to Google Play or the App Store to download the Deco app. Install the app on your Android or iOS smartphone or tablet.

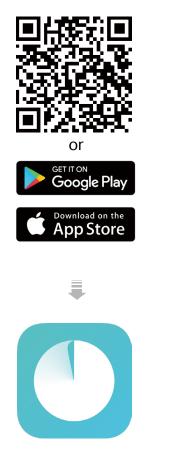

2. Log in or sign up with TP-Link ID

Open the app and log in with your TP-Link ID. If you don't have a TP-Link ID, create one first.

Note: If you forgot your login password, tap Forgot Password?. The app will help you reset your password.

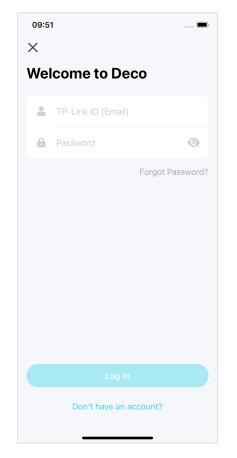

3. Select your Deco model

Search for and select your Deco model. If you have more than one Deco model, tap the question below the search box to check how to maximize the overall network.

3:40		::!! 4G 🗩
×	Select Your Deco	
Q Sea	rch for Deco model	
	X20-DSL	>
	X25	>
	X50	>
	X50-4G	>
Û	X50-5G	>
	X50-DSL	>
8	X50-Outdoor	>
0	X50-PoE	>
	X55	>
	X58-4G	>
	X60	>
	X68	>
M	X73-DSI	>


4. Choose an operation mode Select Use as a Wi-Fi Router.



5. Plug in and power on Deco

Power off your modem. Connect your Deco to the modem and power them both on.

If you don't have a modem, connect your Deco directly to the Ethernet outlet.

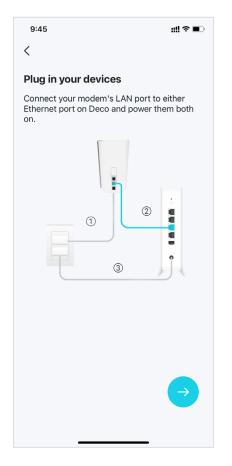

6. Connect to the Deco's Wi-Fi

Connect to the Deco's Wi-Fi using the default SSID printed on the product label.



7. Specify your Deco's location

Select or custom a location for your Deco. The location will be used as the name of your Deco.

2:24	uti 4G 🔳)
×	
	re have you placed this Deco?
The loc	ation will be used as this Deco's name.
	Bedroom
	Hallway
	Kitchen
	Living Room
	Main Bedroom
	Office
	Study
	Custom


8. Connect your Deco to the internet

Select the internet connection type and enter the information. If you are not sure, contact your internet service provider.




9. Create your Wi-Fi network

Set a network name and a password. These will be the name and password you use to connect your devices to Wi-Fi.

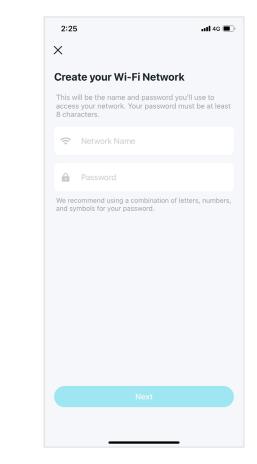

10. Connect to your Wi-Fi network

Connect your phone/tablet to the Deco's Wi-Fi.

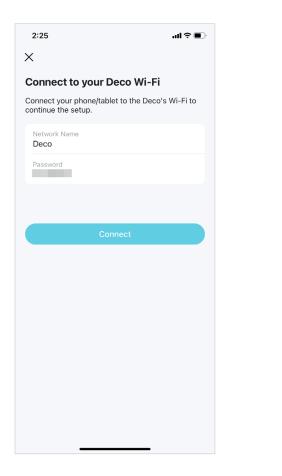

11. Setup complete

Your Deco network is now up. You can connect your devices to the Deco network.



Troubleshooting

Solutions to common problems during setup or use are provided here for reference. Follow the steps and the provided link below to diagnose and solve problems you might experience with your Deco.

If problems still exist, contact us: https://www.tp-link.com/support

Q1. What should I do if I fail to connect to the internet over the mobile connection?

- Verify that your SIM card is an NR or LTE card.
- Make sure that the nano SIM card is inserted correctly into Deco and the Deco is operating in 4G/5G Router mode.
- Check with your ISP to ensure that your SIM card is in your ISP's service area.
- Check with your ISP to ensure that your 4G/5G mobile plan is available.
- Move your Deco to a different location such as closer to the window or door to see whether it gets better signal strength.
- Launch the Deco app, go to More > Data Settings to verify if the Total/Monthly Used exceeds the Total/Monthly Data Usage Limit. If it does, set Total/ Monthly Data Usage Limit to 0(zero), or disable Total/Monthly Data Usage Limit.
- Launch the Deco app, go to More > Internet to verify Mobile Data is enabled.
- Confirm with your ISP if you are in a roaming service area. If you are, go to Advanced > Internet in the Deco app to verify Data Roaming is enabled.

Q2. What should I do if I fail to configure the satellite Deco and get stuck on "We couldn't find another Deco"?

- For Deco which is operating in 4G/5G Router mode and set as the main Deco, disconnect the Ethernet cable (if any) connected to the front-end router with DHCP Server function from the Deco's Ethernet port and try again. If it doesn't work, try the following guide.
- Refer to the guide https://youtu.be/iVgDzoo16T4

Q3. What should I do if I fail to configure the main Deco and get stuck on "Testing Internet Connection"?

• Refer to the video <u>https://youtu.be/OSUrGdWH-i0</u>

• Follow $\underline{Q5}$ and try again.

Q4. What should I do if my wireless devices cannot connect to Deco?

Refer to https://www.tp-link.com/support/fag/2718/

Q5. What should I do if Deco suddenly lost internet access?

• Visit 192.168.68.1 on a web browser and log in with your TP-Link ID. Tap Internet and check the Internet IP Address.

3:40 PM	@ •
192.168.68.1	5
Ptp-link	SAVE
😋 Deco	Clients
S	
pe:	Dynamic IP
dress:	10.0.3.136
	192.168.68.1

If the Interent IP address is not 0.0.0.0, try the following methods:

1) Make sure that the SIM card is working stably when it's inserted in your phone at the same place or confirm with your ISP that the SIM is working properly.

2) Launch the Deco app and go to More > Advanced > DHCP Server, change the Primary DNS to 8.8.8.8, and change the Secondary DNS to 8.8.4.4.

If the Internet IP address is 0.0.0.0, try the following methods:

1) Check with your ISP to make sure that your SIM card supports the network type which your Deco supports. Also, make sure the SIM card works properly when it's inserted to your phone.

2) Contact your ISP to get the PIN Code of your SIM card, then go to More > Advanced > PIN Management > PIN Code on the Deco app to fill it in.

3) Launch the Deco app, go to More > Advanced > Internet > Mobile ISP to create a new profile. Contact your ISP for the necessary information.

Q6. How can I find a suitable spot for my Deco?

Refer to https://www.tp-link.com//support/fag/1446/

Q7. What can I do if the Deco app isn't working properly?

Refer to https://www.tp-link.com/support/fag/1456/

Authentication

CE Mark Warning

This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

OPERATING FREQUENCY (the maximum transmitted power)

2400~2483.5MHz/20dBm 5150~5250 MHz(Indoor use only)/23dBm 5250~5350 MHz(Indoor use only)/23dBm WCDMA Band 1,5,8 / Power Class 3 LTE Band 1,3,5,7,8,20,28,38,40 / Power Class 3 LTE Band 41,42,43 / Power Class 3 & Power Class 2 5G n1,3,5,7,8,20,28,40 / Power Class 3 5G n38,41,77,78 / Power Class 3 & Power Class 2

EU Declaration of Conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011 /65/EU and (EU) 2015/863.

The original EU Declaration of Conformity may be found at https://www.tp-link.com/en/support/ce/

RF Exposure Information

This device meets the EU requirements (2014/53/EU Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device used at 20 cm from your body.

 
National restrictions

Frequency band: 5150 - 5250 MHz:

Indoor use: Inside buildings only. Installations and use inside road vehicles and train carriages are not permitted. Limited outdoor use: If used outdoors, equipment shall not be attached to a fixed installation or to the external body of road vehicles, a fixed infrastructure or a fixed outdoor antenna. Use by unmanned aircraft systems (UAS) is limited to within the 5170 - 5250 MHz band.

Frequency band: 5250 - 5350 MHz:

Indoor use: Inside buildings only. Installations and use in road vehicles, trains and aircraft are not permitted. Outdoor use is not permitted.



UKCA Mark UK CA

UK Declaration of Conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.

The original UK Declaration of Conformity may be found at https://www.tp-link.com/support/ukca/

National restrictions

Attention: This device may only be used indoors in Great Britain.





Korea Warning Statements:

당해 무선설비는 운용중 전파혼신 가능성이 있음.

NCC Notice & BSMI Notice:

注意!

取得審驗證明之低功率射頻器材,非經核准,公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。 低功率射頻器材之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。 前述合法通信,指依電信管理法規定作業之無線電通信。 低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。 應避免影響附近雷達系統之操作。

減少電磁波影響,請妥適使用。

安全諮詢及注意事項

- 請按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先切斷電源。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮,請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用,以確保本產品的操作可靠並防止過熱,請勿堵塞或覆蓋開口。

- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風,否則不可放在密閉位置中。
- 不要私自拆開機殼或自行維修,如產品有故障請與原廠或代理商聯繫。

限用物質含有情況標示聲明書

設備名稱:	名稱: 型號(型式):					
Equipment name:	Type designation (Type)					
5G AX3000 Whole Home Mesh Wi-Fi 6	Deco X50-5G					
Gateway						
				限用物質及其	化學符號	
			Restricted s	substances and	l its chemical symbo	ols
單元	鉛	汞	鎘	六價鉻	多溴聯苯	多溴二苯醚
Unit	Lead	Mercury	Cadmium	Hexavalent	Polybrominated	Polybrominated
	(Pb)	(Hg)	(Cd)	chromium	biphenyls	diphenyl ethers
				(Cr+6)	(PBB)	(PBDE)
PCB	\bigcirc	\bigcirc	0	\bigcirc	0	\bigcirc
外殼	\bigcirc	0	\bigcirc	0	0	0
電源供應器		0	0	\bigcirc	0	0
其他及其配件	_	0	0	0	0	0
備考1. 超出0.1 wt %"及"超出0.01 wt %"系打	自限用物質	之百分比含	量超出百分比	七含量基準值。		
Note 1: "Exceeding 0.1 wt %" and "exceeding	0.01 wt %	6" indicate t	that the perc	centage conter	nt of the restricted	substance exceeds the
reference percentage value of presence condition.						
備考2. "〇"系指該項限用物質之百分比含量未超出百分比含量基準值。						
Note 2: "O" indicates that the percentage conte	ent of the restricted substance does not exceed the percentage of reference value of presence.					
備考3."一"系指該項限用物質為排除項目。						
Note 3: The "— " indicates that the restricted substance corresponds to the exemption.						

Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.

EHC

Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Do not use the device where wireless devices are not allowed.
- Adapter shall be installed near the equipment and shall be easily accessible.
- Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.
- Operating Temperature: 0°C~40°C (32°F~104°F)
- This product uses radios and other components that emit electromagnetic fields. Electromagnetic fields and magnets may interfere with pacemakers and other implanted medical devices. Always keep the product and its power adapter more than 15 cm (6 inches) away from any pacemakers or other implanted medical devices. If you suspect your product is interfering with your pacemaker or any other implanted medical devices for information specific to your medical device.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

Explanation of the symbols on the product label

Symbol	Explanation
	DC voltage
$\underline{\wedge}$	Caution
	Class II equipment

Symbol	Explanation
$\diamond \bullet \bullet$	Polarity of d.c. power connector
VI	Energy efficiency marking
	Operator's manual
	Indoor use only
\sim	Alternating current
	 RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.