



**BLACKVUE™**  
*Over the Cloud*

**DR750S-1CH**  
Manual

---



ENGLISH

[www.blackvue.com](http://www.blackvue.com)

# Table of Contents

<b>Introduction</b> .....	<b>5</b>
<b>Important safety information</b> .....	<b>6</b>
<b>Overview</b> .....	<b>9</b>
In the box.....	9
At a glance .....	10
Front camera .....	10
Removing and inserting the front camera .....	12
<b>Installation</b> .....	<b>13</b>
Installing the BlackVue dashcam .....	13
<b>Playing and Managing Videos</b> .....	<b>16</b>
<b>Playing and managing video files using your smartphone (Android/iOS)</b> .....	<b>16</b>
Opening video files.....	16
BLACKVUE WI-FI screen composition.....	18
Playing video .....	19
Playing back videos .....	19
Identify video files by recording type .....	19
Checking the displayed time & GPS data .....	21
Real-time streaming video (Live View) .....	22
Managing videos .....	23
Managing videos in BLACKVUE WI-FI .....	23
Copy to Internal Memory .....	23
Managing videos in INTERNAL MEMORY .....	24
Deleting videos .....	25
Creating a new folder .....	25
Copying and pasting videos .....	25
Moving videos .....	26
Renaming a video .....	26
Uploading, sharing or emailing a video .....	26
<b>Playing and managing video files using your computer (Windows/Mac)</b> .....	<b>27</b>
Removing the microSD card .....	27

Opening video files in BlackVue Viewer .....	28
<b>Viewer screen composition</b> .....	<b>29</b>
Windows Viewer .....	29
Mac Viewer .....	30
<b>Playing video</b> .....	<b>31</b>
Playing back videos .....	31
Identify video files by recording type .....	31
Checking the displayed time .....	33
Using BlackVue Viewer.....	33
Exploring the timeline and G-Sensor graph .....	34
Zoom options .....	35
Checking the GPS data.....	36
<b>Managing videos</b> .....	<b>37</b>
Capturing or printing a still image from video.....	37
Deleting videos .....	37
For Windows users .....	37
For Mac users .....	38
Exporting videos .....	39
For Windows users .....	39
Copying videos .....	40
For Windows users .....	40
For Mac users .....	41

<b>Tips for optimal performance</b> .....	<b>42</b>
<b>Formatting the microSD card</b> .....	<b>42</b>
Formatting the card in the BlackVue.....	42
Format using BlackVue Viewer (Windows).....	42
Format using BlackVue Viewer (macOS).....	43
<b>Upgrading the firmware</b> .....	<b>45</b>
Upgrading the firmware using an iOS or Android device (Firmware Over The Air) .....	45
Upgrading the firmware using a computer (Windows or Mac).....	48
<b>Changing settings</b> .....	<b>50</b>
<b>Changing settings using your smartphone (Android/iOS)..</b>	<b>50</b>

<b>Basic settings</b> .....	<b>51</b>
Time settings.....	52
<b>Video settings</b> .....	<b>54</b>
Resolution .....	54
Image quality.....	54
Enhanced night vision.....	55
Brightness.....	55
<b>Recording settings</b> .....	<b>56</b>
Recording type settings.....	56
Voice recording.....	56
Date & time display.....	57
Speed unit .....	57
Video segment length.....	57
Lock event files .....	57
<b>Sensitivity settings</b> .....	<b>58</b>
G-Sensor (Normal mode) / G-Sensor (Parking mode) .....	59
Motion detection (Parking mode) .....	60
<b>System settings</b> .....	<b>61</b>
<b>LED</b> .....	<b>61</b>
Recording status .....	61
Security (Normal mode).....	61
Security (Parking mode) .....	61
Wi-Fi (Parking mode).....	62
Proximity Sensor .....	62
Voice guidance .....	62
Volume .....	62
Scheduled Reboot.....	62
Speed alert .....	62
User text overlay .....	62
<b>Wi-Fi settings</b> .....	<b>63</b>
Login credentials.....	63
Wi-Fi auto turn off .....	63
<b>Cloud settings</b> .....	<b>64</b>
Enable Cloud service .....	64
Cloud service hotspot settings.....	65
Push notification settings.....	66
<b>FW Language</b> .....	<b>67</b>

## Changing settings using your computer (Windows/Mac) ... 68

<b>BlackVue Viewer settings</b> .....	<b>69</b>
Select language.....	69
Speed unit on map.....	69
Select map service .....	69
<b>Firmware settings</b> .....	<b>70</b>
<b>Basic settings</b> .....	<b>71</b>
Time settings.....	71
Video settings.....	72
Recording settings.....	73
<b>Sensitivity settings</b> .....	<b>74</b>
G-Sensor (Normal mode) / G-Sensor (Parking mode).....	74
Motion detection (Parking mode) .....	75
Advanced sensitivity settings for normal and parking mode .....	75
<b>System settings</b> .....	<b>77</b>
LED.....	77
Proximity Sensor .....	78
Voice guidance .....	78
Volume .....	78
Scheduled Reboot.....	78
Speed alert .....	79
User text overlay .....	79
<b>Wi-Fi settings</b> .....	<b>80</b>
Login credentials.....	80
Wi-Fi auto turn off.....	80
<b>Cloud settings</b> .....	<b>81</b>
Enable Cloud service .....	81
Cloud service hotspot settings.....	82
Push notification settings.....	82
Applying the settings.....	82

## About the Cloud Service .....83

### Connect to BLACKVUE CLOUD (Optional) ..... 83

## Optional accessories .....88

### Parking mode hardwiring kit (Optional) ..... 88

### Parking mode battery pack (Optional) ..... 89

- Troubleshooting .....90**
  - Changing / resetting direct Wi-Fi SSID and password ..... 90**
    - On-device Wi-Fi SSID and password reset.....90
    - Change Wi-Fi SSID and password over the Cloud.....91
    - Change the Wi-Fi password using BlackVue Viewer (Windows or Mac) .....93
- Product specifications.....94**
- Recording time .....96**
- Disposal and recycling information.....97**

# Introduction

---

Thank you for purchasing this BlackVue dashcam made by Pittasoft Co., Ltd.

This instruction manual contains information on how to operate your dashcam.

Before using your dashcam, we recommend that you read through this manual to ensure correct usage.

To improve the performance of the product, the contents of this manual are subject to change without prior notice.

## **Note**

- A formatted microSD card is provided with the BlackVue dashcam when you purchase the product. Insert the microSD card in the dashcam and power it up. The microSD card will be initialized.

## Important safety information

For user safety and to avoid property damage, read through this manual and follow these safety instructions to use the product correctly.



### **DANGER**

Failure to observe the following directions could result in death or property damage:

- **Do not disassemble, repair, or modify the product yourself.**  
Doing so may cause fire, electric shock, or malfunction. For internal inspection and repair, contact the service center.
- **If any foreign matter gets inside the product, detach the power cord immediately.**  
Contact the service center for repair.
- **Do not adjust the product while driving.**  
Doing so may cause an accident. Stop or park your car in a safe place before installing and setting up the product.
- **Do not install the product in a location where the product can interfere with the driver's field of vision.**  
Doing so may cause an accident.
- **Do not use a damaged or modified power cord. Only use the cords provided by the manufacturer.**  
Damaged or modified power cords may cause an explosion, fire, or malfunction.
- **Do not operate the product with wet hands.**  
Doing so may cause electric shock.
- **Do not install the product in an environment with high humidity, or combustible gases or liquids.**  
Doing so may cause an explosion and/or fire.



**WARNING** Failure to observe the following directions could result in death or serious injury:

- **Do not leave the product near infants, children, or pets.**

There is a risk of them swallowing small components, and/or their saliva may get into the product, causing an explosion due to a short circuit.

- **Do not spray water or wax directly onto the product while cleaning the inside of the car.**

Doing so may cause fire, electric shock, or malfunction.

- **If smoke or an unusual smell is emitted from the power cord, detach the power cord immediately.**

Contact the service center or your distributor.

- **Keep the terminals of the power cord clean.**

Failure to do so may cause excessive heat and fire.

- **Use the correct input voltage.**

Failure to do so may cause explosion, fire, or malfunction.

- **Plug in the power cord firmly so that it cannot easily be disconnected.**

Failure to do so may cause fire.

- **Do not cover the product with any material.**

Doing so may cause external deformation of the product or fire. Use the product and peripherals in a well-ventilated location.

**CAUTION**






Failure to observe the following directions could result in injury or property damage:

- **Do not spray cleaning products directly onto the product.**  
Doing so may cause discoloration, cracks, or malfunction.
- **If the product is used outside the optimal temperature range (-20°C – 60°C / -4°F – 140°F), performance can decline or malfunctions may occur.**
- **Make sure that the product is installed properly.**  
If installed incorrectly, vibrations may cause the product to fall, and may cause physical injury.
- **When entering or exiting a tunnel, when directly facing into bright sunlight, or when recording at night without lighting the quality of recorded video may deteriorate.**
- **If the product is damaged or the power supply is cut due to an accident, video may not be recorded.**
- **Excessively tinted windshield glass can distort the recorded video or cause recorded video to be indistinct.**
- **Prolonged use of the product can increase the interior temperature and cause burns.**
- **microSD cards are consumables, so replace microSD cards after prolonged use.**  
microSD cards may not record video correctly after extended use, so check the microSD card's recording capability periodically and replace as necessary.
- **Clean the lens regularly.**  
Foreign material attached to the lens can affect the recording quality.
- **Do not remove the microSD card while the microSD card is saving or reading data.**  
The data can be damaged or malfunctions may occur.
- **It is recommended that you install the software and firmware from the BlackVue downloads page ([www.blackvue.com](http://www.blackvue.com)).**
- **It is recommended that you remove the power cord if the product (BlackVue dashcam/Parking Mode Hardwiring Kit) is not used for an extended period of time.**

# Overview

## In the box

Check the box for each of the following items before installing the BlackVue dashcam.

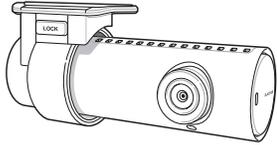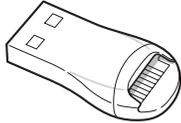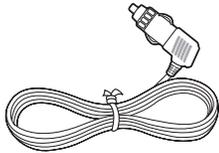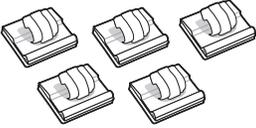	BlackVue dashcam		microSD card reader		microSD Card
	Power cord		Quick start guide		Pry tool
	Double-sided tape for the Mounting Bracket		Cable clips (5 EA)		


### Note

- The illustrations in this manual may differ from the product.
- To improve the performance of the product, the contents of this manual are subject to change without prior notice.
- For more information about the package components and accessories, visit the BlackVue website ([www.blackvue.com](http://www.blackvue.com)).


## ➤ At a glance

The following diagrams explain each part of the BlackVue dashcam.

### □ Front camera

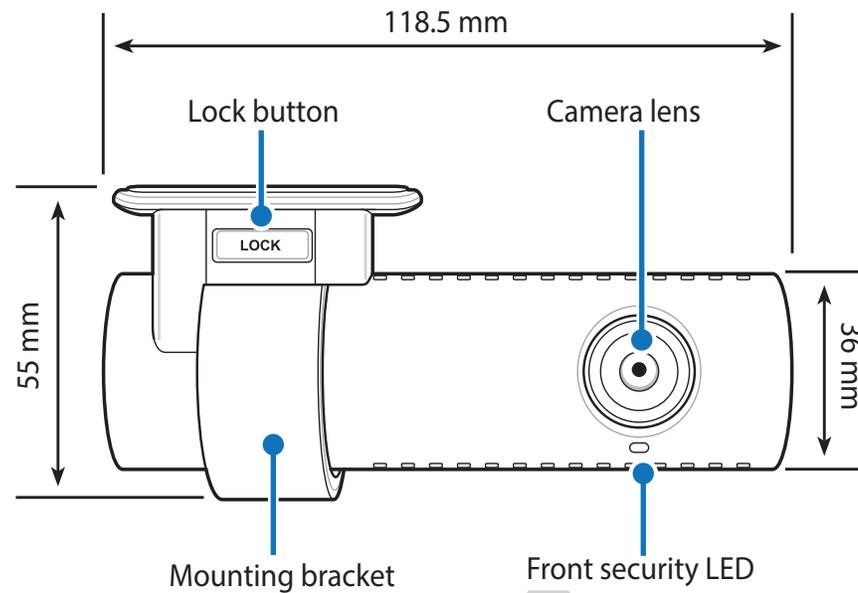

- : Blinks slowly during normal mode and parking mode motion detection standby.
- ◻ : Blinks quickly when (i) an event is being recorded (impact detected), (ii) manual recording has started, or (iii) motion is detected in parking mode.

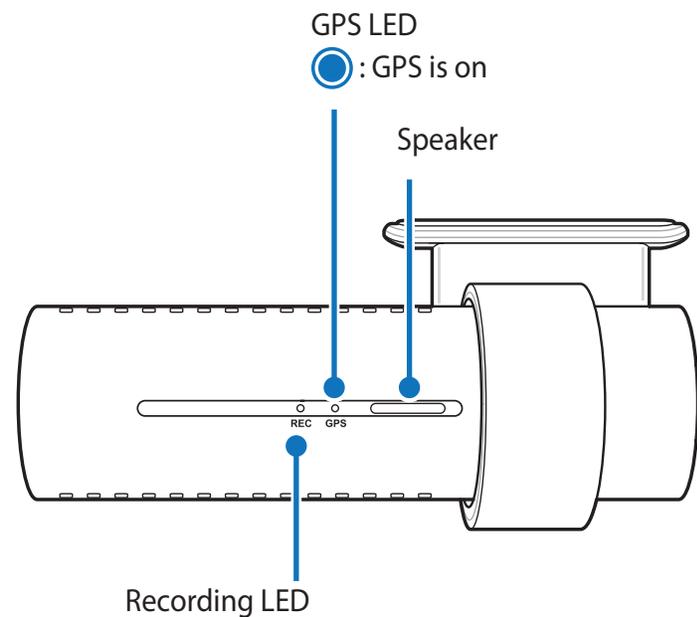


- : GPS is on
- : Blinks orange in normal mode.
- : Blinks red when (i) an event is being recorded (impact detected), or (ii) manual recording has started.
- : Blinks green in parking mode when motion is detected.

#### Wi-Fi/Internet LED

📶 : Direct Wi-Fi is on.


📶 : Blinks when connected to the internet (Cloud connected).

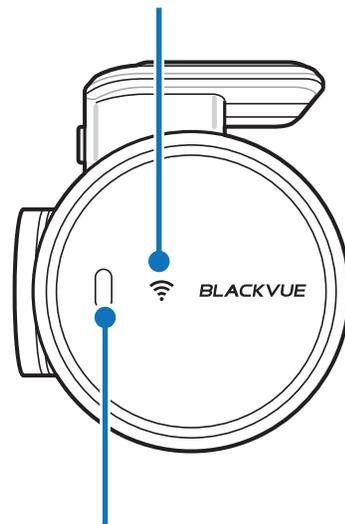

#### Proximity Sensor:

Touch or wave a finger within 20mm of the sensor to turn on/off audio recording.

Alternatively, it can be set as a manual recording trigger in the firmware settings.

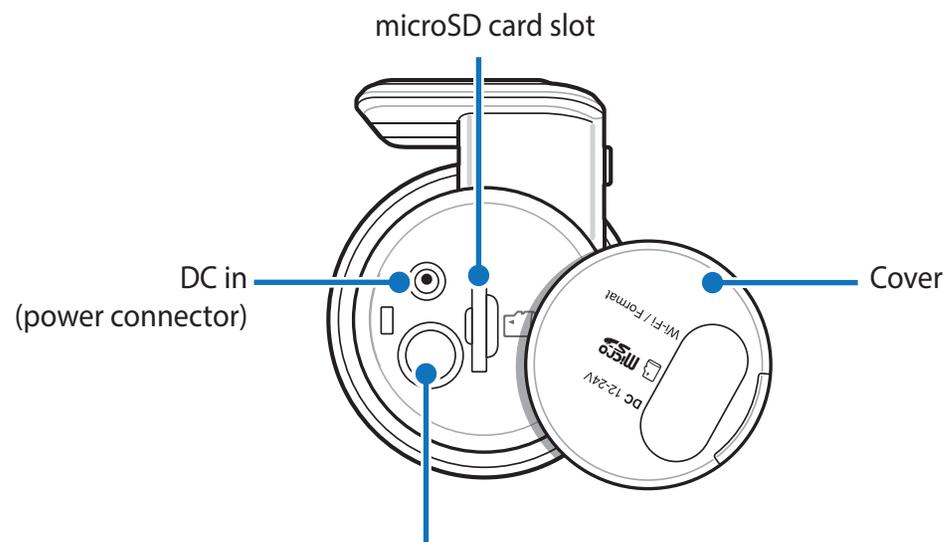


#### Wi-Fi / Format button:

- Press once to turn on/off Wi-Fi.
- Press and hold for 5 seconds and once voice instructions start, release the button. Then press once again to reset the Wi-Fi SSID and password or press and hold for 5 seconds to format the microSD card.

## □ Removing and inserting the front camera

Connectivity details label:

- Default Wi-Fi SSID
- Default Wi-Fi password
- Cloud code
- QR code

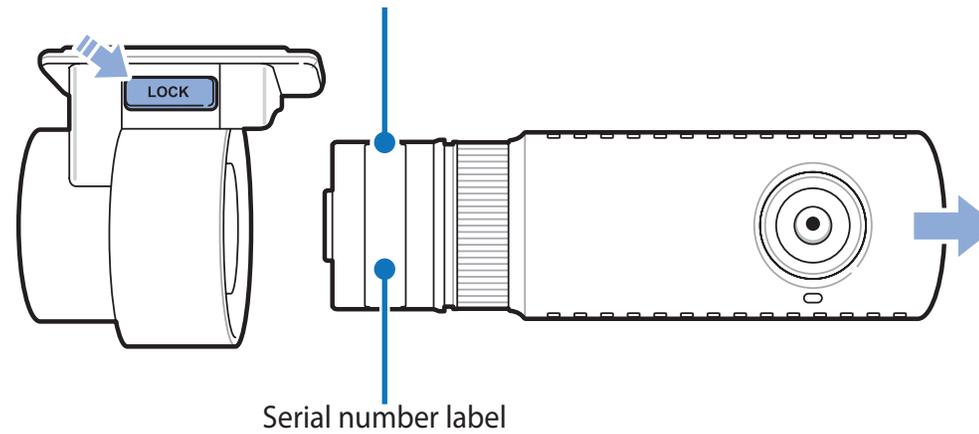


- To remove the dashcam from its bracket, press the LOCK button and pull the dashcam out of the mounting bracket.
- To insert the dashcam into its bracket, push the dashcam into the mounting bracket until it "clicks" in.

# Installation

## ▶ Installing the BlackVue dashcam


Install the BlackVue dashcam behind the rear view mirror. Remove any foreign matter and clean and dry the windshield before installation.

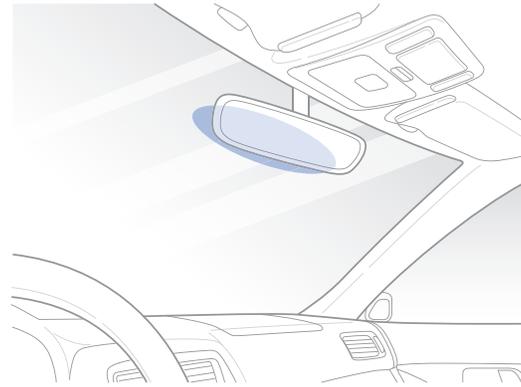


### ⚠ Warning

- Do not install the product in a location where it can obstruct the driver's field of vision.


- 1 Turn off the engine. Open the cover of the microSD card slot, gently push the card into the slot until it locks into place and close the cover.

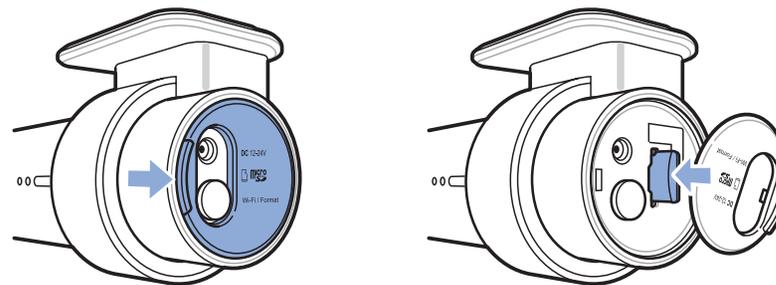

- 2** Peel off the protective film from the double-sided tape and attach the dashcam to the windshield behind the rear-view mirror.

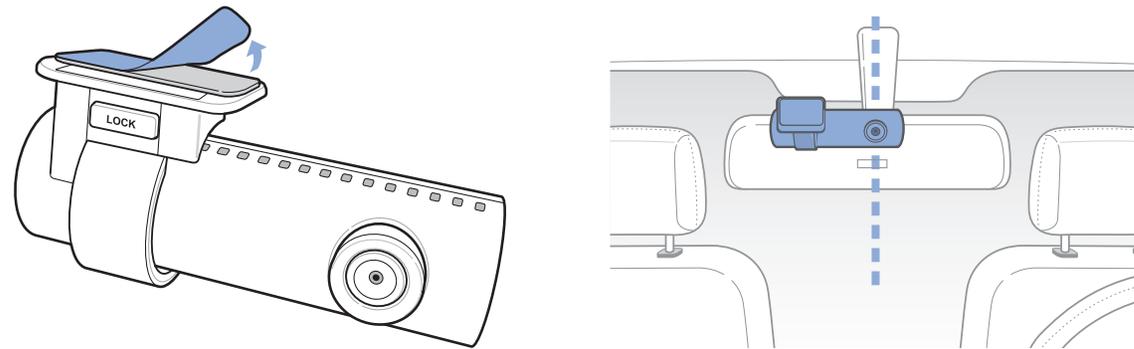


- 3** Adjust the angle of the lens by rotating the body of the dashcam. We recommend pointing the lens slightly downwards ( $\approx 10^\circ$  below horizontal), so as to record video with a 6:4 road to background ratio.

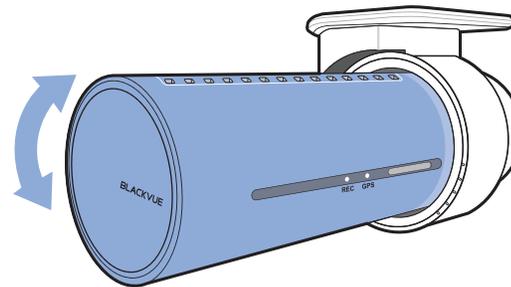

- 4** Plug the power cord into the cigarette lighter socket and the dashcam.

- 5** Use the pry tool to lift the edges of the windshield trim/molding and tuck in the power cord.

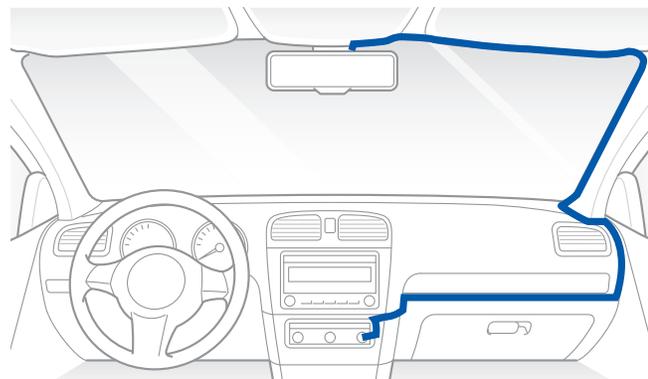

- 6 Turn on the engine. The BlackVue dashcam will power up and start recording. Video files are stored on the microSD card. When the microSD card fills up, the newest video files will start to replace the oldest video files (called **loop recording**) – so you will always have the most recent video files.
- 7 Turn off the engine. The dashcam will automatically stop recording and power down. To record in parking mode while the engine is off please install a **Power Magic Battery Pack** (sold separately) or a **Power Magic Pro** (sold separately). A **Power Magic Pro** powers your dashcam when the engine is off by hardwiring it to the automotive battery. A low voltage power cut-off function and a parking mode timer protect the automotive battery from discharge.

#### **Note**


- Up to 50 event recordings (impact, manual) can be locked from being overwritten. By default, this feature is disabled. You can enable it from firmware settings and choose to either overwrite them with new event files when the event file storage is full or lock the 50 event files and save the new event files in loop recording storage. Please note that formatting the microSD card deletes all the recordings including the locked event files.
- The recording LED blinks while recording (default setting) and the GPS LED is on when a GPS signal is received. There are 4 recording modes: Normal, Event, Parking and Manual. The dashcam starts recording in normal mode, switches to event mode when an impact is detected, and switches to parking mode if the vehicle is stationary for 5 minutes. Touching the proximity sensor turns on/off audio recording or triggers manual recording depending on the firmware settings.
- When you run the dashcam for the first time the firmware is automatically loaded onto the microSD card. After the firmware has been loaded onto the microSD card you can customize settings using BlackVue Viewer on a computer.

## Playing and Managing Videos

### ▶ Playing and managing video files using your smartphone (Android/iOS)

#### ▶ Opening video files

- 1 Search for the BlackVue app in the Google Play Store or Apple App Store and install it on your smartphone.
- 2 “Pair” your smartphone with the BlackVue dashcam via direct Wi-Fi:
  - a. Go to your smartphone's **Settings** then select **Wi-Fi**, and make sure Wi-Fi is turned on.

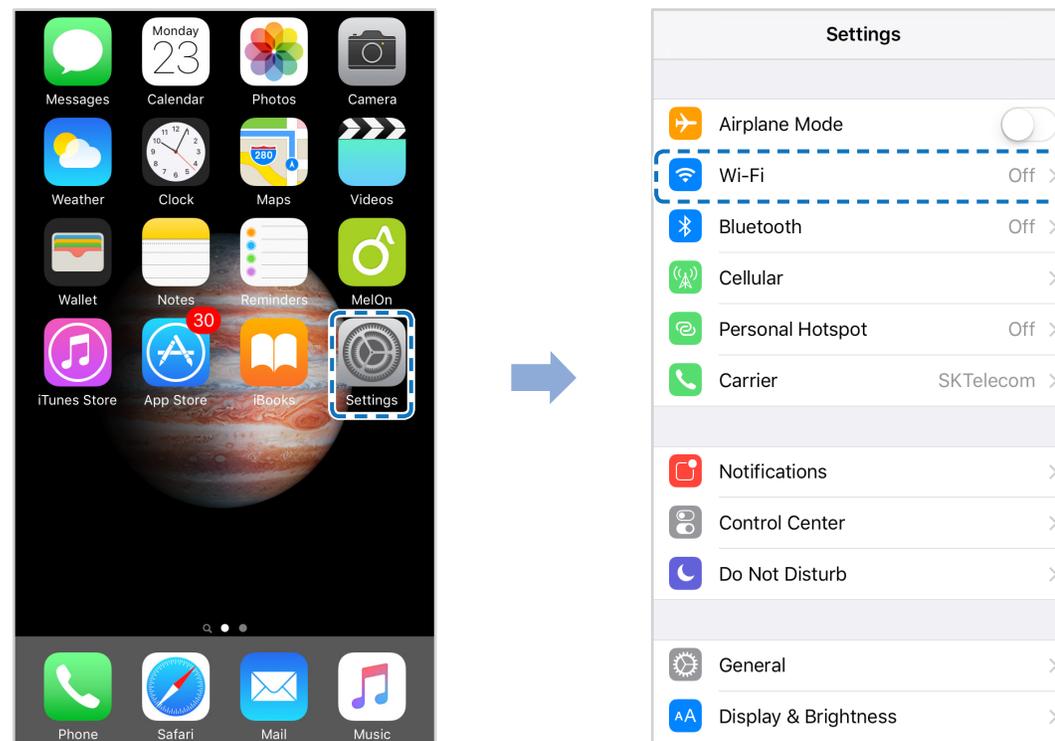


b. Choose your BlackVue dashcam from the network list. The dashcam's default SSID begins with its model number (e.g. BlackVue750S-\*\*\*\*\*).

c. Enter the password and tap join.

\* The default Wi-Fi SSID and password is labeled on the dashcam. To find them, unplug the cables and remove the dashcam from its mount.


d. Open the BlackVue app and select BLACKVUE WI-FI.

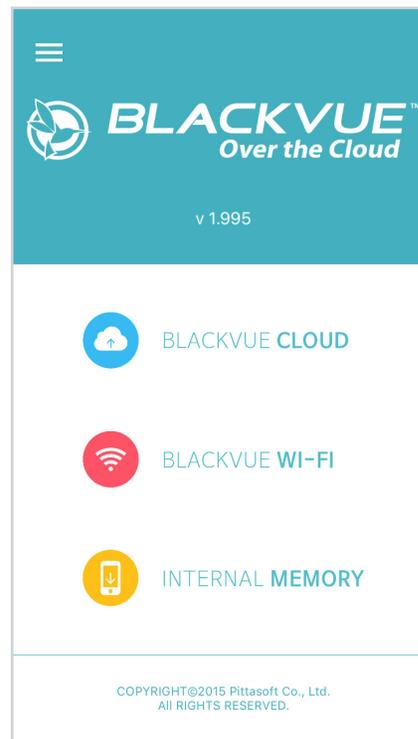

 **Note**

- Direct Wi-Fi lets you directly connect your smartphone to your dashcam via Wi-Fi within a range of 10m.
- The BlackVue app is available for devices running Android 4.2 and higher, or iOS 8.0 and higher.
- You can change Wi-Fi SSID and password as described on page **90** and **93**.

## ▶ BLACKVUE WI-FI screen composition

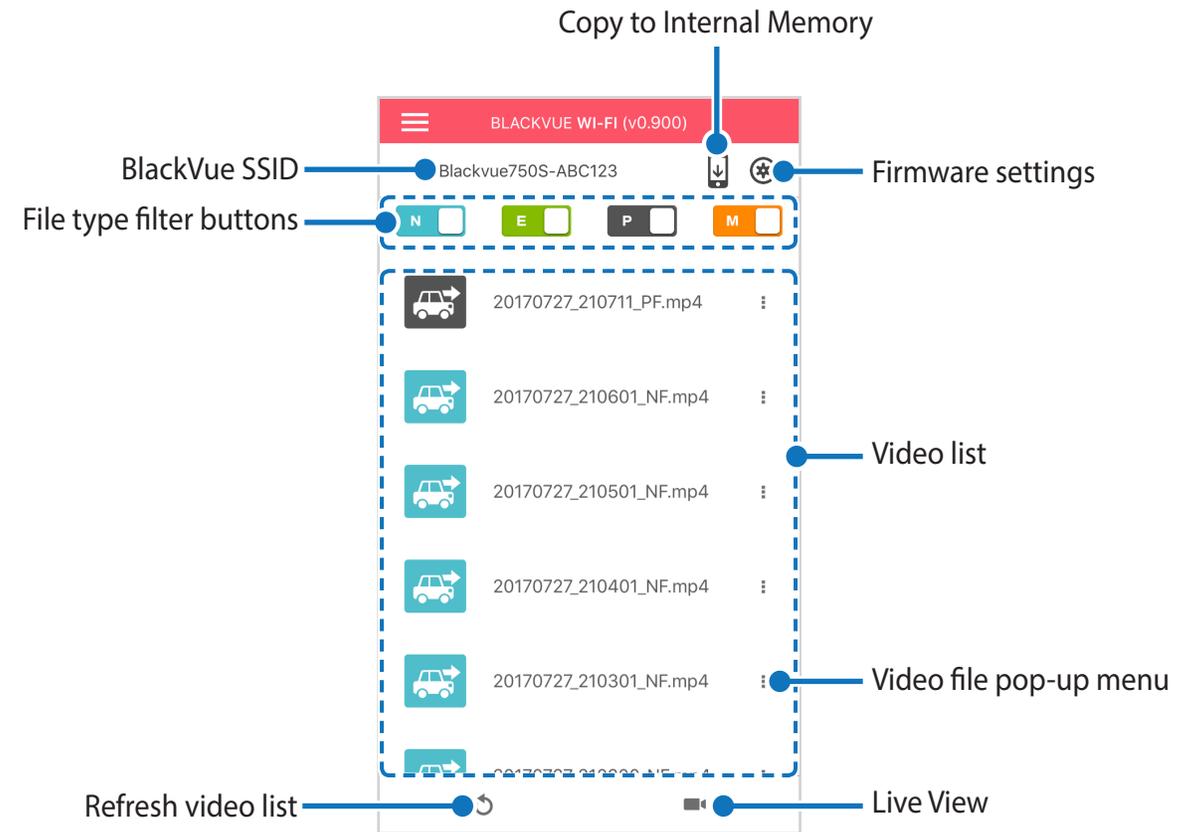

## **Playing video**

### **Playing back videos**

Select the video file you want to play from the video list.

Press the refresh button  to refresh the video list.

### **Identify video files by recording type**

	<b>Normal</b>	The dashcam records in normal mode by default.
	<b>Event</b>	When the dashcam detects an impact while in normal or parking mode, it switches to event mode and saves an event recording beginning 5 seconds before the event trigger. Exceeding the set speed limit will also trigger an event recording.
	<b>Parking</b>	In parking mode the dashcam continuously buffers video. When motion is detected in the dashcam's field of view, it saves a parking recording beginning 5 seconds before the motion detection.
	<b>Manual</b>	If proximity sensor is set as a manual recording trigger in the firmware settings, touching or waving a finger within 20mm of the sensor will turn on manual recording.

Tap the car icon to load the thumbnail of a recording.

Recording file names include the date, time, recording type and camera direction.


- **Recording type:** N: Normal  
E: Event  
P: Parking mode motion detection  
M: Manual
- **Camera direction:** F: Front camera
- **Example file name:** 20170104\_150838\_NF.mp4  
Date & time: 4th January 2017, 03:08:38 PM  
Recording type: Normal  
Camera direction: Front camera

#### **Note**

- Use the , , ,  buttons to filter the video list by recording type (Normal, Event, Parking and Manual). The  filter button displays both E (Event) and I (Impact event while parked) recordings.
- The dashcam requires a constant power source to record in parking mode. See "**Optional accessories**" on page 88 for more information.

## ☐ Checking the displayed time & GPS data

The time the video was recorded is displayed in the lower left corner of the video in the playback screen. If the displayed time in the recorded videos is incorrect please see **"Time settings" on page 52 or 71.**

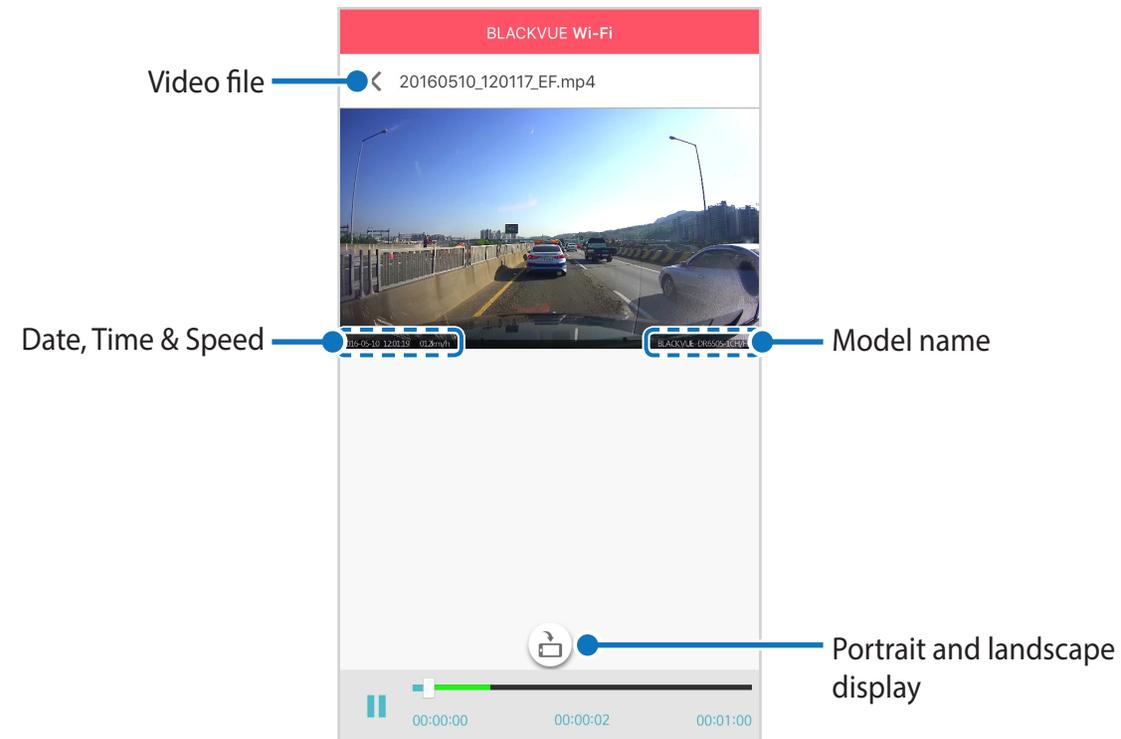


The vehicle's speed is displayed in the lower-left corner of the video.

Rotate your smartphone or press the rotate button  to switch between portrait and landscape display modes.

## ➤ Real-time streaming video (Live View)

You can view in real-time the video currently being recorded by connecting your smartphone to the dashcam via direct Wi-Fi.

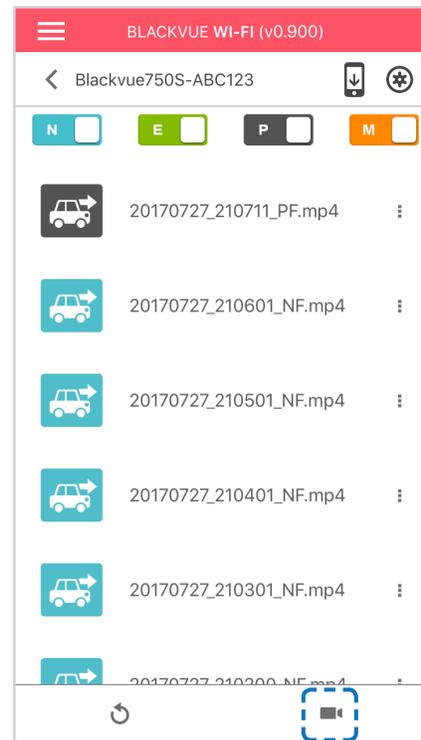

- 1 Go to your smartphone's **Settings** > **Wi-Fi** and connect to your dashcam.
- 2 Open the BlackVue app. Select **BLACKVUE WI-FI** and tap the  button.
- 3 Rotate your smartphone or press the rotate button  to switch between portrait and landscape display modes.

### Note

- When watching Live View via direct Wi-Fi, map data isn't displayed because your smartphone can't access internet as long as it is connected to dashcam's Wi-Fi.

## ➤ Managing videos


### ☐ Managing videos in BLACKVUE WI-FI

You can manage the recorded videos using the BlackVue app.

#### 📝 Note

- When the microSD card fills up, the newest video files will start to replace the oldest video files (called loop recording) – so you will always have the most recent video files.

### ■ Copy to Internal Memory

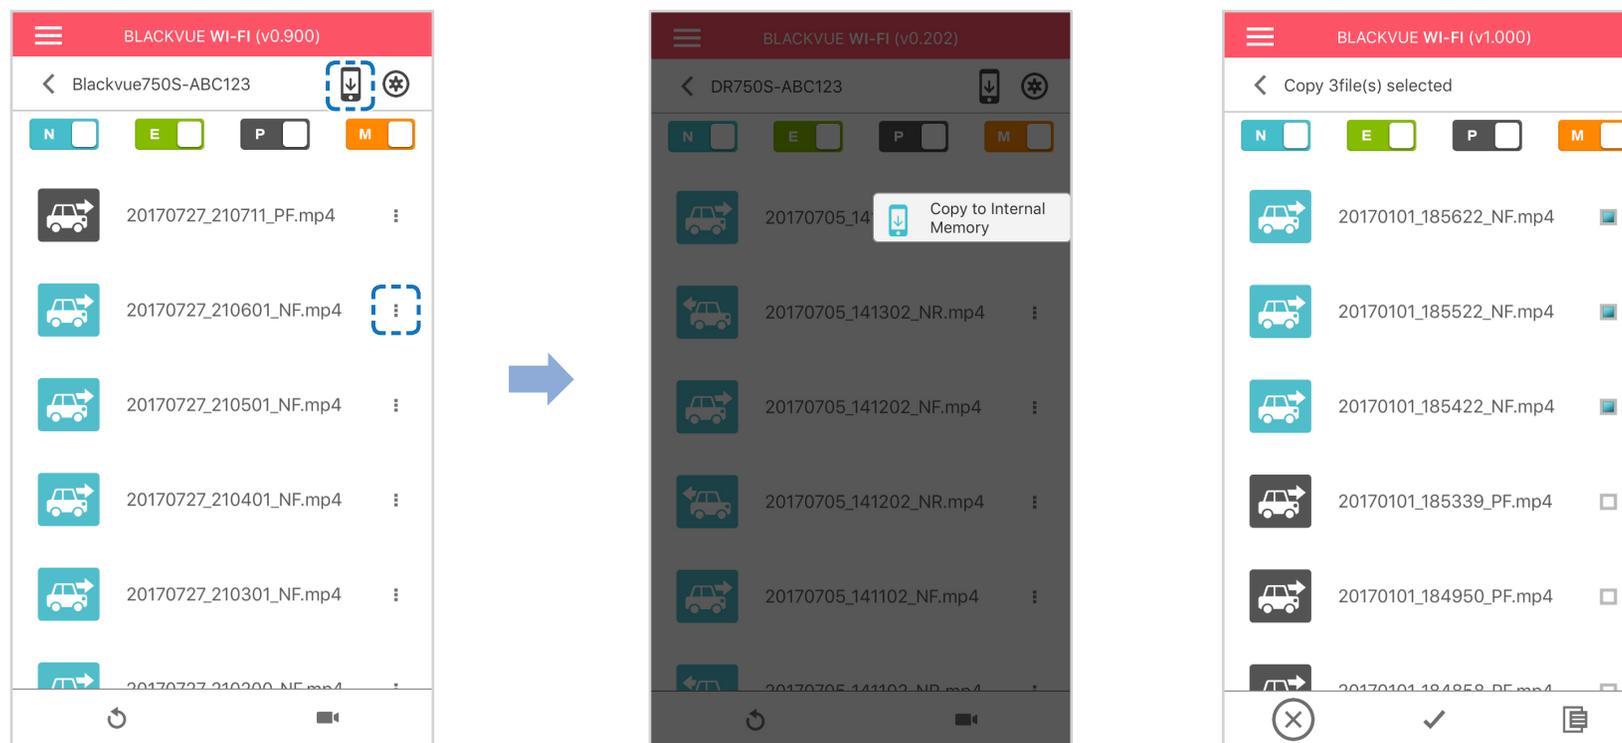


To copy individual files to your smartphone, tap  next to the video you want to copy. Select Copy to Internal Memory.

To copy multiple files to your smartphone in one go tap . Select which files to copy, or tap  to select all files. Tap  to begin copying.

## Managing videos in INTERNAL MEMORY

Open the BlackVue app and select INTERNAL MEMORY.

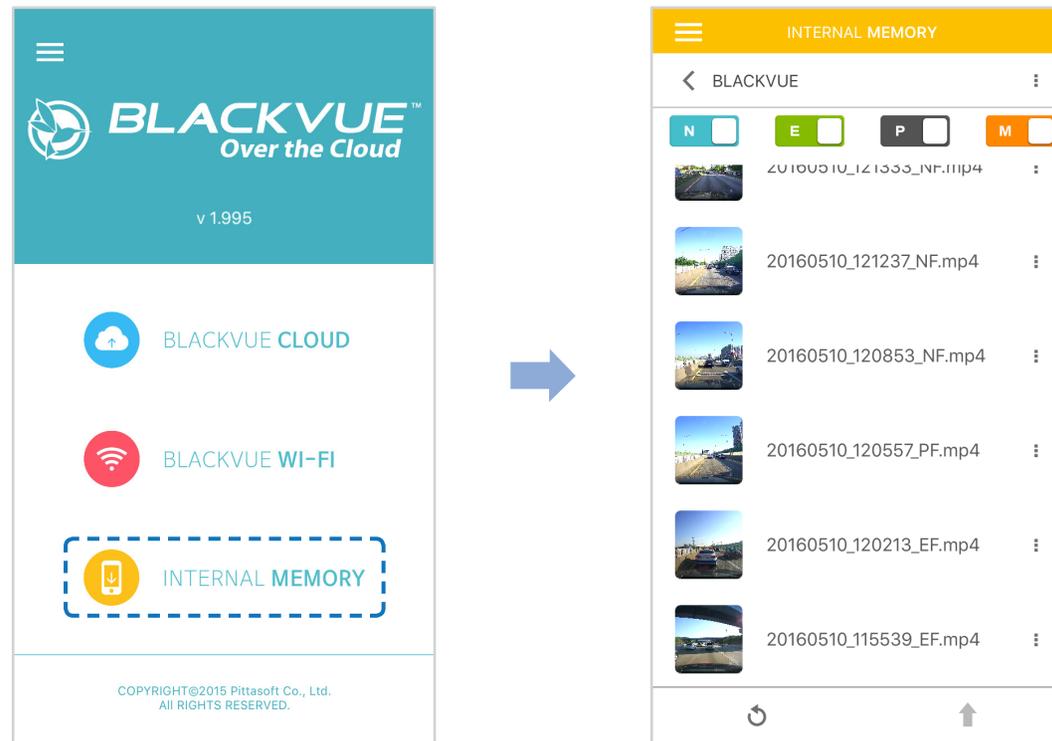


Tap  to see file options. You can delete, copy or move files, change the name of files and share files.

## ■ Deleting videos

To delete multiple files from your smartphone in one go, tap at the top of the screen and select **Delete**. Select which files to delete, or tap ✓ to select all files. Tap  to delete the selected files.

To delete individual files, tap  next to the video you want to delete. Select **Delete**.

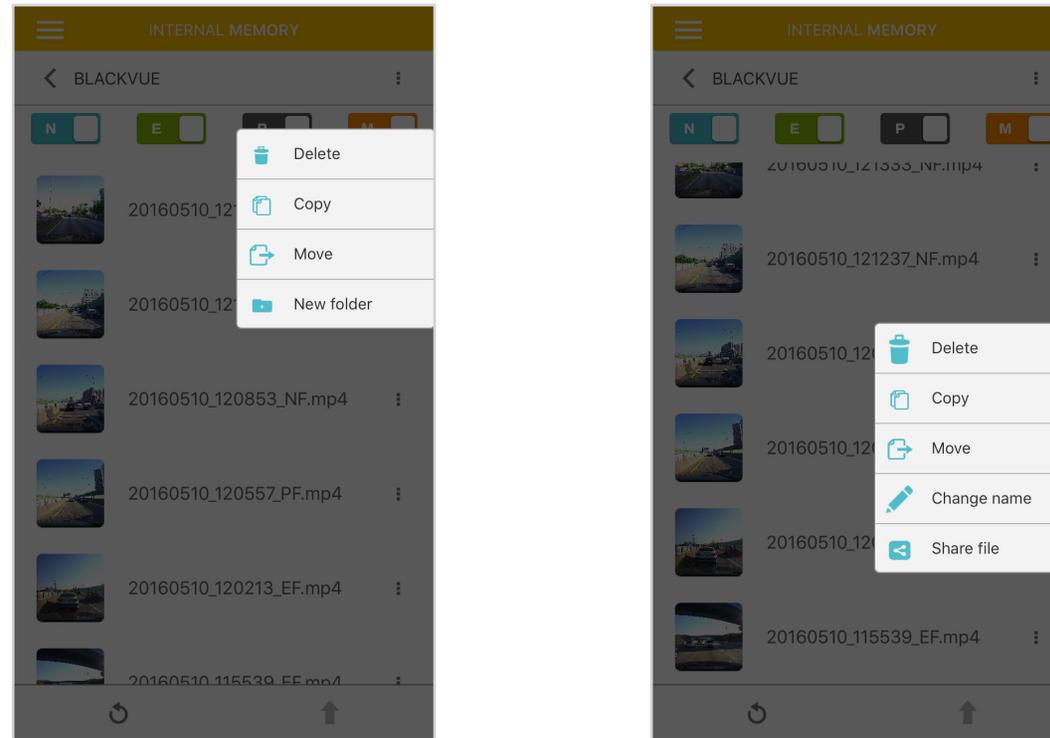

## ■ Creating a new folder

To create a new folder tap at the top of the screen and select **New folder**. Enter a new folder name and press OK.

## ■ Copying and pasting videos

To copy multiple files in one go, tap at the top of the screen and select **Copy**. Select which files to copy, or tap ✓ to select all files. Tap  to copy the selected files. Go to another folder and tap  to paste the selected files there.

To copy individual files, tap  next to the video you want to copy. Select **Copy**. Go to another folder and tap  to paste the file there.

## ■ Moving videos

To move multiple files in one go, tap  at the top of the screen and select **Move**. Select which files to move, or tap  to select all files. Tap  and go to another folder and tap  to move the selected files there.

To move individual files, tap next to the video you want to move. Select **Move**. Go to another folder and tap to move the file there.

## ■ Renaming a video

To rename a video, tap  next to the video you want to rename. Select **Change name**. Enter a new name and tap **OK**.


## ■ Uploading, sharing or emailing a video

Tap  next to the video you want to share. Select **Share file**. Choose the app you want to share with. The available options will depend on what apps you have installed on your smartphone.


## ▶ Playing and managing video files using your computer (Windows/Mac)

### ➤ Removing the microSD card


- 1 Unplug the power cord to turn off the dashcam.
- 2 Open the cover of the microSD card slot.
- 3 To remove the microSD card, gently press on the card to release the lock then carefully pull the card out.  
To insert the microSD card, gently push the card into the slot until it locks into place and close the cover.

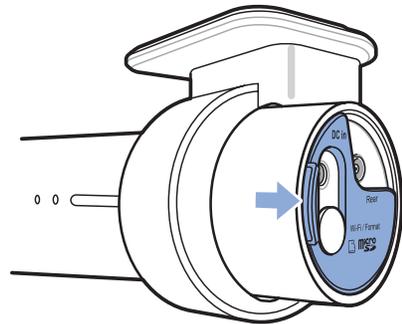

Open side cover

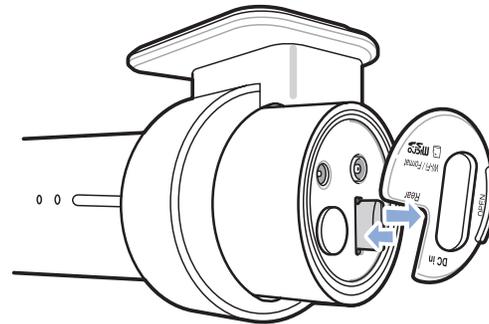


To remove

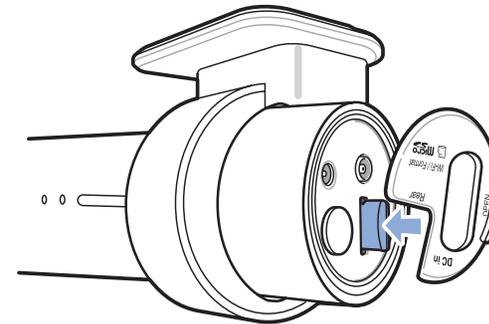

To insert

## ➤ Opening video files in BlackVue Viewer

- 1 Remove the microSD card from the dashcam.
- 2 Insert the card into the microSD card reader and connect it to a computer.

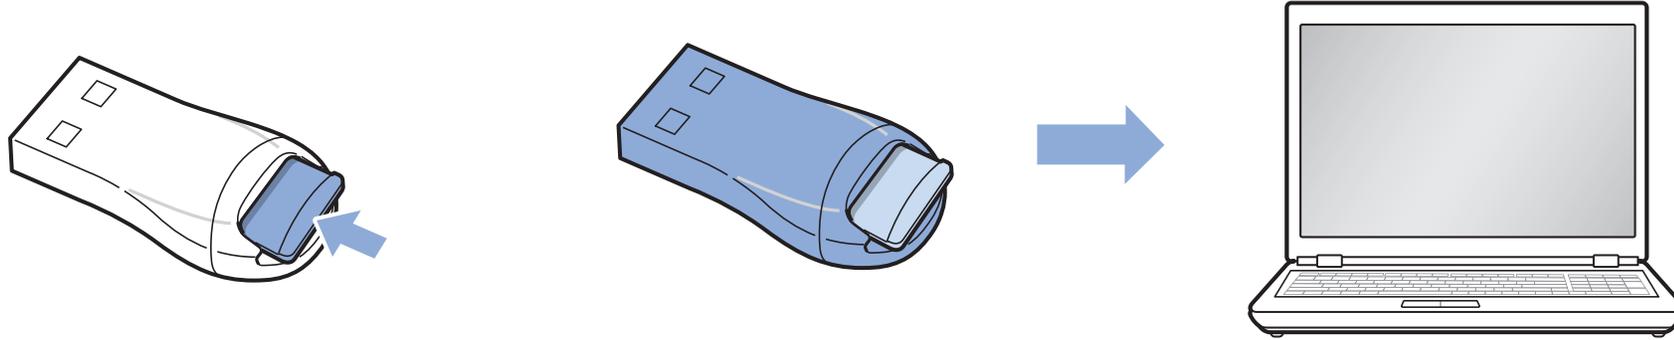


- 3 Download BlackVue Viewer from [www.blackvue.com](http://www.blackvue.com) > **Support** > **Downloads** and install it on your computer.
- 4 Run BlackVue Viewer. To play, select a video and click on the play button or double click the selected video.

# Viewer screen composition


## Windows Viewer

When you launch the program, you will see the SD card Viewer window. To open Cloud Viewer, click the  button.

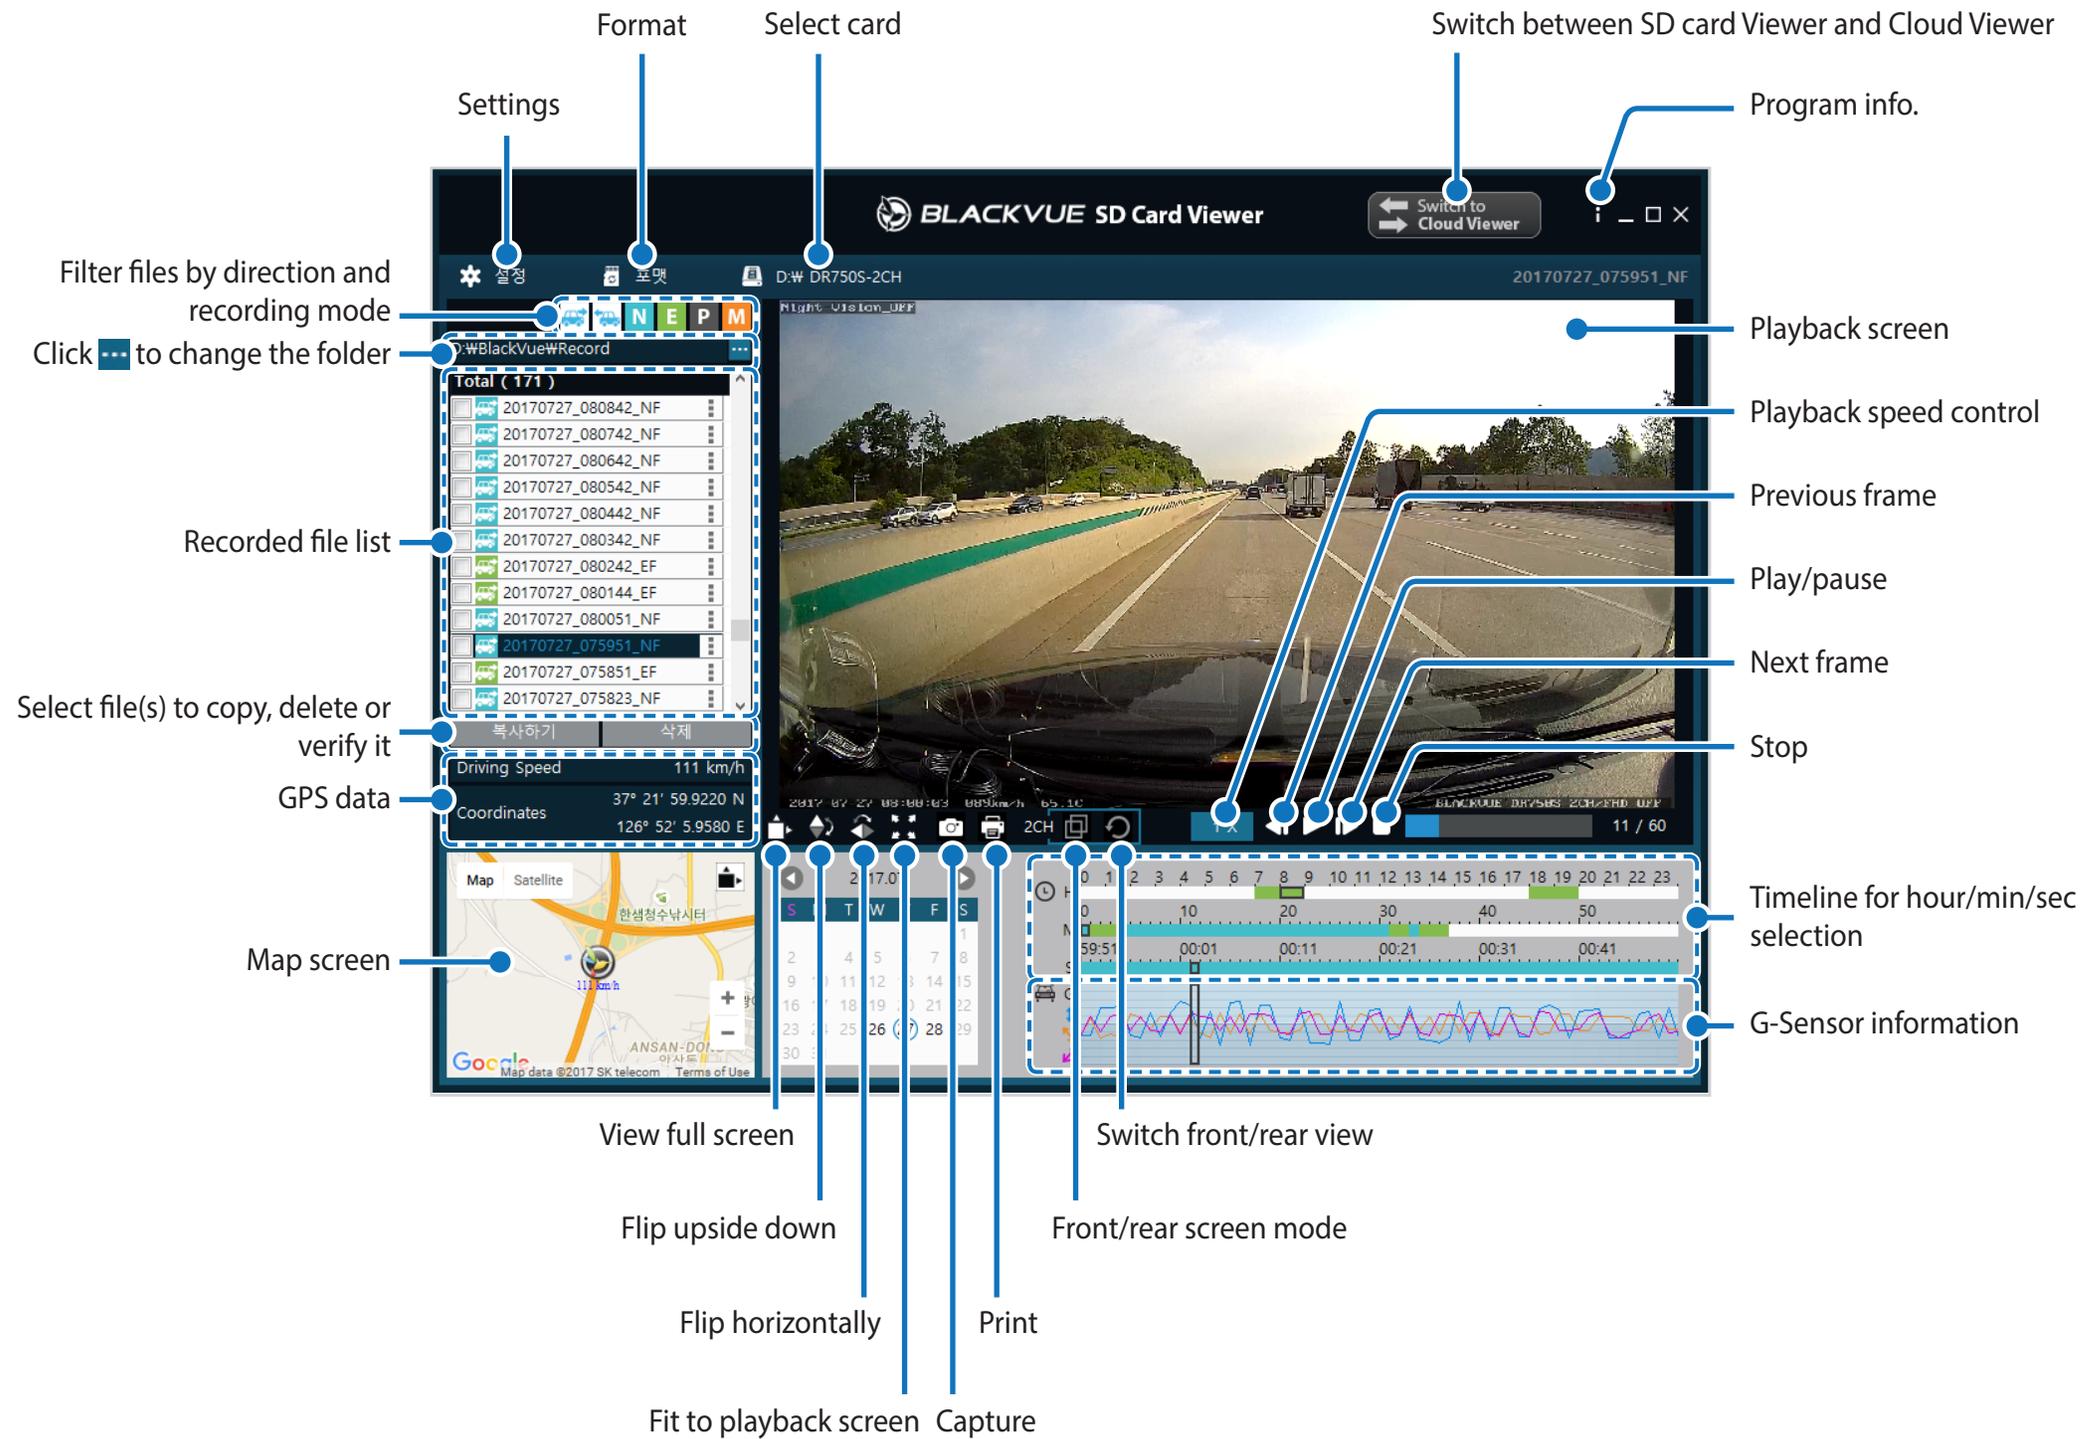

# Mac Viewer

When you launch the program, you will see the SD card Viewer window. To open Cloud Viewer, click the  button.

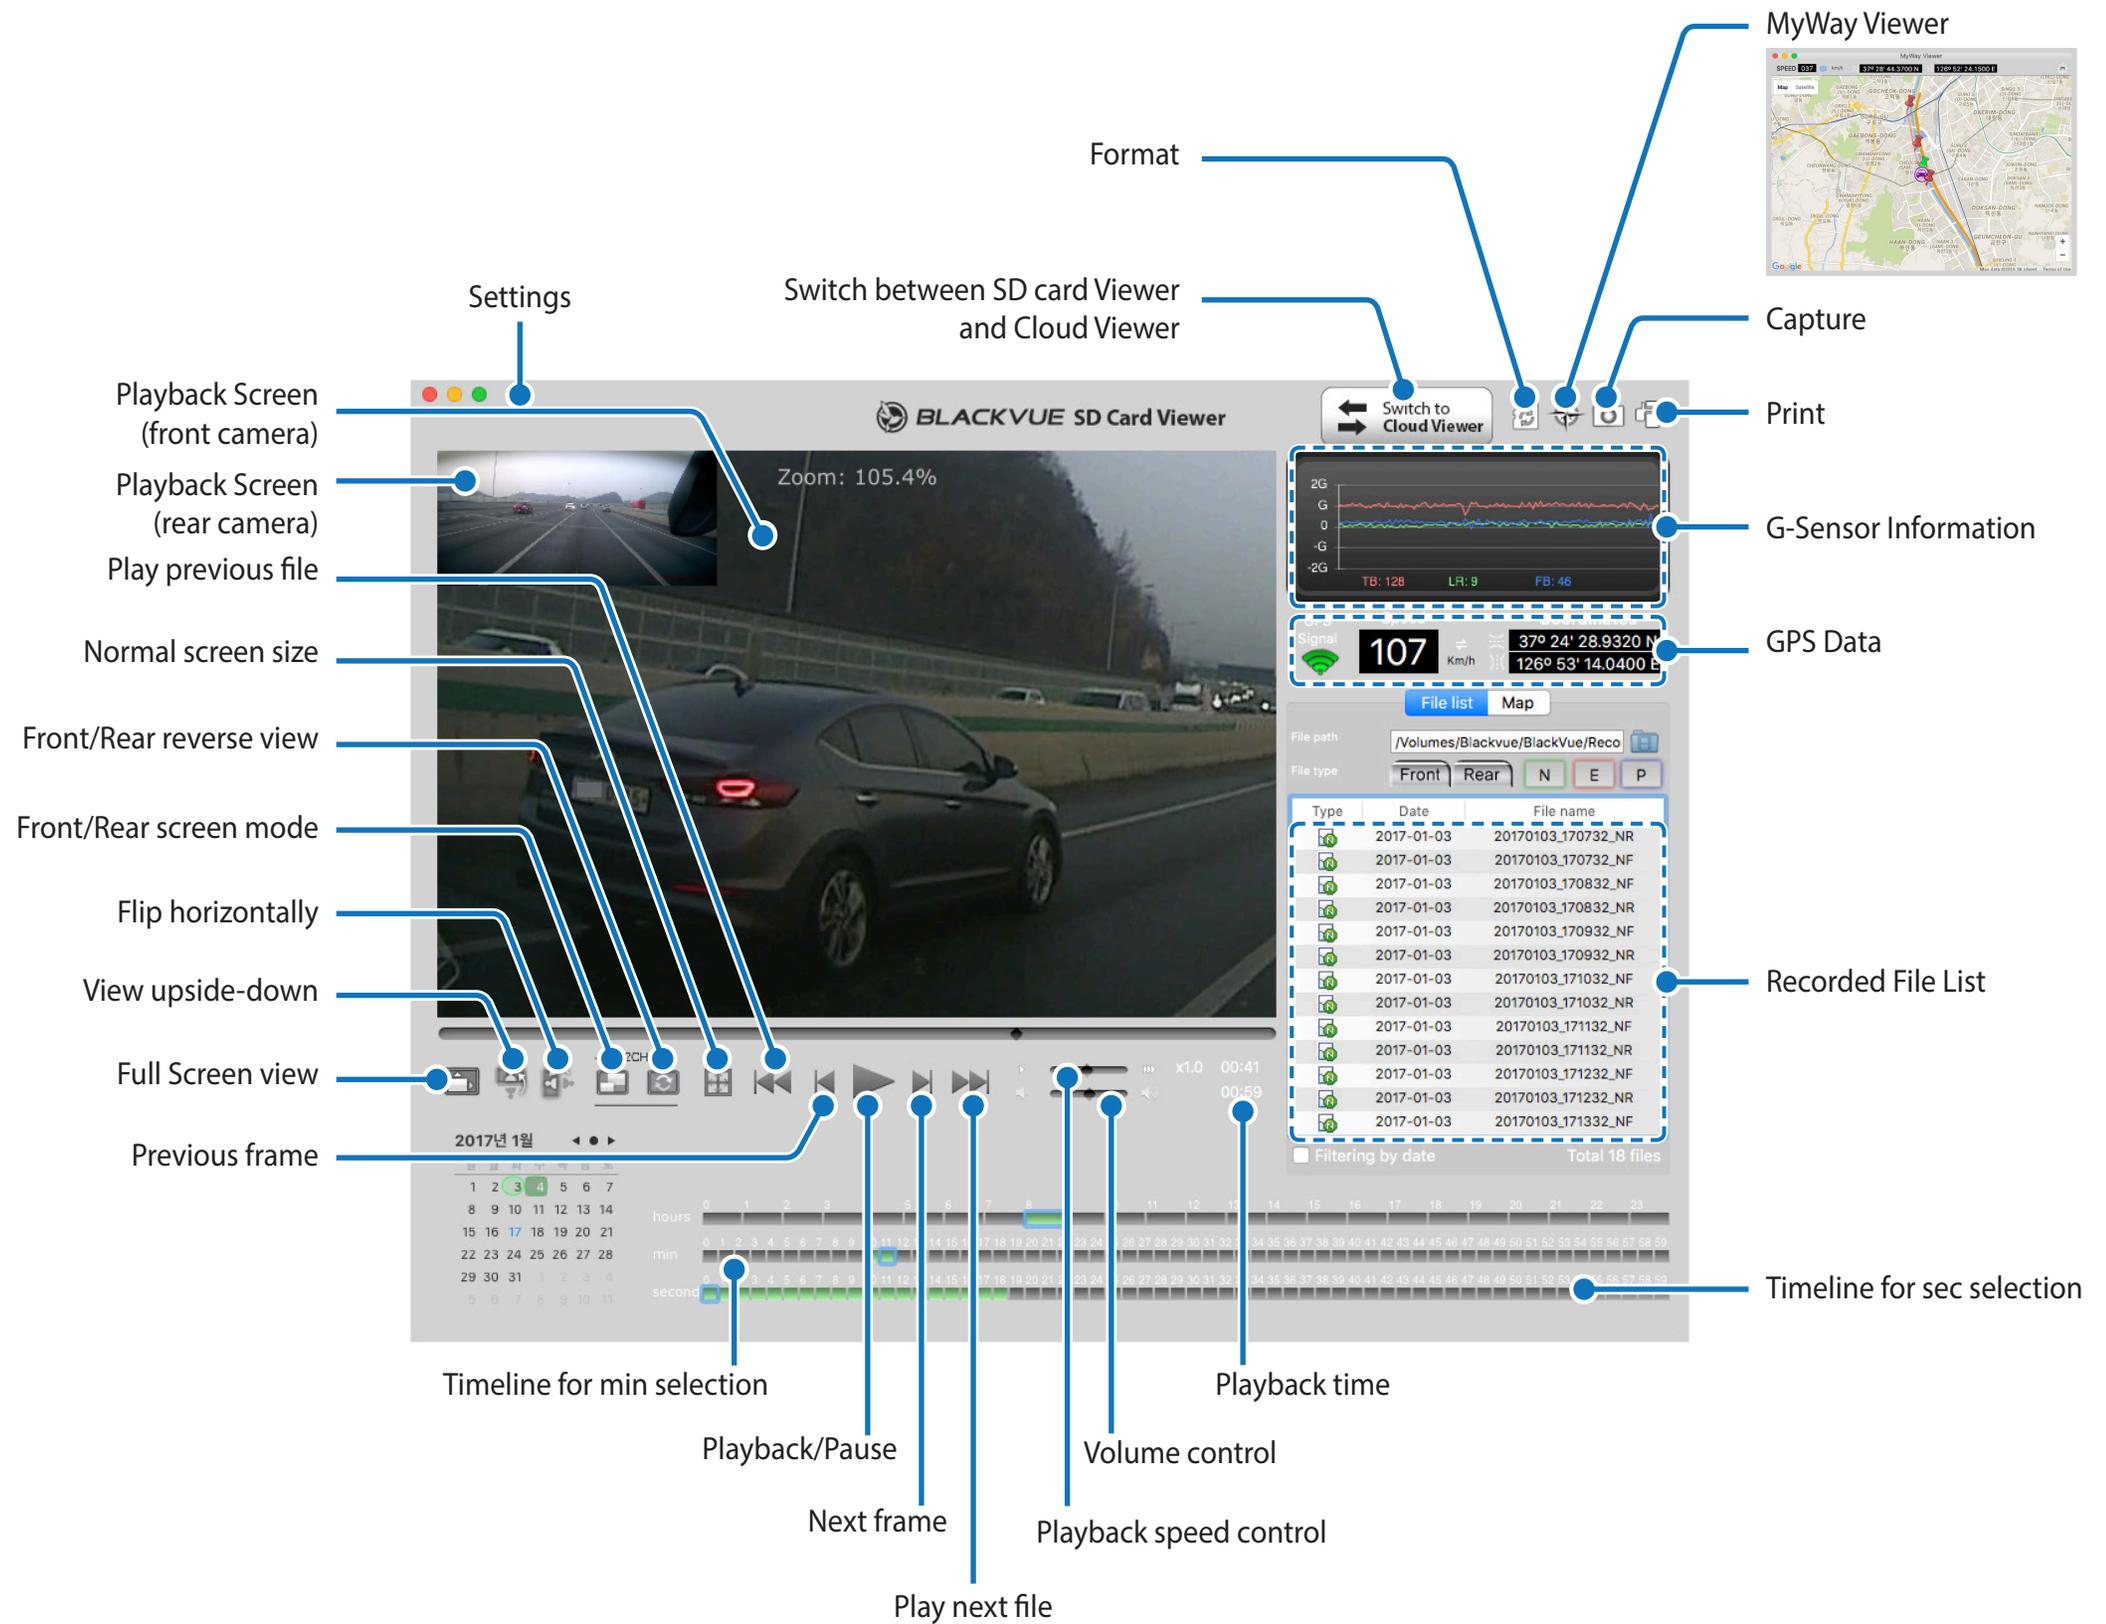

The screenshot shows the main interface of the BLACKVUE SD Card Viewer. The central area displays a video playback window with a zoom level of 105.4%. To the right, there are several informational panels: a G-Sensor Information graph showing acceleration levels (2G, 0, -G, -2G) with TB: 126, LR: 9, and FB: 46; a GPS Data panel showing signal strength (107), speed (Km/h), and coordinates (37° 24' 28.9320 N, 126° 53' 14.0400 E); and a Recorded File List table.

The Recorded File List table contains the following data:

Type	Date	File name
FR	2017-01-03	20170103_170732_NR
FR	2017-01-03	20170103_170732_NF
FR	2017-01-03	20170103_170832_NF
FR	2017-01-03	20170103_170832_NR
FR	2017-01-03	20170103_170932_NF
FR	2017-01-03	20170103_170932_NR
FR	2017-01-03	20170103_171032_NF
FR	2017-01-03	20170103_171032_NR
FR	2017-01-03	20170103_171132_NF
FR	2017-01-03	20170103_171132_NR
FR	2017-01-03	20170103_171232_NF
FR	2017-01-03	20170103_171232_NR
FR	2017-01-03	20170103_171332_NF
FR	2017-01-03	20170103_171332_NR

At the bottom, there is a detailed timeline for selection, showing hours, minutes, and seconds. Playback controls include buttons for Previous frame, Playback/Pause, Next frame, Play next file, Playback speed control, and Volume control. A 'Switch to Cloud Viewer' button is located in the top right corner of the application window.

## **Playing video**

### **Playing back videos**

In BlackVue Viewer double click a video file to play.

BlackVue Viewer shows by default the files in the microSD card. To see files in another folder click the  button and browse to the folder.

### **Identify video files by recording type**

<input type="checkbox"/>		20170728_082747_NF	
<input type="checkbox"/>		20170728_082647_NF	
<input type="checkbox"/>		20170728_082547_NF	
<input type="checkbox"/>		20170728_082447_EF	
<input type="checkbox"/>		20170728_082439_NF	
<input type="checkbox"/>		20170728_082339_EF	
<input type="checkbox"/>		20170728_082309_NF	

- **Recording type:** N: Normal  
E: Event  
P: Parking mode motion detection  
M: Manual
- **Camera direction:** F: Front camera
- **Example file name:** 20170104\_150838\_NF.mp4  
Date & time: 4th January 2017, 03:08:38 PM  
Recording type: Normal  
Camera direction: Front camera

Use the   **N** **E** **P** **M** buttons to filter the video list by recording type. The **E** filter button displays both E (Event) and I (Impact event while parked) recordings.

	<b>Normal</b>	The dashcam records in normal mode by default.
	<b>Event</b>	When the dashcam detects an impact while in normal or parking mode, it switches to event mode and saves an event recording beginning 5 seconds before the event trigger. Exceeding the set speed limit will also trigger an event recording.
	<b>Parking</b>	In parking mode the dashcam continuously buffers video. When motion is detected in the dashcam's field of view, it saves a parking recording beginning 5 seconds before the motion detection.
	<b>Manual</b>	If proximity sensor is set as a manual recording trigger in the firmware settings, touching or waving a finger within 20mm of the sensor will turn on manual recording.


 **Note**

- The dashcam requires a constant power source to record in parking mode. See "**Optional accessories**" on page 88 for more information.
- Depending on the specifications of your computer, the dashcam videos that are recorded at 60fps, may not play smoothly or at higher speeds (2x, 4x, etc.).

## ☐ Checking the displayed time

The time the video was recorded is displayed in the lower left corner of the video in the playback screen. If the displayed time in the recorded videos is incorrect please see **"Time settings" on page 52 or 71.**


## ☐ Using BlackVue Viewer

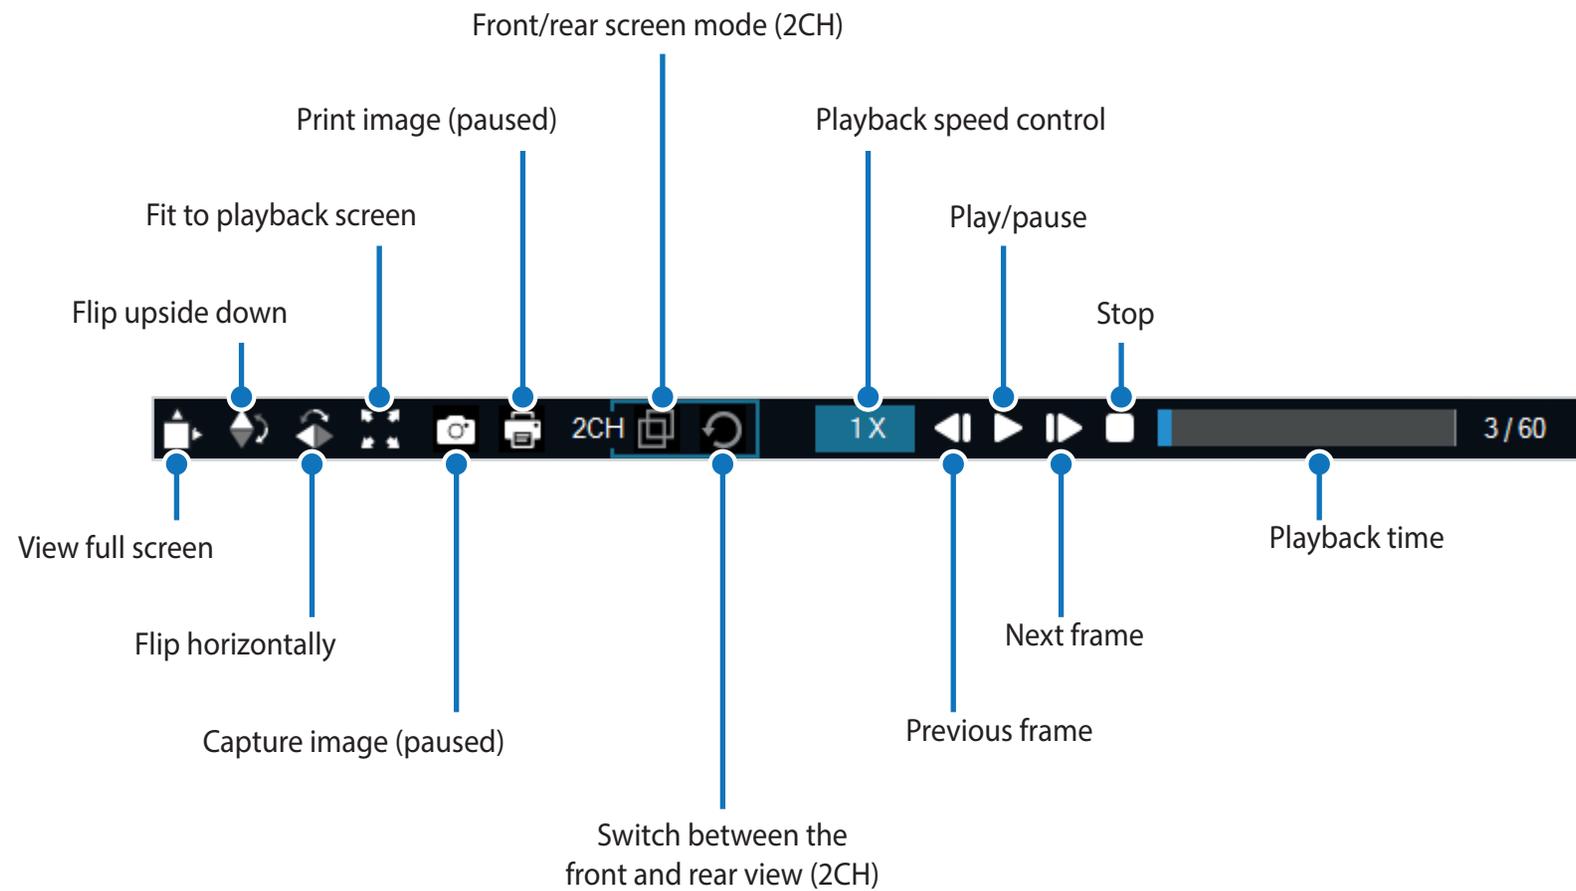

## □ Exploring the timeline and G-Sensor graph

You can explore the timeline for the playback of the recorded videos by date, hour, minute and second using the timeline.


You can check the impact sensitivity (G-Sensor) information in the line graph.

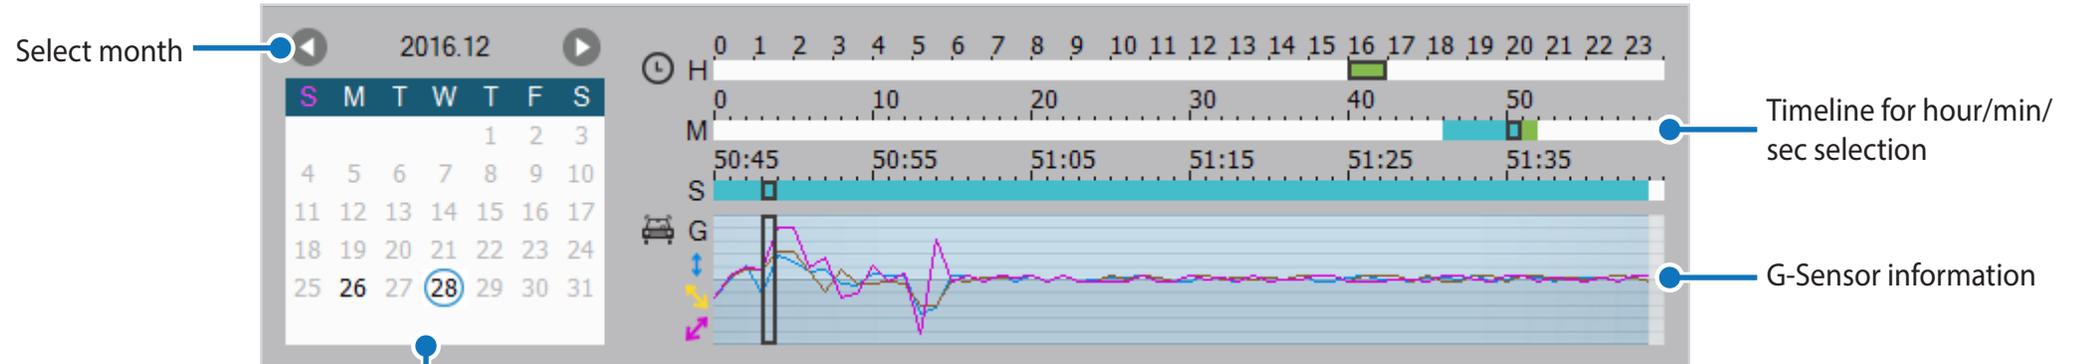


- Dates with recordings are black
- Click a date to filter recordings (date changes to red and circled)

## Zoom options

- Use the mouse scroll wheel zoom. Right clicking will restore the video to the default size.
- You can resize the playback frame or the BlackVue Viewer window by dragging the borders.
- **Full-screen view:** Double click on the video image to enter full-screen view. Double click again or tap ESC to return to the default view.

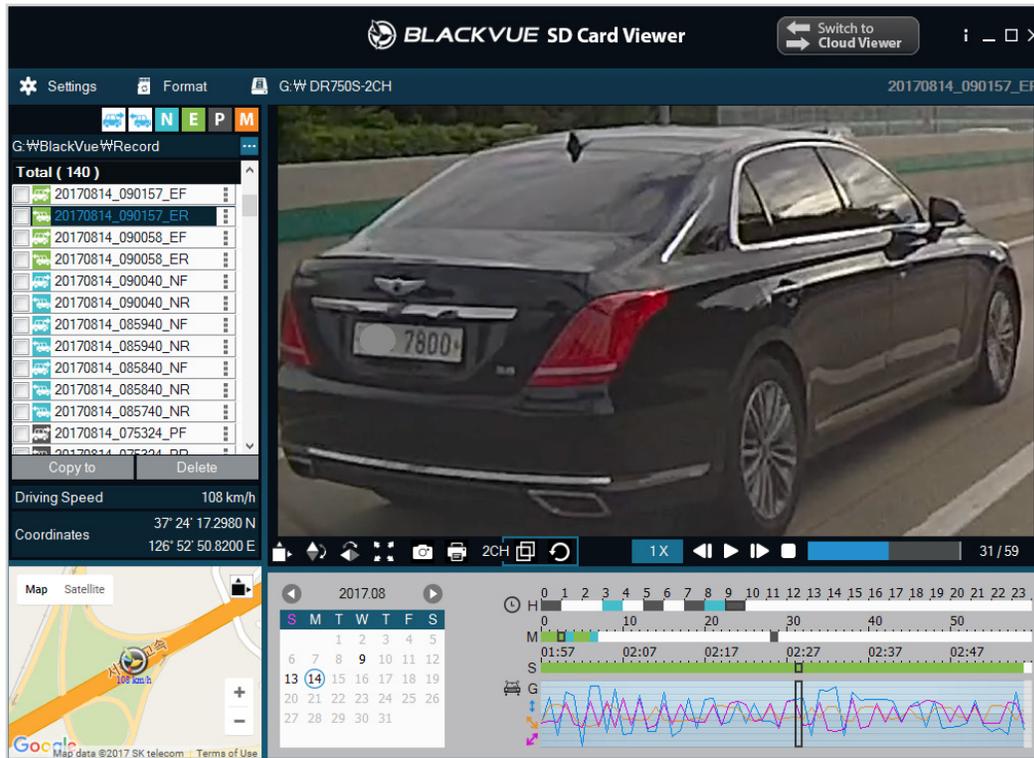

Windows

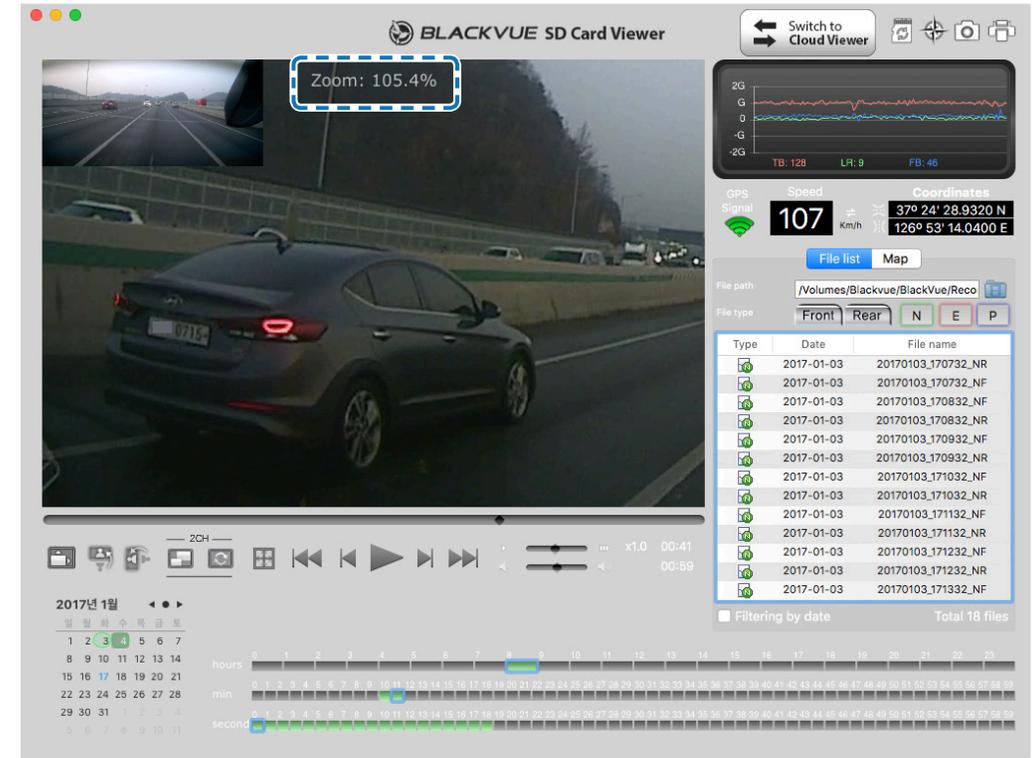


Mac

## ☐ Checking the GPS data

You can check the GPS data of the recorded video in BlackVue Viewer while video is playing back. The driving speed and coordinates are displayed above the map frame.

### 📝 Note

- GPS data is not recorded during parking mode. Map data cannot be displayed for parking mode recordings.

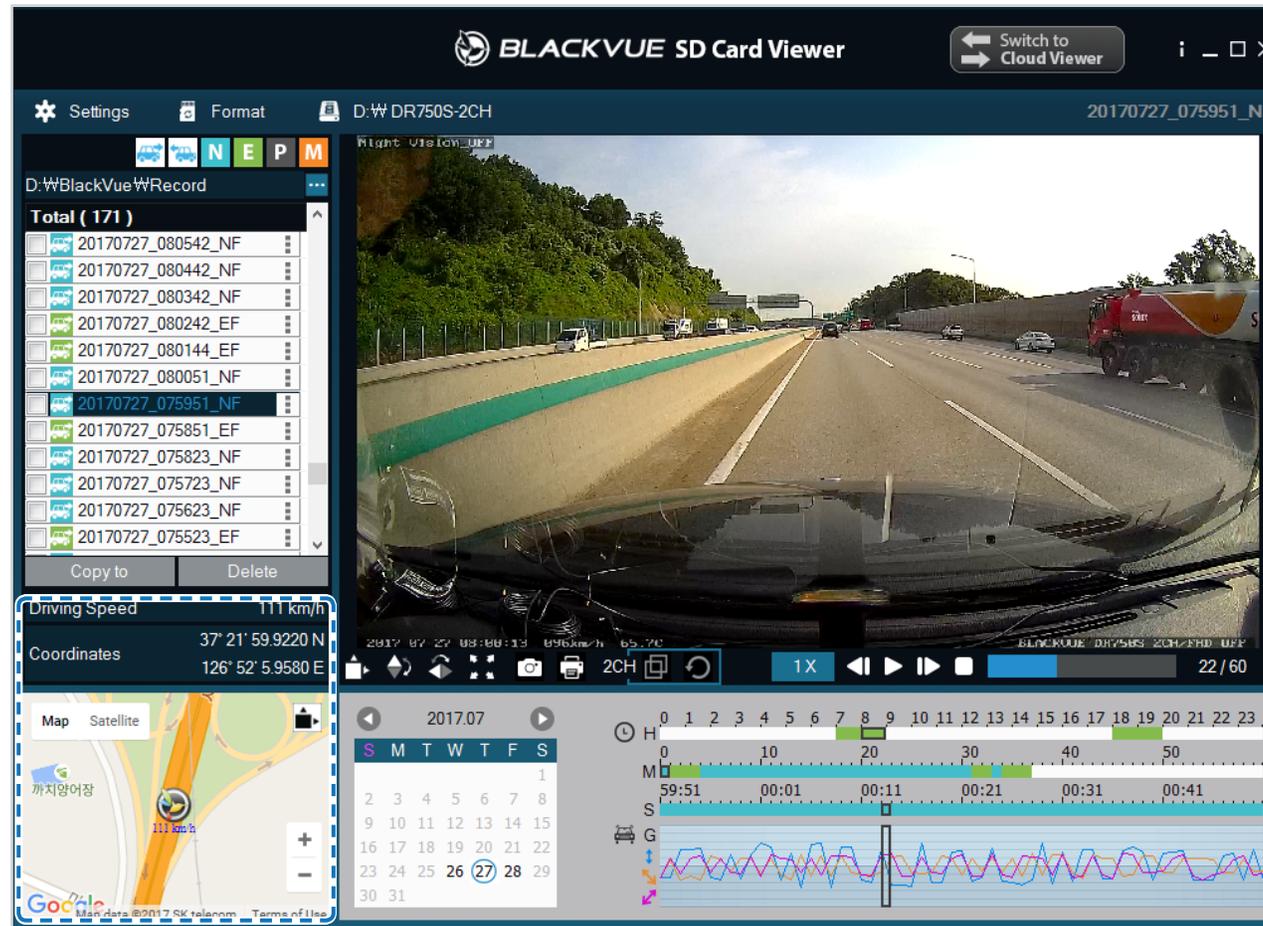

## Managing videos

You can manage the recorded videos through the BlackVue Viewer program. You can also format the microSD card.

### Note

- If the microSD card is full, by default the dashcam will record over the oldest videos first.

### Capturing or printing a still image from video

- 1 Double click a file in the file list to play.
- 2 Click the  pause button to pause the video.
- 3 Select the  capture button to capture the image or the  print button to print directly.


### Deleting videos

#### For Windows users

- 1 Select the video, or videos using the checkboxes, from the recorded video list.
- 2 Click **Delete**.
  - You can also delete individual files by clicking  next to a video in the recorded video list and selecting **Delete**.

■ For Mac users


- 1 Go to \BlackVue\Record\.
- 2 Select the video from the recorded video list.
- 3 Click Move to Trash.

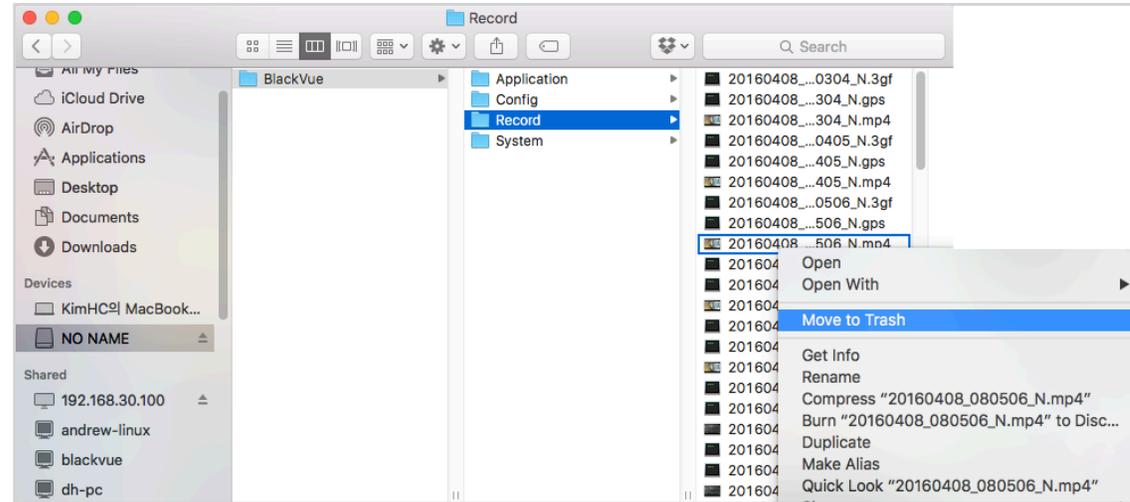

## Exporting videos


### For Windows users

1 Click  next to a video in the recorded video list.

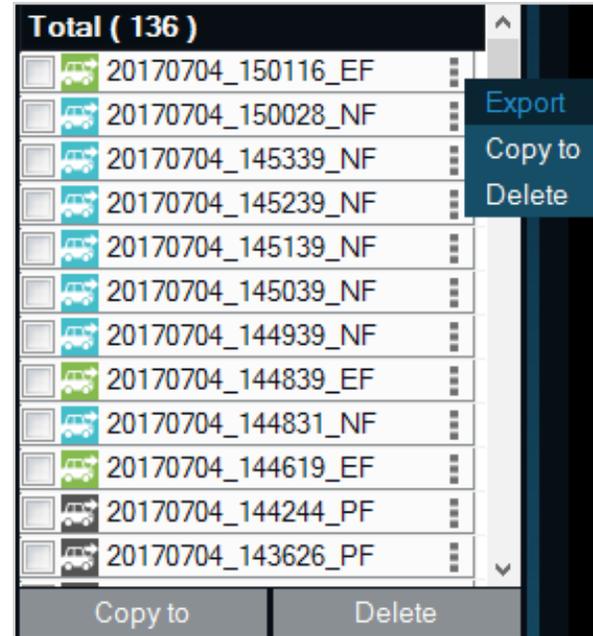

2 Click **Export**.

3 If you want to extract a segment of a file select **Save segment** and edit the start and end second points. To export without audio select **Sound Off**.

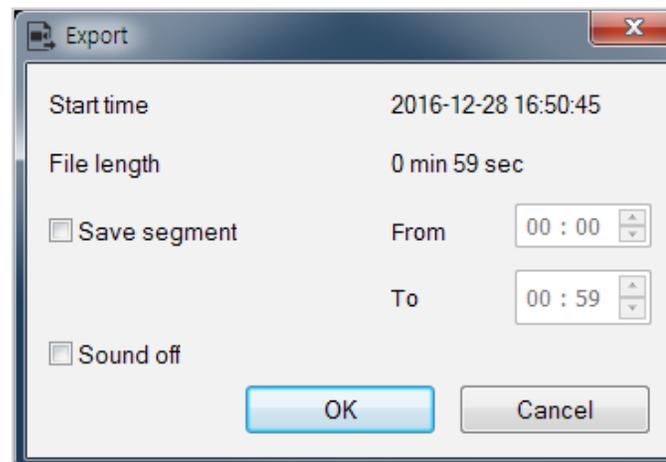

4 Click the **OK** button.

**5** Select the folder in which to save the file and enter the file name.

**6** Click the **Save** button.

## Copying videos

### For Windows users

**1** Click  next to a video in the recorded video list.

**2** Click **Copy to**.


**3** Select the folder in which to copy the file and enter the file name.

**4** Click the **Select folder** button.

- To copy multiple files at once check the boxes next to the file names and press the **Copy to** button
- When copying files the segment adjustment and sound off tools are not available.

■ For Mac users

- 1 Go to \BlackVue\Record\.
- 2 Select the video from the recorded video list.
- 3 Click Copy "*file name*".

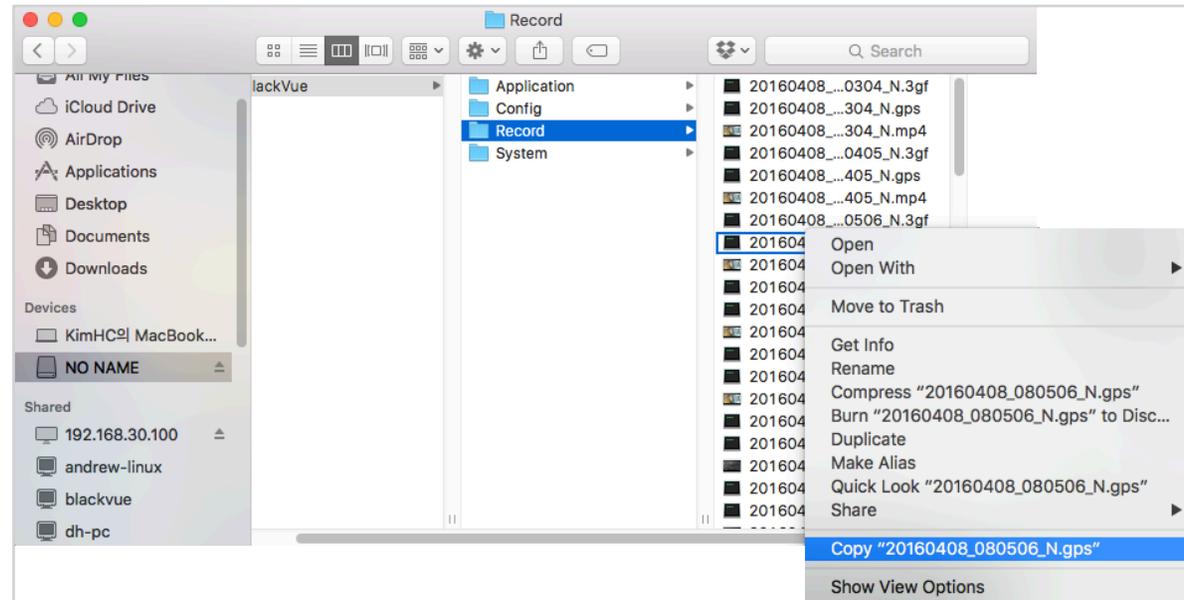

## Tips for optimal performance


### ▶ Formatting the microSD card

#### ⚠ Caution


- Back up necessary video files before formatting the microSD card. If you format the microSD card, all the video files stored in the microSD card will be deleted including the locked event files. Your saved settings will not be affected.

### ➤ Formatting the card in the BlackVue

Press and hold the Wi-Fi button for 5 seconds and once voice instructions start, release the button. Then press and hold again for 5 seconds to format the SD card.

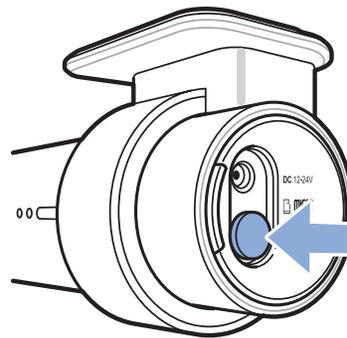


### ➤ Format using BlackVue Viewer (Windows)


- 1 Insert the microSD card into the microSD card reader and connect the reader to your computer.
- 2 Download **BlackVue Viewer (Windows)** from [www.blackvue.com](http://www.blackvue.com) > **Support** > **Downloads** and install it on your computer.
- 3 Launch the **BlackVue Viewer** that is installed on your computer.
- 4 Click the  **Format** button, select the card drive and click OK.

## ➤ Format using BlackVue Viewer (macOS)

- 1 Insert the microSD card into the microSD card reader and connect the reader to your computer.
- 2 Download **BlackVue Viewer (Mac)** from [www.blackvue.com](http://www.blackvue.com) > **Support** > **Downloads** and install it on your computer.
- 3 Launch the **BlackVue Viewer** that is installed on your computer.
- 4 Click the  Format button and select the microSD card from the list of drives in the left frame.

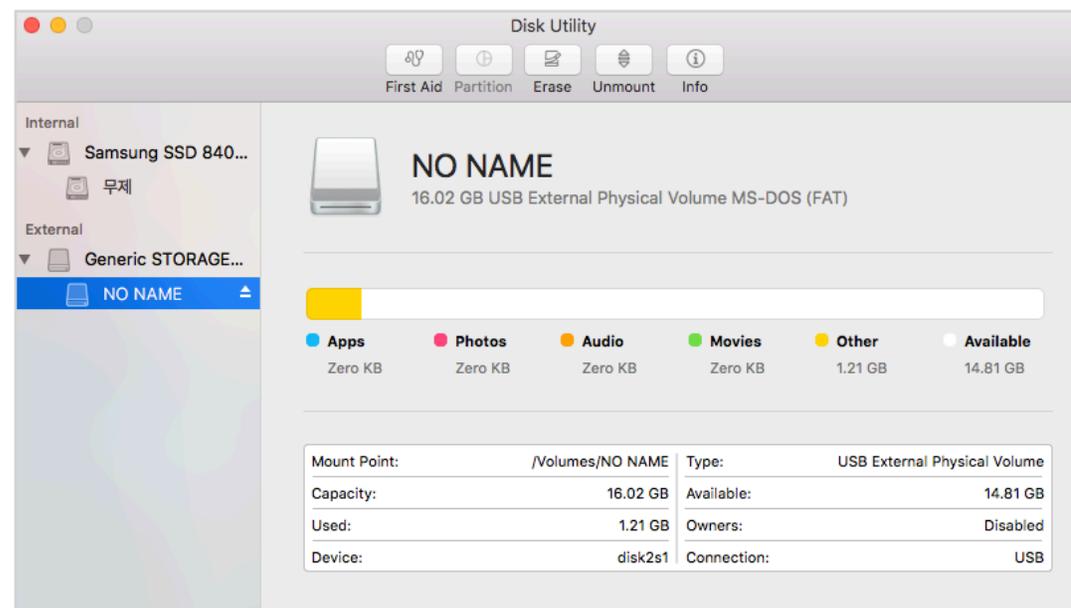

5 After selecting your microSD card select the Erase tab in the main window.

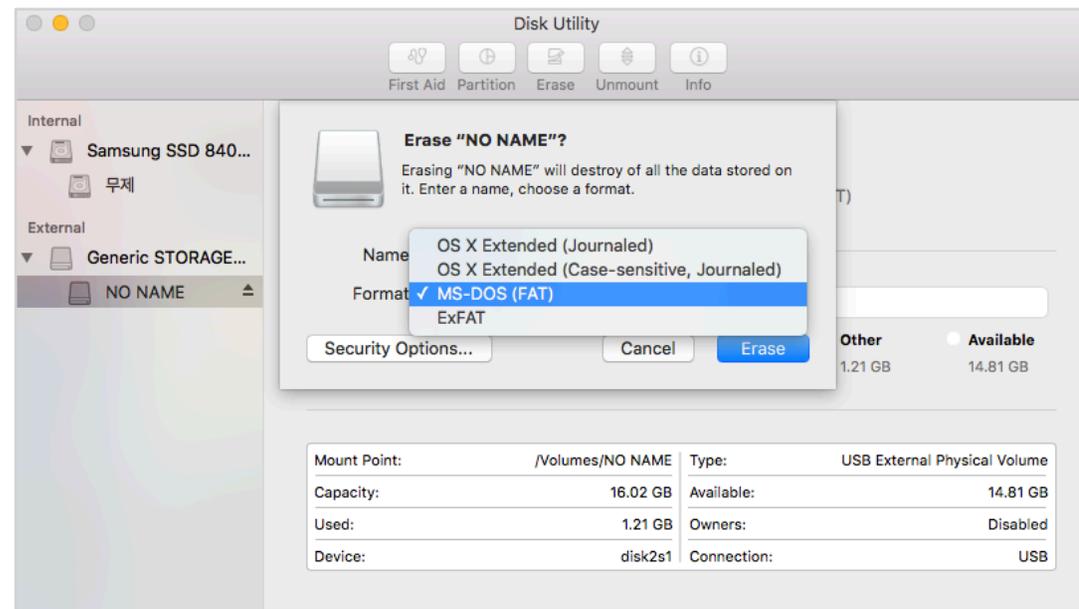

6 Select "MS-DOS (FAT)" from the Volume Format drop-down menu and click Erase.

#### Note

- Formatting the microSD card once a month is recommended.
- Format the microSD card if the recorded video quality appears to be poor.
- Only use official BlackVue microSD cards. Other cards may have compatibility issues. PittaSoft Co., Ltd. will not be held responsible for any problems caused by using another manufacturer's microSD card.
- For Windows users: To format the microSD card directly from "My Computer", right-click the microSD card drive and select Format. Select File system as FAT32 and Allocation unit size as 64KB then click Start. If FAT32 is not available or can't be selected, please format the microSD card using BlackVue Viewer.

## **Upgrading the firmware**

Regularly upgrade the firmware for performance improvements and updated features. Firmware updates will be made available for download at [www.blackvue.com](http://www.blackvue.com) > **Support** > **Downloads**.

Your saved settings are not affected by firmware upgrade.

## **Upgrading the firmware using an iOS or Android device (Firmware Over The Air)**

[Click here for a step-by-step video tutorial](#), or go to the main menu and select **Help** > **Video tutorials**.

Makes sure your smartphone has a stable internet connection.

- 1 Open the BlackVue app
- 2 Tap  and select **Firmware download**.
- 3 Select your dashcam model and the firmware language and tap **OK**.


### **Note**

- Please select the firmware language currently installed in your dashcam. Once upgrade is completed, you can change the firmware language from dashcam settings as described on page **67** or **70**.

- 4 Check the firmware version and release notes and tap **OK** to start downloading.
- 5 After the download completes tap **OK** to be taken back to the home screen.

Make sure your BlackVue dashcam is on and nearby.

6 Go to your smartphone's **Settings** then select **Wi-Fi**, and make sure Wi-Fi is turned on.

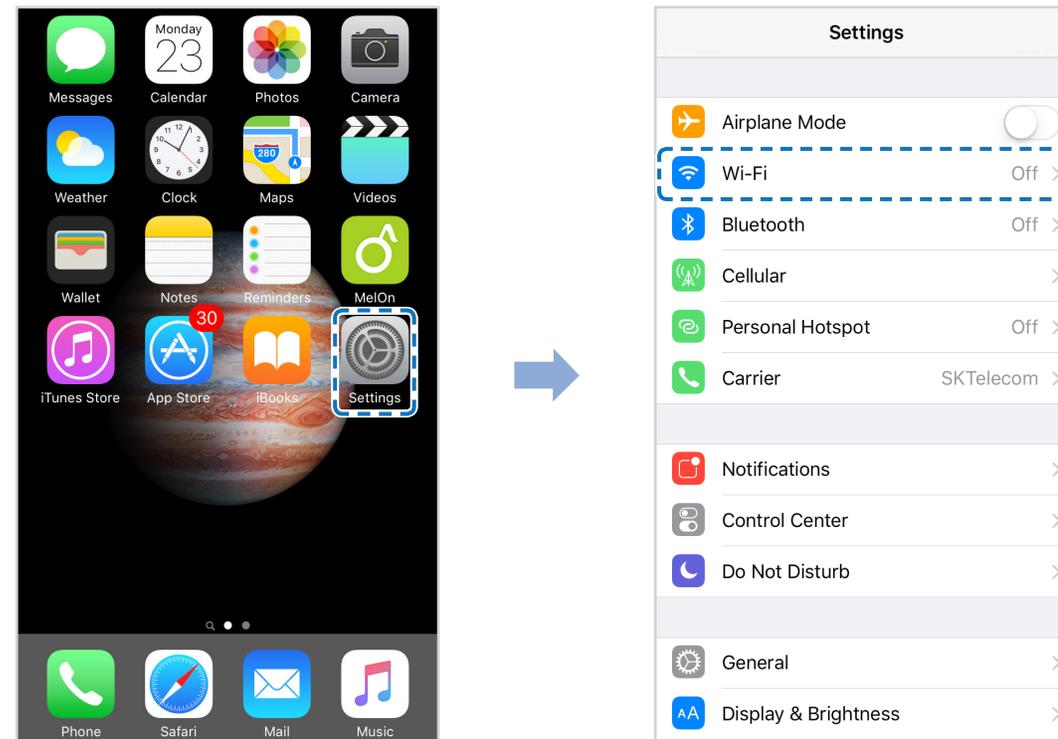

7 Choose your BlackVue dashcam from the network list. The dashcam's default SSID begins with its model number (e.g. BlackVue750S-\*\*\*\*\*).

8 Enter the password and tap join.

\* The default Wi-Fi SSID and password is labeled on the dashcam. To find them, unplug the cables and remove the dashcam from its mount.

9 Open the BlackVue app. Select **BLACKVUE WI-FI** >  > **Firmware upgrade**.




10 Tap **OK** to apply the firmware upgrade.

11 The dashcam's firmware will be upgraded – this may take a few minutes. The dashcam needs to reboot to complete the firmware upgrade.


## ➤ Upgrading the firmware using a computer (Windows or Mac)

Keep your BlackVue dashcam updated by upgrading the firmware to the latest version. Visit the BlackVue website ([www.blackvue.com](http://www.blackvue.com)) to check for any new firmware releases for your BlackVue dashcam model.

- 1 Insert the microSD card into the microSD card reader.
- 2 Connect the microSD card reader to a computer.
- 3 Launch BlackVue Viewer and click on the About  button.
  - For Mac users, click  **BlackVue Viewer** and select About BlackVue from the menu.
- 4 Check the current firmware version of your BlackVue dashcam and proceed only if your version is not the latest one.

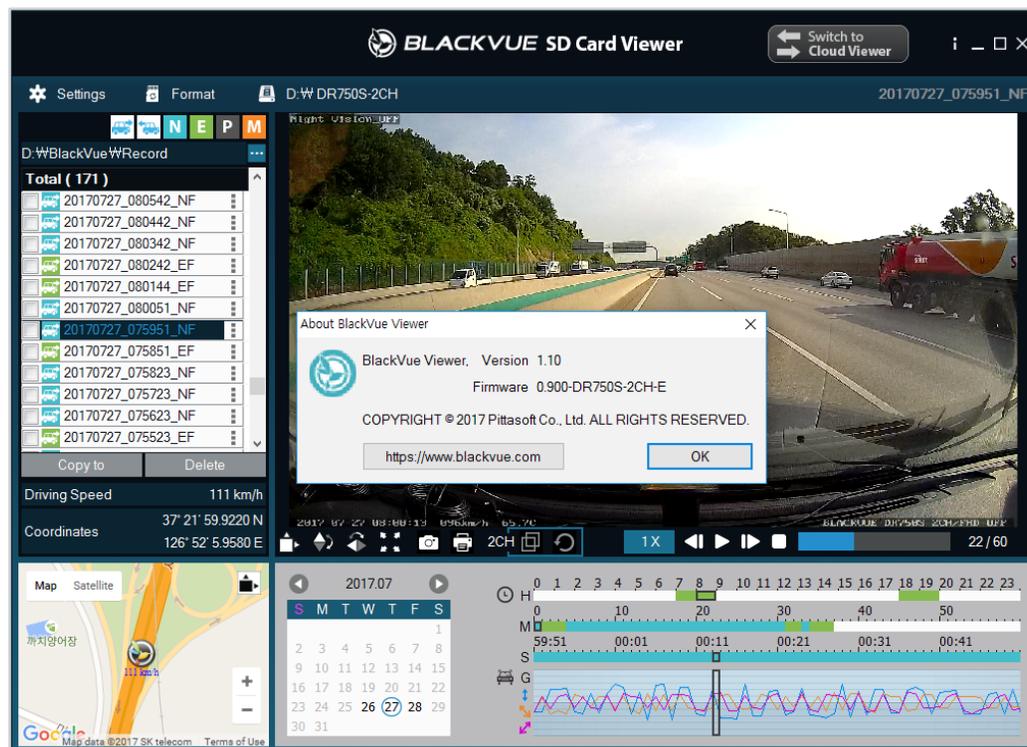


Windows

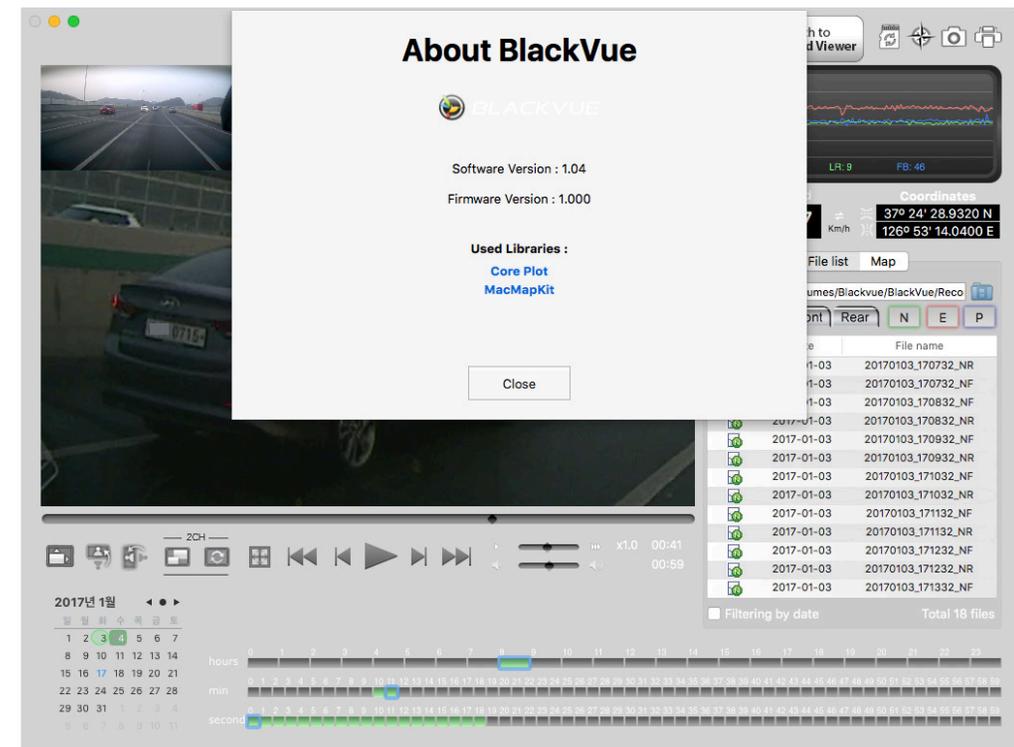

Mac

- 5 Format the microSD card. See **"Formatting the microSD card"** on page 42.

- 6 Go to the BlackVue website ([www.blackvue.com](http://www.blackvue.com) > Support > Download) and download the latest firmware for your BlackVue dashcam model in zip format.
- 7 Unzip the downloaded file and copy the BlackVue folder to the microSD card.

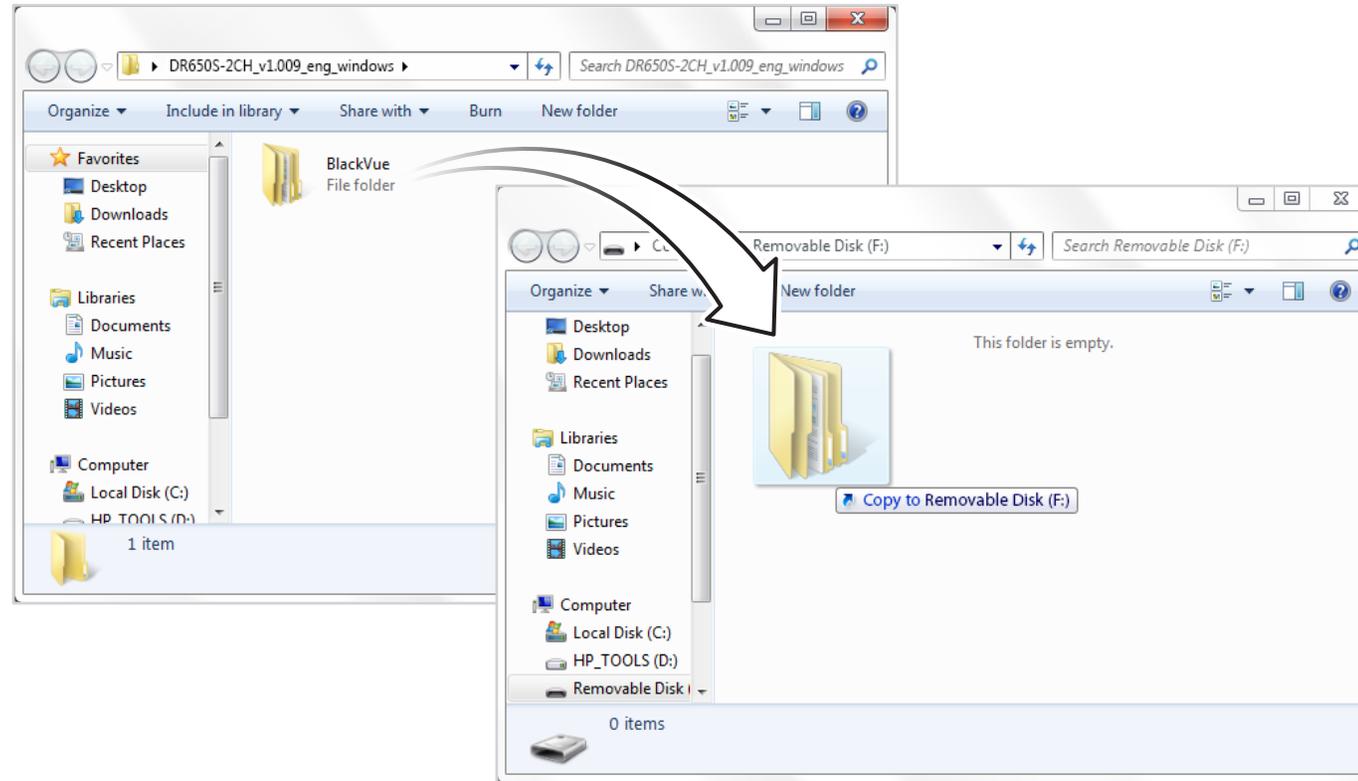


- 8 Insert the microSD card into the dashcam and connect the power to initiate the firmware upgrade. Make sure the power remains on until the upgrade is completed. Any power interruption may prevent the firmware upgrade from completing, resulting in malfunction.

#### Note

- Do not insert or remove the microSD card when the dashcam is turned on. Doing so may damage the data and cause a malfunction of the microSD card.
- Your saved settings are not affected by firmware upgrade.
- The firmware is upgraded to the previously saved language. If you want to change it, please refer to page **67** or **70**.

## Changing settings

### ▶ Changing settings using your smartphone (Android/iOS)

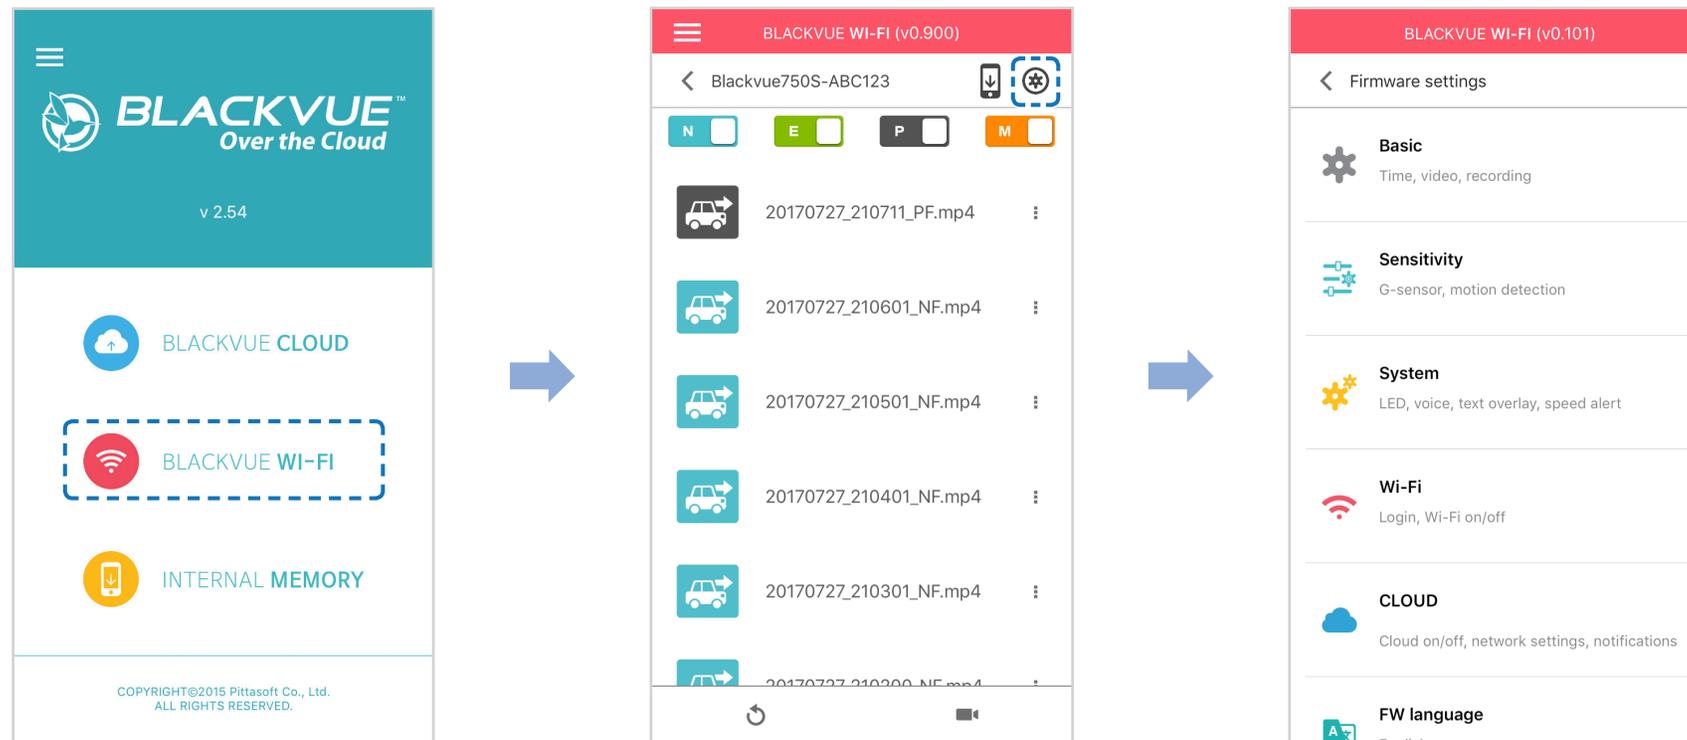



“Pair” your smartphone with the BlackVue dashcam via direct Wi-Fi (for details see **"Opening video files" on page 16**).

- 1 Go to your smartphone's **Settings** > **Wi-Fi** and connect to your dashcam.
- 2 Open the BlackVue app. Select **BLACKVUE WI-FI** >  to access the Firmware settings menu.
- 3 After making any changes, go back to the Firmware settings menu, tap  and tap **Save and close**.


#### **Caution**

- Please backup necessary recordings before changing **time, video resolution, image quality** or **video segment length** settings. If any of the aforementioned settings are changed and saved, the dashcam will format the microSD card and delete all recordings stored on the card including locked event files in order to ensure optimal performance.

# Basic settings

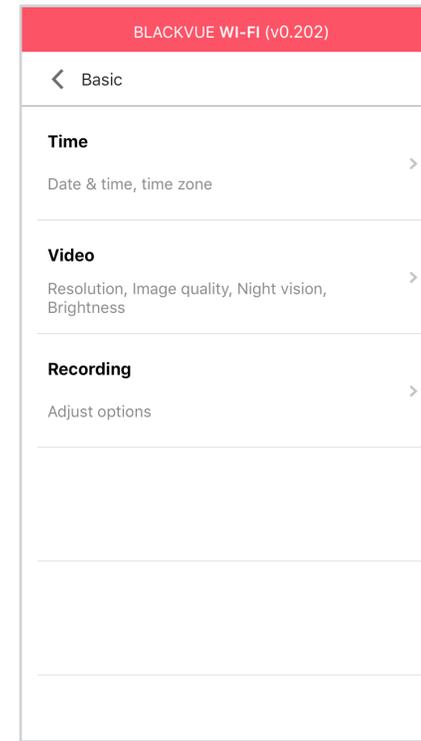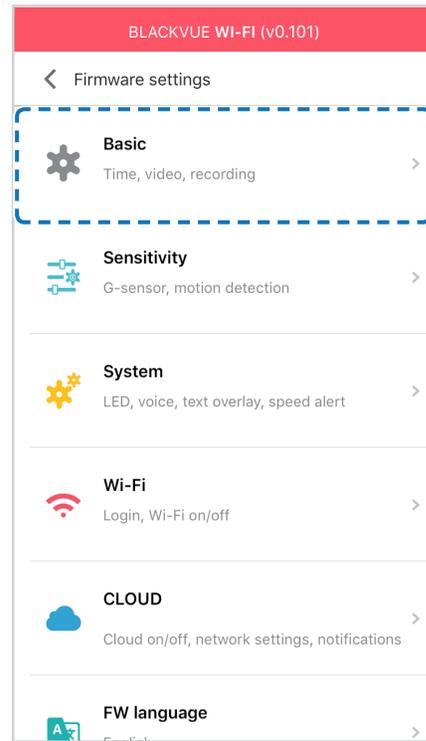

## Time settings

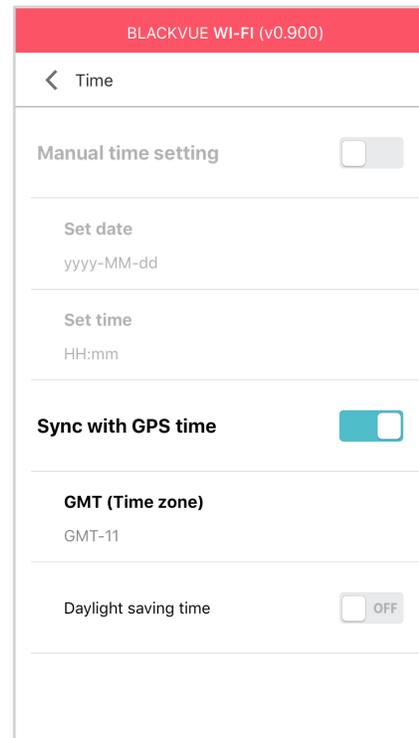

Select your time zone to auto-sync with GPS time or you can set the time and date manually after enabling **Manual time setting**.

 **Note**

- The factory setting is GMT -11.

Some examples of GMT time offsets are:


- GMT-7: Los Angeles
- GMT-4: New York
- GMT+0: London
- GMT+1: Paris
- GMT+3: Moscow
- GMT+8: Singapore
- GMT+9: Seoul
- GMT+10: Sydney

If you are unsure of your GMT offset please look up your city on <https://greenwichmeantime.com/>

\*Selecting **Daylight saving time** will advance the clock by one hour.

- When setting the time manually, please set to the expected time you will use the BlackVue ( not the present time).

## Video settings

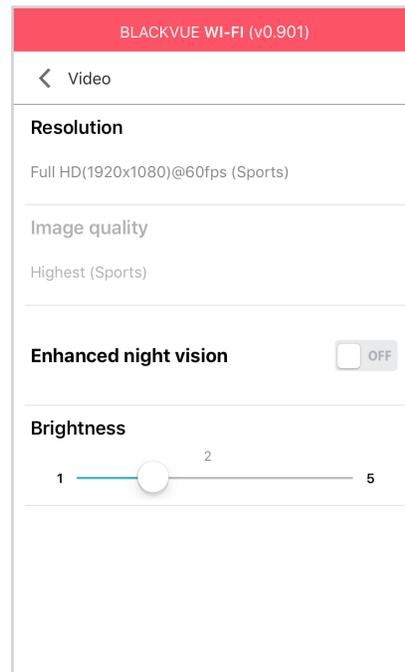

### Resolution

Select the resolution and frame rate. For example, "Full HD@30" means the dashcam records Full HD video at 30 frames per second.

#### Note

- At "Full HD@60" resolution , the image quality is automatically set to Highest and Video segment length to 1 min. These settings can not be changed.
- Frame rate may vary during Wi-Fi streaming.

### Image quality

You can adjust the recording image quality (bit rate). Choose between:

- Highest (12 Mbit/s)
- High (10 Mbit/s)
- Normal (8 Mbit/s)

These are the maximum bit rates when the resolution is set to "Full HD@30". If you lower the resolution and frame rate setting, the actual bit

rates will be lower.

Increasing the image quality will increase the size of the video files. Loading and copying time will increase accordingly.



#### **Enhanced night vision**

The dashcam has intrinsic night vision feature. If you want to enhance it, enable Enhanced night vision.

#### **Brightness**

You can adjust the recording brightness level of the dashcam.

## Recording settings

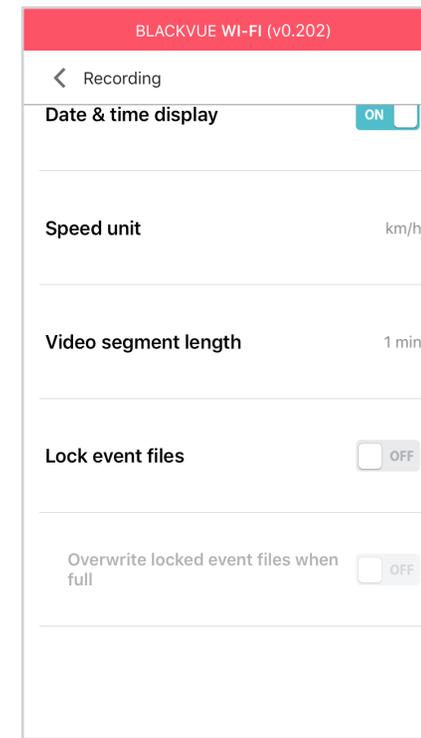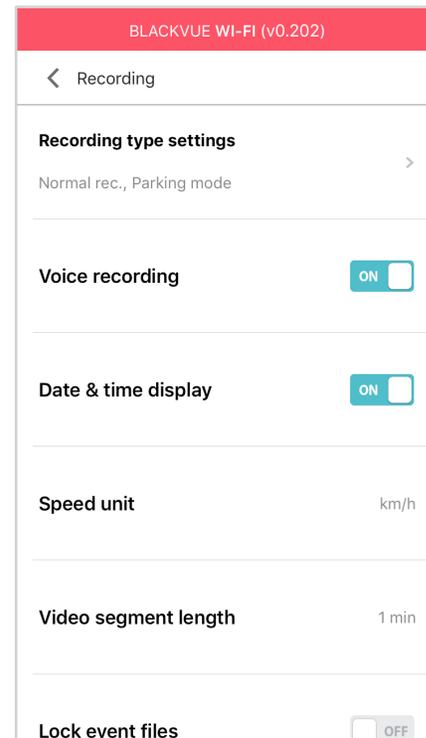

### Recording type settings

#### **Normal recording**

When turned off the dashcam does not record in normal mode.

#### **Automatic parking mode**

If enabled, the dashcam switches from normal mode to parking mode when the vehicle is stationary for 5 minutes.

### Voice recording

When turned off the dashcam does not record audio.

■ **Date & time display**

Turn on/off the date and time display on videos.

■ **Speed unit**

Select km/h, MPH, or turn off.

■ **Video segment length**

Choose between 1, 2 or 3 minute video segment lengths.



■ **Lock event files**

Turning on this option will lock the following recording types and stop them from being overwritten by newer recordings:



- Impact event recordings during normal and parking mode (E); and
- Manual recordings (M).

A maximum of 50 files can be locked. Once this limit is reached, to lock new recordings please review locked files on the microSD card and free up space, or enable 'Overwrite locked event files when full' to allow the oldest locked files to be overwritten.

# ➤ Sensitivity settings

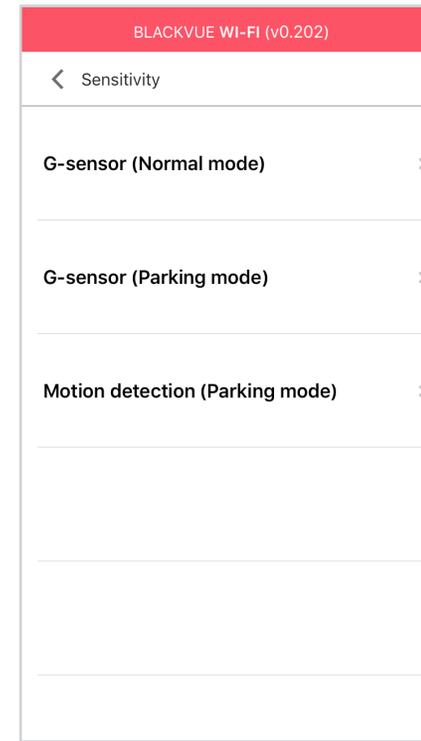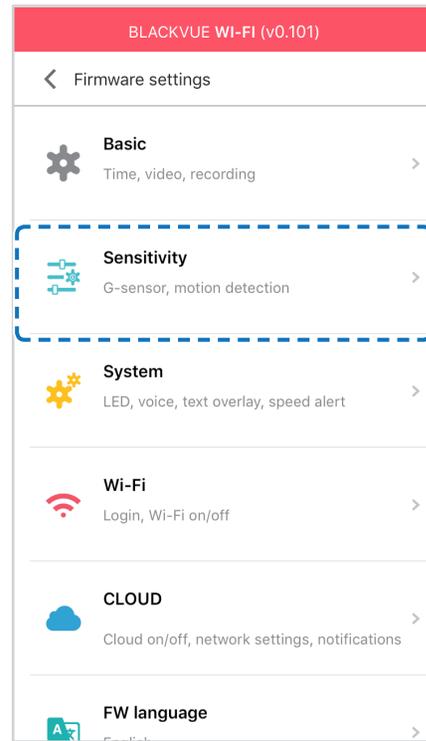


## G-Sensor (Normal mode) / G-Sensor (Parking mode)

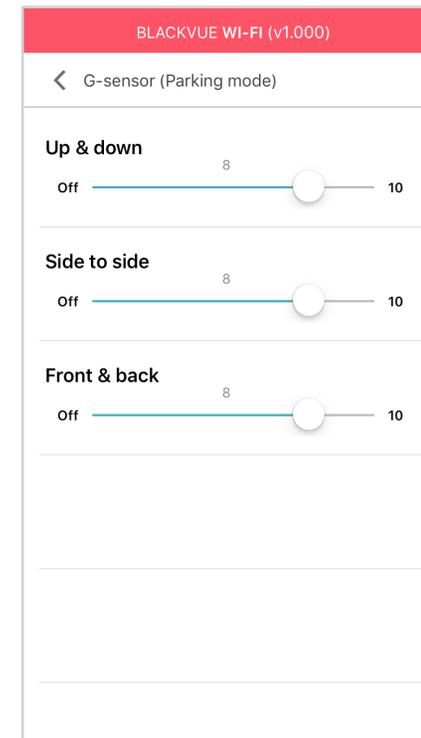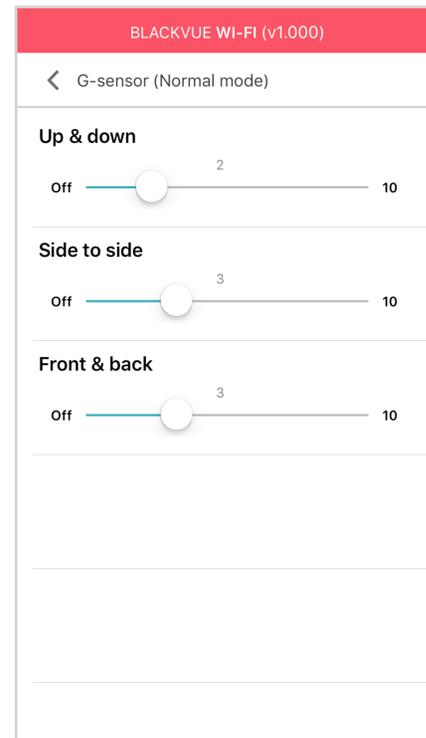

The G-sensor measures the movement of your vehicle through 3 axes – up and down, side to side, and front and back. When the G-sensor detects significant or sudden movement (such as an impact or collision) it will trigger an event recording. You can adjust the sensitivity so minor incidents and bumps don't trigger an event recording. To turn off event recordings by impact detection set the G-sensor sensitivity to off.


## Motion detection (Parking mode)

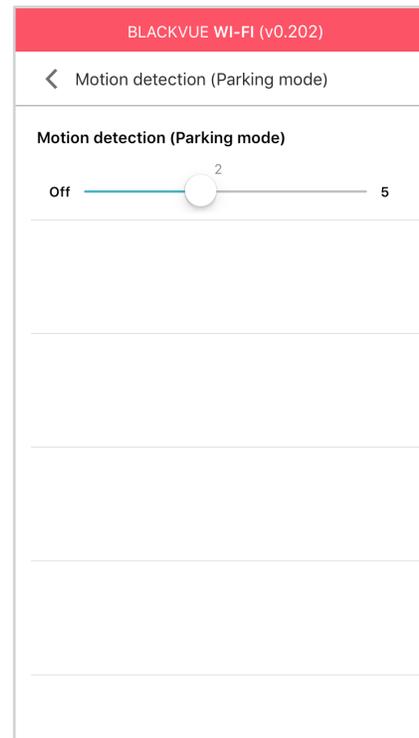

In parking mode the dashcam continuously buffers video and saves a parking recording when motion is detected in the dashcam's field of view.

You can adjust the sensitivity of the motion detection so minor motion caused by wind or rain doesn't trigger a recording. Please take into account your vehicle's surroundings when adjusting the sensitivity.

## System settings

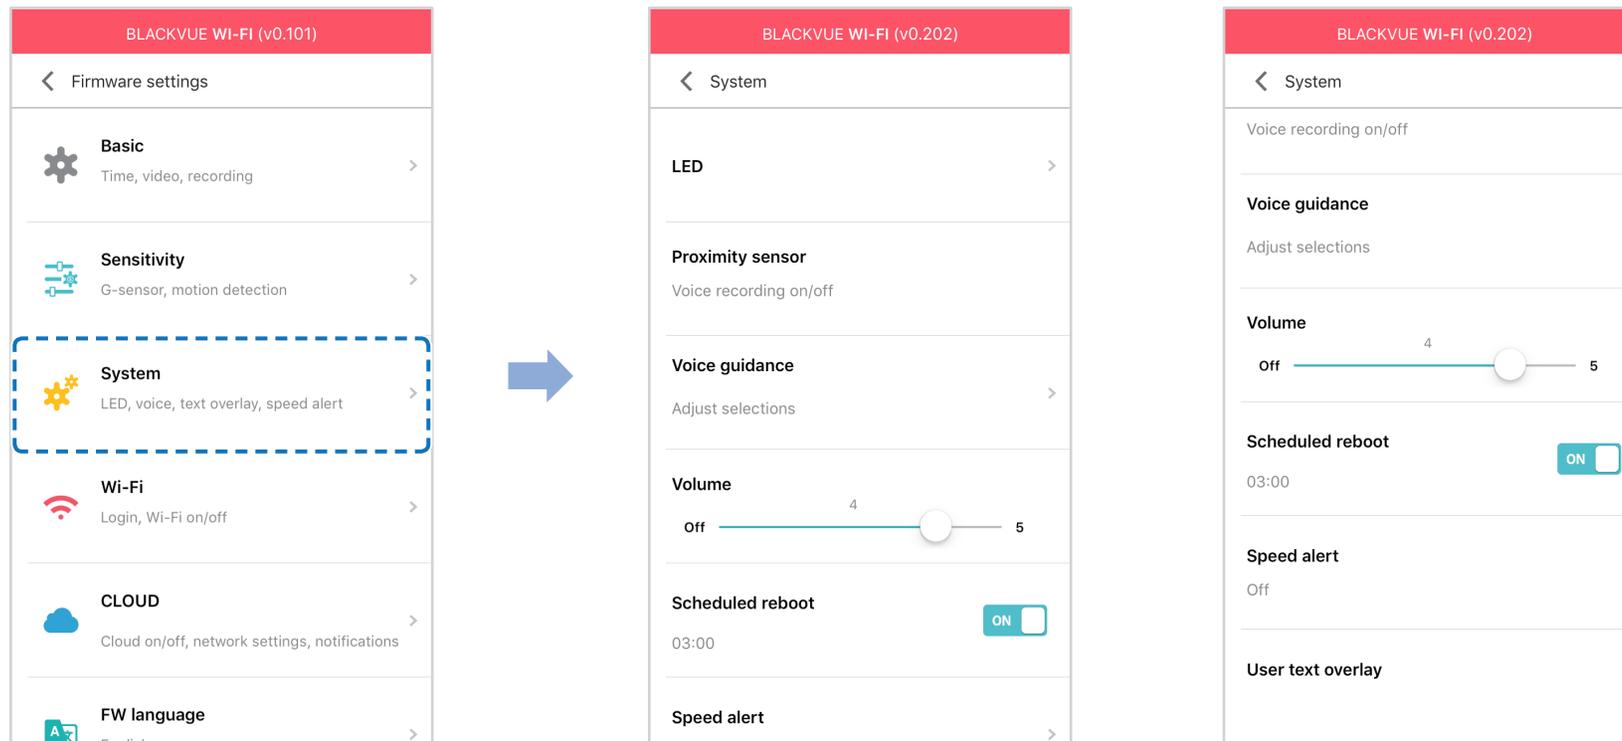

### LED

### Recording status

You can turn the recording status LED on/off.

### Security (Normal mode)

You can turn the security LED on/off for normal mode.

### Security (Parking mode)

You can turn the security LED on/off for parking mode.

### **Wi-Fi (Parking mode)**

You can turn the Wi-Fi LED on/off for parking mode.

### **Proximity Sensor**

You can choose the function of proximity sensor. It can be configured either for audio recording on/off feature or to trigger manual recording.

### **Voice guidance**

You can adjust the voice guidance (announcements) you want to hear.

### **Volume**

You can adjust the volume of the voice guidance (announcements).

### **Scheduled Reboot**

The dashcam reboots automatically once-a-day if in parking mode at the set time for improved stability. If the dashcam is recording at the set time, the scheduled reboot is skipped.

You can enable/disable and change the time for scheduled rebooting. Default time is 03:00 am.


### **Speed alert**

Set a speed limit (up to 300 km/h or 200 MPH) for the speed alert. When the vehicle exceeds the specified speed limit, the dashcam beeps and switches to event recording. After saving one event recording file the dashcam switches back to normal mode recording.

### **User text overlay**

You can create a user text overlay of up to 20 characters using a combination of English letters (A – Z, a – z), numbers (0 – 9), and symbols (;:/+\_-()\$#). The text is overlaid in the top-left corner of the recorded videos.

## ➤ Wi-Fi settings

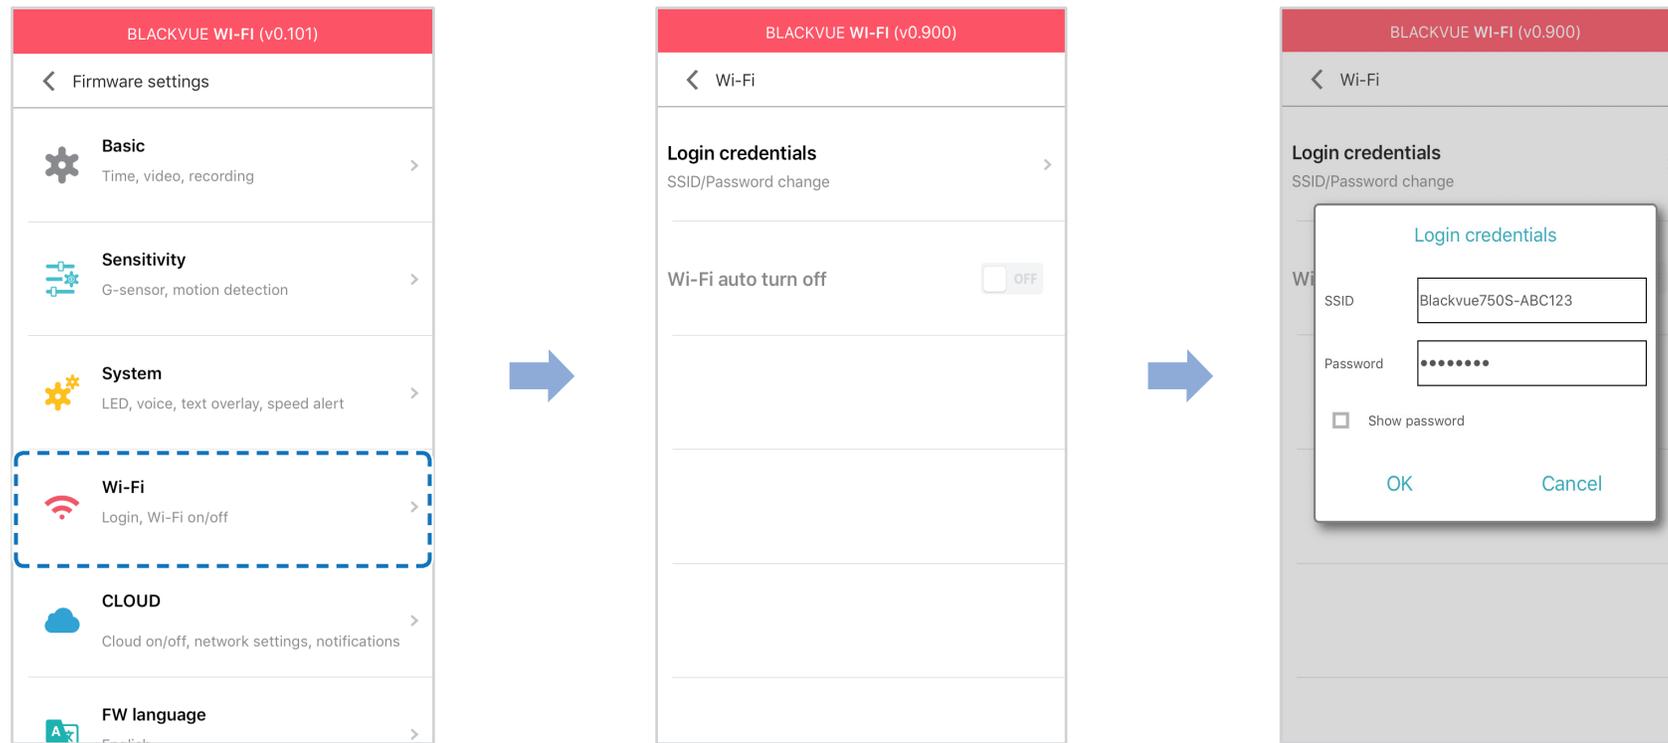

### ☐ Login credentials

You can change the dashcam's SSID and Wi-Fi login password.


### ☐ Wi-Fi auto turn off

When the Cloud service is enabled the Wi-Fi auto turn off setting cannot be adjusted. Wi-Fi will automatically switch on when you turn on the dashcam and remain on.

If you disable the Cloud service, you will be able to adjust the Wi-Fi auto turn off setting.

	ON	OFF
Wi-Fi auto turn off	Wi-Fi turns off if it is inactive for 10 minutes.	Wi-Fi does not turn off automatically.


## Cloud settings

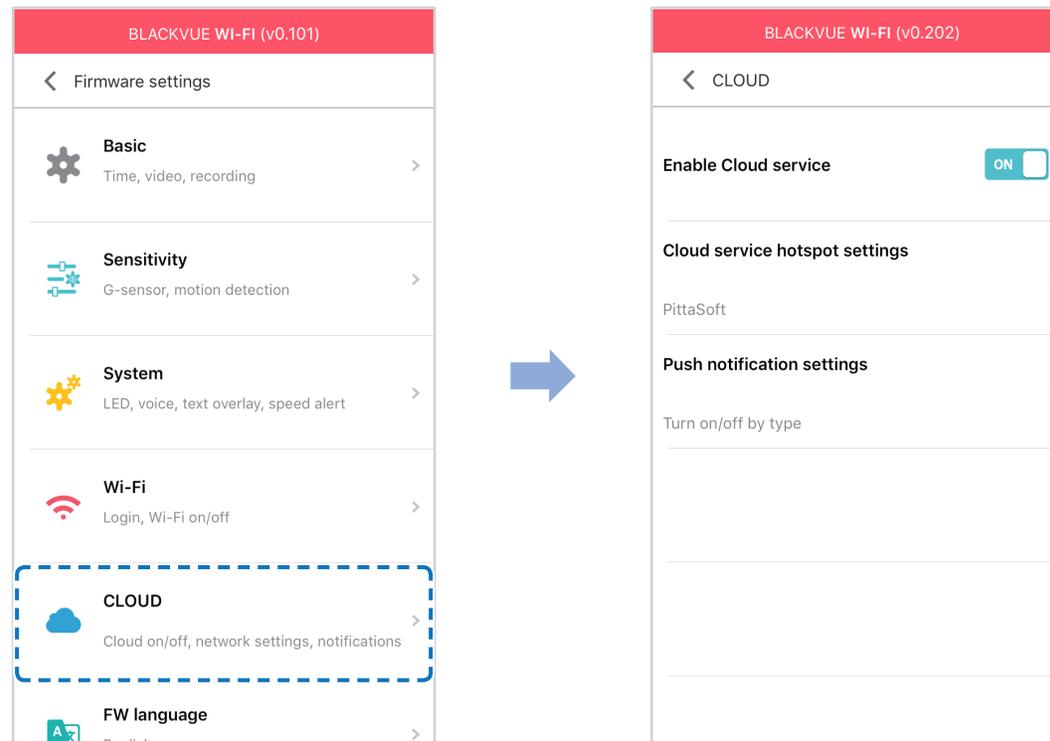

### Enable Cloud service

If you don't use the Cloud service you can turn it off.

## Cloud service hotspot settings

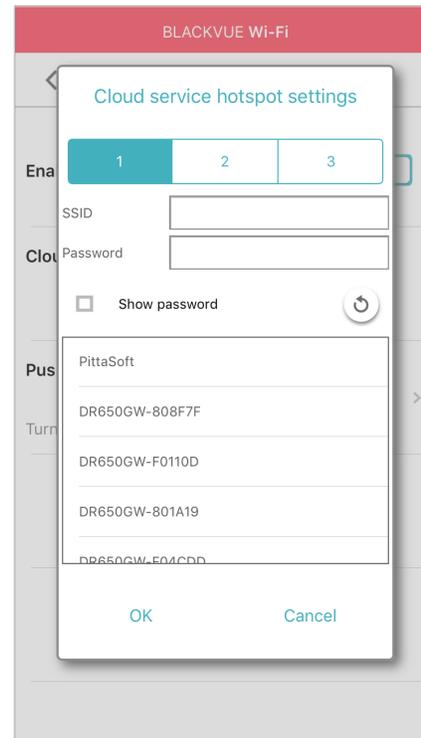


Up to 3 Wi-Fi hotspot SSIDs can be saved (e.g. home, portable hotspot and work). Choose your Wi-Fi hotspot from the list and enter the password. Tap 2 and 3 to add settings for additional hotspots.

Your BlackVue will try to connect to hotspot 1 first. If it cannot connect to hotspot 1, it will then try to connect to hotspot 2, and then hotspot 3.

### Note


- The BlackVue DR750S-1CH, DR750S-2CH is not compatible with 5GHz wireless networks.

## Push notification settings

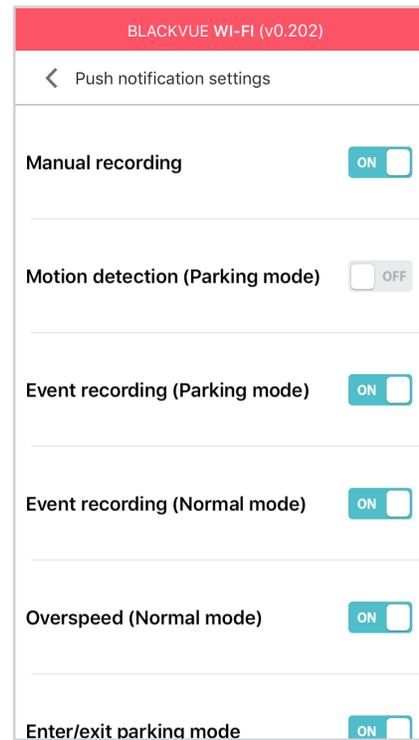


You can customize when you want to receive push notifications.

## FW Language

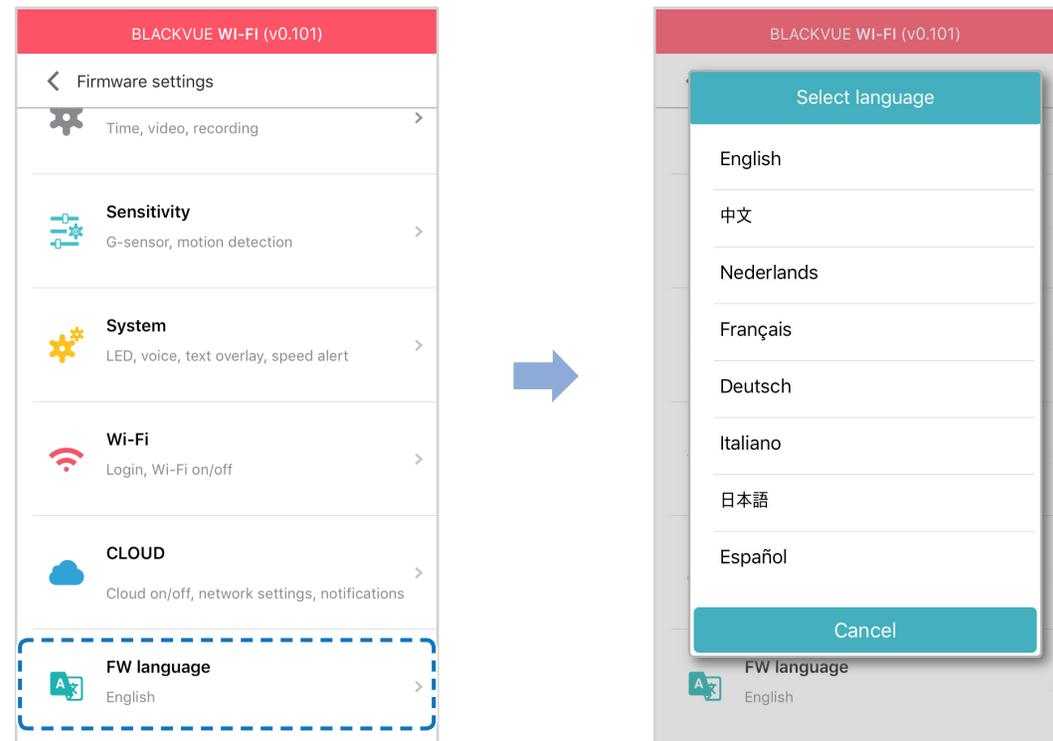


You can change the Firmware language of your dashcam.

## ▶ Changing settings using your computer (Windows/Mac)

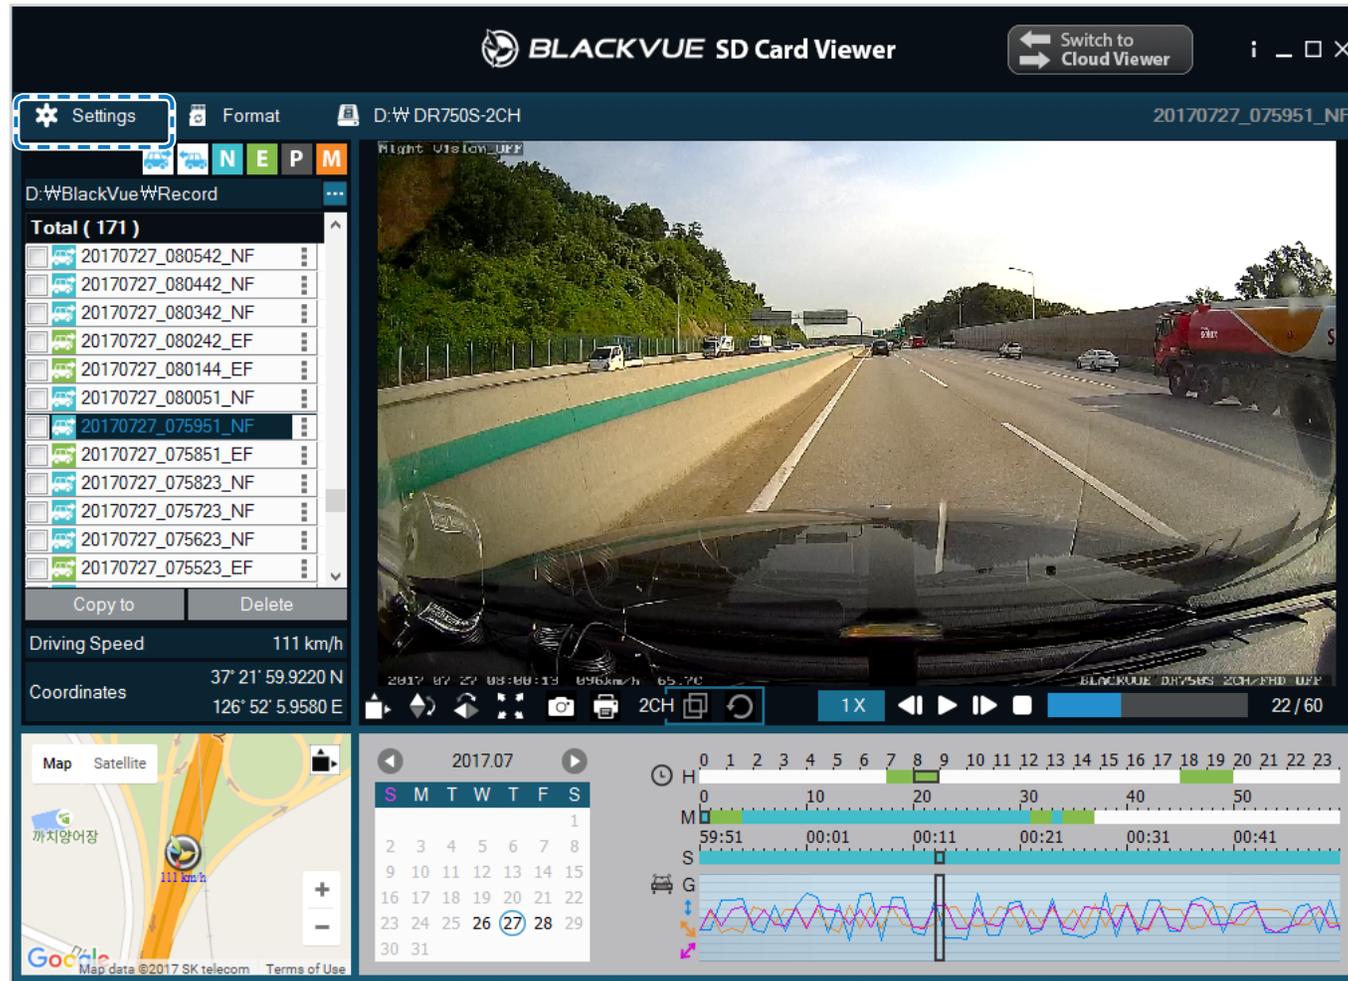

Click on the  Settings button (Windows) or the  **BlackVue Viewer** menu (mac OS) to open the BlackVue settings panel. You will be able to change most of the BlackVue settings to customize its operation.

## BlackVue Viewer settings

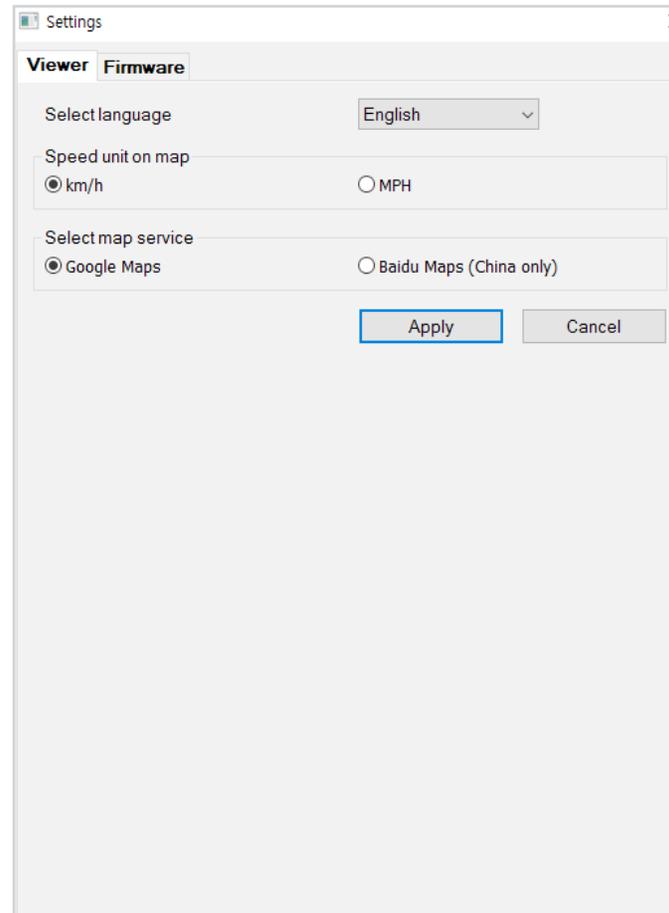

### Select language

Select your preferred language for the BlackVue Viewer interface from the dropdown list.

### Speed unit on map


Change the speed unit displayed on the map.

### Select map service

Change the mapping service used.

## Firmware settings

Select your preferred language for the firmware from the FW language dropdown list. The audio announcements by the dashcam will be in the selected language.

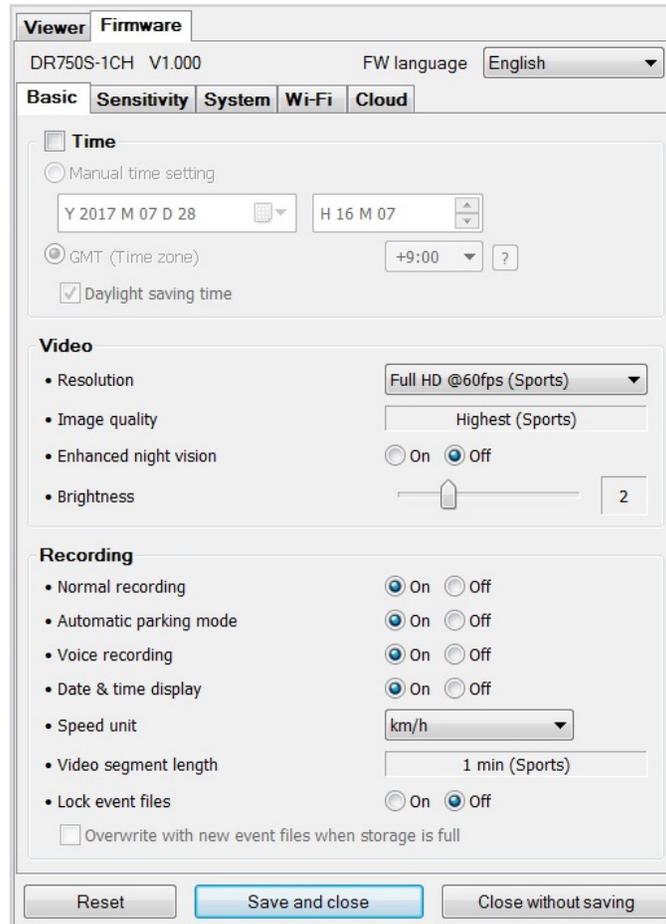

The screenshot shows the 'Firmware' settings page for a BlackVue dashcam. At the top, it displays 'DR750S-1CH V1.000' and 'FW language' set to 'English'. Below this are tabs for 'Basic', 'Sensitivity', 'System', 'Wi-Fi', and 'Cloud'. The 'Basic' tab is active and contains three main sections: 'Time', 'Video', and 'Recording'.  
- **Time:** Includes options for 'Manual time setting' (with date and time pickers) and 'GMT (Time zone)' (set to '+9:00'). A 'Daylight saving time' checkbox is checked.  
- **Video:** Includes 'Resolution' (set to 'Full HD @60fps (Sports)'), 'Image quality' (set to 'Highest (Sports)'), 'Enhanced night vision' (set to 'Off'), and a 'Brightness' slider set to '2'.  
- **Recording:** Includes 'Normal recording', 'Automatic parking mode', 'Voice recording', 'Date & time display', 'Speed unit' (set to 'km/h'), 'Video segment length' (set to '1 min (Sports)'), and 'Lock event files' (set to 'Off'). There is also an unchecked checkbox for 'Overwrite with new event files when storage is full'.  
At the bottom, there are three buttons: 'Reset', 'Save and close', and 'Close without saving'.

### Caution

- Please backup necessary recordings before changing **time, video resolution, image quality** or **video segment length** settings. If any of the aforementioned settings are changed and saved, the dashcam will format the microSD card and delete all recordings stored on the card including locked event files in order to ensure optimal performance.

**Basic settings**

**Time settings**

Select your time zone to auto-sync with GPS time or you can set the time and date manually after enabling **Manual time setting**.

 **Note**

- The factory setting is GMT -11.

Some examples of GMT time offsets are:

- GMT-7: Los Angeles
- GMT-4: New York
- GMT+0: London
- GMT+1: Paris
- GMT+3: Moscow
- GMT+8: Singapore
- GMT+9: Seoul
- GMT+10: Sydney

If you are unsure of your GMT offset please look up your city on <https://greenwichmeantime.com/>

\*Selecting **Daylight saving time** will advance the clock by one hour.

- When setting the time manually, please set to the expected time you will use the BlackVue ( not the present time).

## ■ Video settings

### – Resolution

Select the resolution and frame rate. For example, "Full HD@30" means the dashcam records Full HD video at 30 frames per second.

#### Note

- At "Full HD@60" resolution, the image quality is automatically set to Highest and Video segment length to 1 min. These settings can not be changed.
- Frame rate may vary during Wi-Fi streaming.

### – Image quality

You can adjust the recording image quality (bit rate). Choose between:

- Highest (12 Mbit/s)
- High (10 Mbit/s)
- Normal (8 Mbit/s)

These are the maximum bit rates when the resolution is set to "Full HD@30". If you lower the resolution and frame rate setting, the actual bit rates will be lower.

Increasing the image quality will increase the size of the video files. Loading and copying time will increase accordingly.

### – Enhanced night vision

The dashcam has intrinsic night vision feature. If you want to enhance it, enable Enhanced night vision.

### – Brightness

You can adjust the recording brightness level of the front camera.

## ■ Recording settings

### – Normal recording

When turned off the dashcam does not record in normal mode.

### – Automatic parking mode

If enabled, the dashcam switches from normal mode to parking mode when the vehicle is stationary for 5 minutes.

### – Voice recording

When turned off the dashcam does not record audio.

### – Date & time display

Turn on/off the date and time display on videos.

### – Speed unit

Select km/h, MPH, or turn off.

### – Video segment length

Choose between 1, 2 or 3 minute video segment lengths.


### – Lock event files

Turning on this option will lock the following recording types and stop them from being overwritten by newer recordings:

- Impact event recordings during normal and parking mode (E); and
- Manual recordings (M).

A maximum of 50 files can be locked. Once this limit is reached, to lock new recordings please review locked files on the microSD card and free up space, or enable 'Overwrite locked event files when full' to allow the oldest locked files to be overwritten.

## □ Sensitivity settings

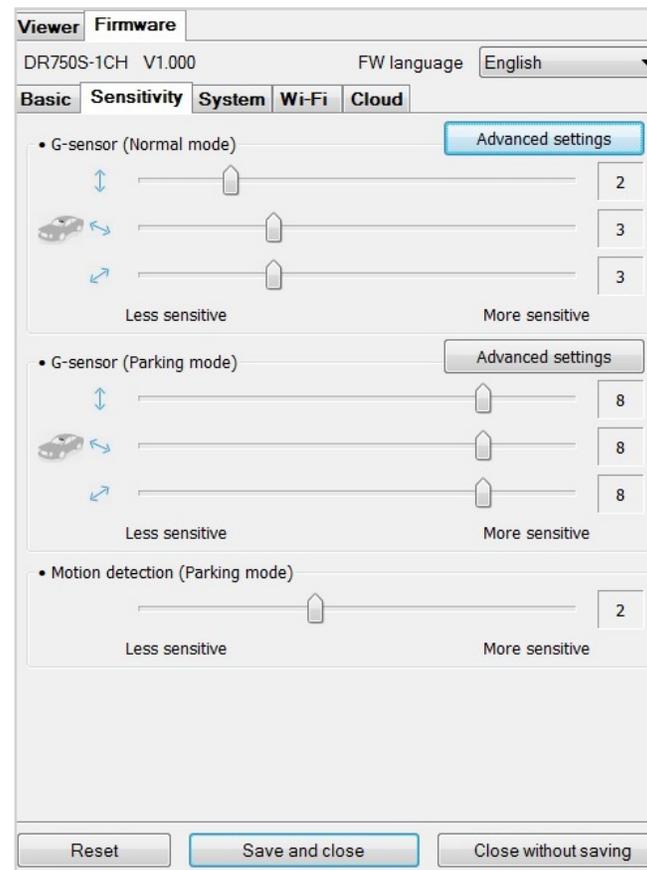

### ■ G-Sensor (Normal mode) / G-Sensor (Parking mode)


The G-sensor measures the movement of your vehicle through 3 axes – up and down, side to side, and front and back. When the G-sensor detects significant or sudden movement (such as an impact or collision) it will trigger an event recording. You can adjust the sensitivity so minor incidents and bumps don't trigger an event recording. To turn off event recordings by impact detection set the G-sensor sensitivity to off.

## ■ Motion detection (Parking mode)

In parking mode the dashcam continuously buffers video and saves a parking recording when motion is detected in the dashcam's field of view.


You can adjust the sensitivity of the motion detection so minor motion caused by wind or rain doesn't trigger a recording. Please take into account your vehicle's surroundings when adjusting the sensitivity.

## ■ Advanced sensitivity settings for normal and parking mode

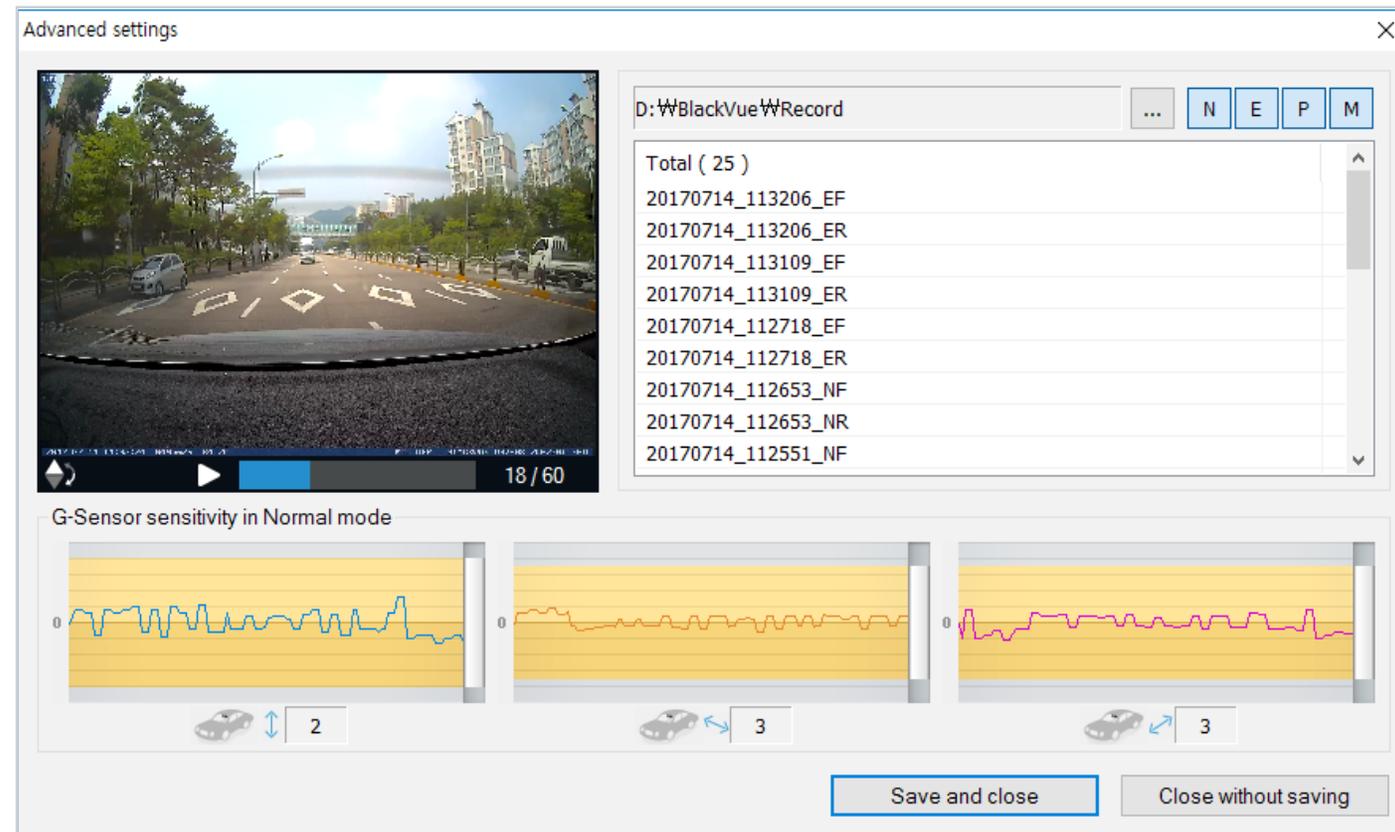


Advanced sensitivity settings allows you to fine-tune the event recording G-Sensor threshold, while watching pre-recorded G-Sensor data and video as a reference.

- 1 Click the **Advanced settings** button.
- 2 Double click the video from the list that you want to use as a G-Sensor data reference.
- 3 Set the thresholds by adjusting the control bars next to each G-Sensor axis. Any G-Sensor data that crosses over the threshold on any of the 3 axes will trigger an Event recording.

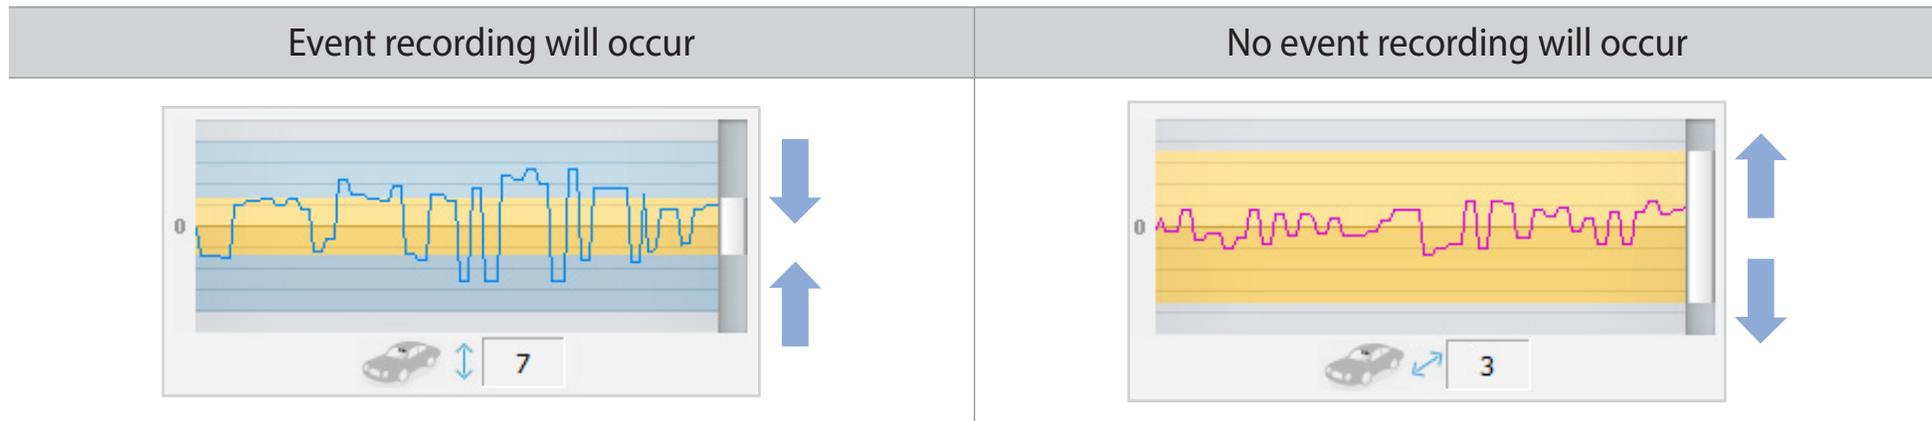

- 4 Click **Save and close**.

## System settings

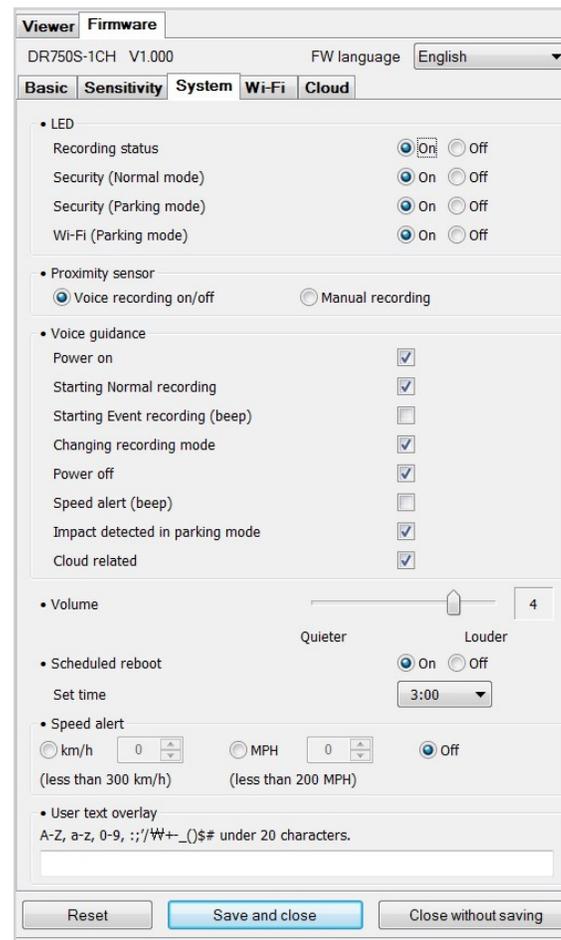

### LED

#### – Recording status

You can turn the recording status LED on/off.

#### – Security (Normal mode)

You can turn the security LED on/off for normal mode.

### – **Security (Parking mode)**

You can turn the security LED on/off for parking mode.

### – **Wi-Fi (Parking mode)**

You can turn the Wi-Fi LED on/off for parking mode.

### ■ **Proximity Sensor**

You can choose the function of proximity sensor. It can be configured either for audio recording on/off feature or to trigger manual recording.

### ■ **Voice guidance**

You can adjust the voice guidance (announcements) you want to hear.

### ■ **Volume**

You can adjust the volume of the voice guidance (announcements).

### ■ **Scheduled Reboot**

The dashcam reboots automatically once-a-day if in parking mode at the set time for improved stability. If the dashcam is recording at the set time, the scheduled reboot is skipped.

You can enable/disable and change the time for scheduled rebooting. Default time is 03:00 am.

## ■ Speed alert

Set a speed limit (up to 300 km/h or 200 MPH) for the speed alert. When the vehicle exceeds the specified speed limit, the dashcam beeps and switches to event recording. After saving one event recording file the dashcam switches back to normal mode recording.

## ■ User text overlay

You can create a user text overlay of up to 20 characters using a combination of English letters (A – Z, a – z), numbers (0 – 9), and symbols (;:/+\_-)\$#). The text is overlaid in the top-left corner of the recorded videos.

## Wi-Fi settings

The screenshot shows the 'Wi-Fi' settings page. At the top, there are tabs for 'Basic', 'Sensitivity', 'System', 'Wi-Fi', and 'Cloud'. The 'Wi-Fi' tab is active. Below the tabs, there are three main sections: 1. 'Wi-Fi auto turn off' with radio buttons for 'On' and 'Off' (selected), and a note 'Turn off after 10 minutes of inactivity'. 2. 'Login credentials' with input fields for 'SSID' and 'Password', and a 'Show password' checkbox. 3. 'Wi-Fi authentication (WPA2PSK)'. At the bottom, there are three buttons: 'Reset', 'Save and close' (highlighted in blue), and 'Close without saving'.

### Login credentials

You can change the dashcam's SSID and Wi-Fi login password.

### Wi-Fi auto turn off

When the Cloud service is enabled the Wi-Fi auto turn off setting cannot be adjusted. Wi-Fi will automatically switch on when you turn on the dashcam and remain on.

If you disable the Cloud service, you will be able to adjust the Wi-Fi auto turn off setting.

	ON	OFF
Wi-Fi auto turn off	Wi-Fi turns off if it is inactive for 10 minutes.	Wi-Fi does not turn off automatically.

## Cloud settings

The screenshot shows the 'Cloud' settings page in a firmware viewer. At the top, it displays 'DR750S-1CH V1.000' and 'FW language English'. The 'Cloud' tab is selected, and the 'Enable Cloud service' option is set to 'On'. Below this, there are three sections for 'Cloud service hotspot settings', each with 'SSID' and 'Password' fields. A 'Show password' checkbox is present. The 'Push notification settings' section includes checkboxes for 'Manual recording', 'Motion detection (Parking mode)', 'Event recording (Parking mode)', 'Event recording (Normal mode)', 'Overspeed (Normal mode)', and 'Enter/exit parking mode'. At the bottom, there are 'Reset', 'Save and close', and 'Close without saving' buttons.

Viewer Firmware  
DR750S-1CH V1.000 FW language English

Basic Sensitivity System Wi-Fi Cloud

- Enable Cloud service  On  Off
- Cloud service hotspot settings
  - 1 SSID   
Password
  - 2 SSID   
Password
  - 3 SSID   
Password
- Show password
- Wi-Fi authentication (WPA2PSK)
- The BlackVue dashcam is not compatible with 5GHz wireless networks.
- Push notification settings
  - Manual recording
  - Motion detection (Parking mode)
  - Event recording (Parking mode)
  - Event recording (Normal mode)
  - Overspeed (Normal mode)
  - Enter/exit parking mode

Reset Save and close Close without saving

### Enable Cloud service

If you don't use the Cloud service you can turn it off.

## ■ Cloud service hotspot settings

Up to 3 Wi-Fi hotspot SSIDs can be saved (e.g. home, portable hotspot and work). Choose your Wi-Fi hotspot from the list and enter the password. Tap 2 and 3 to add settings for additional hotspots.

Your BlackVue will try to connect to hotspot 1 first. If it cannot connect to hotspot 1, it will then try to connect to hotspot 2, and then hotspot 3.



### Note

- The DR750S-1CH, DR750S-2CH dashcam is not compatible with 5GHz wireless networks.

## ■ Push notification settings

You can customize when you want to receive push notifications.

## □ Applying the settings

You can automatically apply the configuration by inserting the microSD card into the BlackVue dashcam and turning it on. Configure the settings before using the dashcam.

To reset all settings to their defaults press the **Reset** button at the bottom of the settings panel.

## About the Cloud Service

Using a mobile Wi-Fi hotspot or a car-embedded wireless internet connection you can connect your dashcam to the internet and take advantage of the following features in the BlackVue app and BlackVue Cloud Viewer:

**Live View** – Watch your dashcam's live video feed.

**Push notifications** – Be notified on your smartphone when something happens to your car.

**GPS tracking** – See in real-time where your car is and track your car's route and speed.

**Two-way voice communication** – Initiate voice chat from your smartphone to your dashcam.

**Video backup** – Backup video recordings to the Cloud or your smartphone's storage.

**Video playback** – Watch recorded videos stored on your dashcam or in the Cloud on your smartphone anywhere, anytime.

### **Connect to BLACKVUE CLOUD (Optional)**

If you don't have a mobile Wi-Fi hotspot, or if you don't want to use the BLACKVUE CLOUD service, you can skip this step.

If you have a mobile Wi-Fi hotspot (also known as a portable Wi-Fi router), a car-embedded wireless internet network or a Wi-Fi network near your car, you can use the BlackVue app to connect to BLACKVUE CLOUD and see in real-time where your car is and the dashcam's live video feed.

For more information about using the BlackVue app, please download the BlackVue app Manual from [www.blackvue.com](http://www.blackvue.com) > **Support** > **Downloads**.

#### **1 Create an account**

- (i) Open the BlackVue app.
- (ii) Tap the  button in the top-left corner and select **Create account**.
- (iii) Enter your email address and choose a password. Re-enter your password and press **Next**.
- (iv) After reading the Terms & Policies, check the boxes and press the **Create account** button to continue.
- (v) You will receive an e-mail. Click the link in the email to finish creating your account.

## 2 Register your dashcam with your account

- (i) In the BlackVue app select **BLACKVUE CLOUD** and login to your account.
- (ii) Tap **Yes** to enable push notifications (this setting can be adjusted at any time later).
- (iii) Select **Register new camera**.
- (iv) Register your camera using one of the following methods:


**QR Code:** Press **Scan QR Code** and line up the QR Code on your smartphone's screen.

\*The QR code can be found labeled on the front camera when you remove it from its mount.

or

**Manual registration:** Enter your camera's Serial number and Cloud code and press **Register**.

- (v) The app will ask for your permission to access your dashcam's GPS data. If you **allow** access the app will be able to show you your dashcam's location and speed. If you **don't allow** access you won't be able to see your dashcam's location and speed (you can allow access later in Privacy settings).

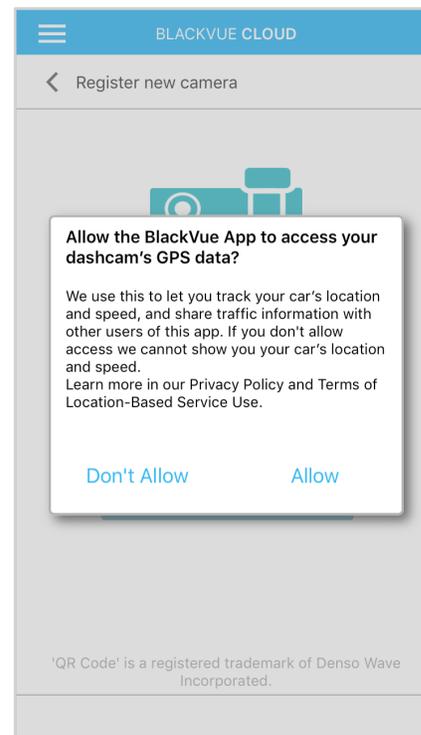

### 3 Connect your BlackVue dashcam to a Wi-Fi hotspot for Cloud connectivity


**Click here for a step-by-step video tutorial**, or go to the main menu and select **Help > Video tutorials**.

- (i) Make sure your BlackVue dashcam and mobile Wi-Fi hotspot are on.
- (ii) "Pair" your smartphone with the BlackVue dashcam via direct Wi-Fi.
- (iii) Open the BlackVue app. Select **BLACKVUE WI-FI** >  > **Cloud settings**.



- (iv) Ensure **Enable Cloud service** is on. Select **Cloud service hotspot settings**.


(v) Choose your Wi-Fi hotspot from the list and enter the password. Tap 2 and 3 to add settings for additional hotspots. Once done, tap **OK**.

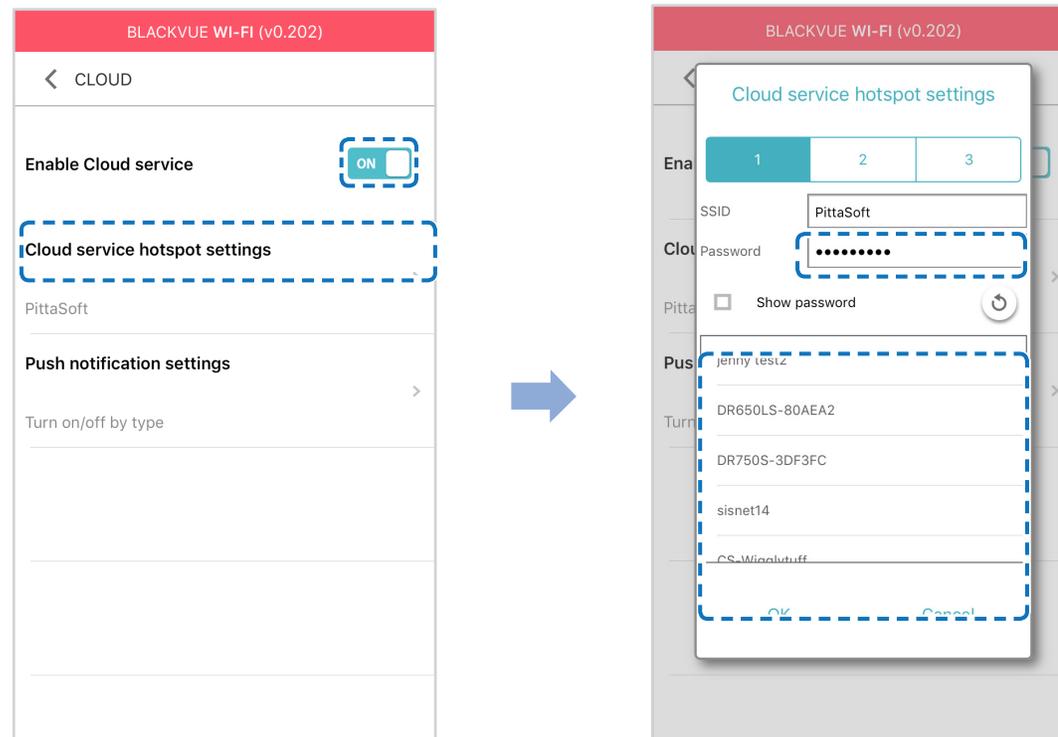

### Note

- Up to 3 Wi-Fi hotspot SSIDs can be saved (e.g. home, portable hotspot and work).
- The DR750S-1CH, DR750S-2CH dashcam is not compatible with 5GHz wireless networks.

(vi) Go back to the Firmware settings menu, tap  and tap **Save and close**.

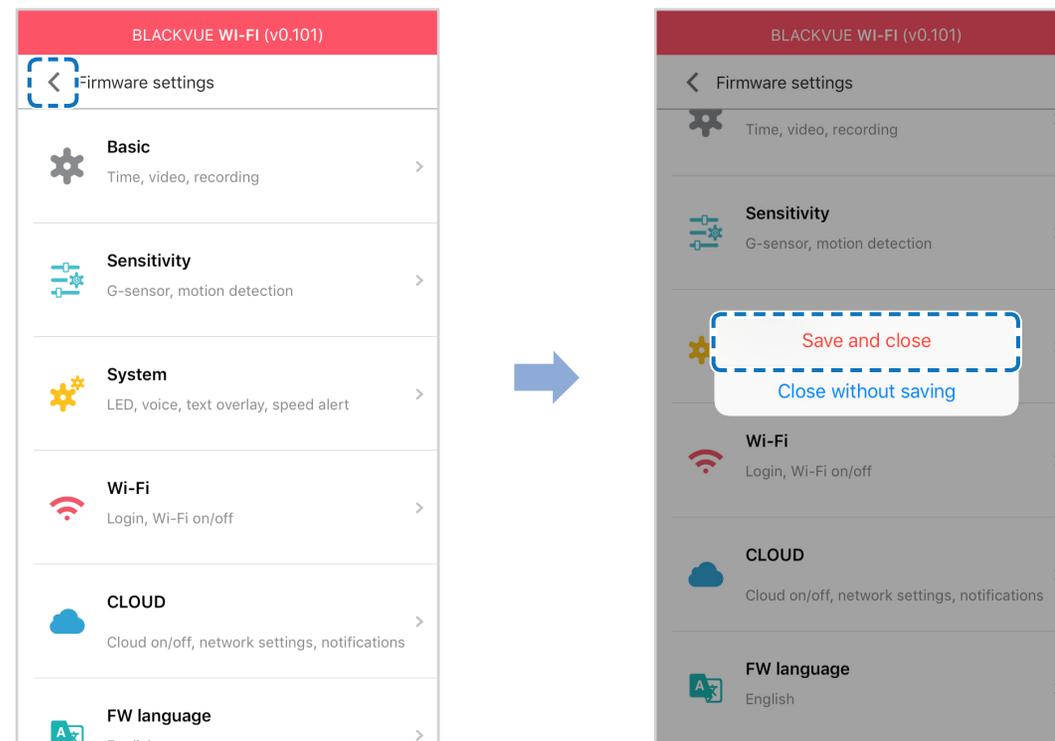

After rebooting, your dashcam will automatically connect to the Wi-Fi hotspot.


Select BLACKVUE CLOUD from the main screen to access all of the Cloud features.

### Note

- You can also change the dashcam settings through BLACKVUE CLOUD by going tapping next to your camera name and select **Camera settings**.
- For more information about using the BlackVue app, please refer to the manual by going to the main menu and selecting **Help > App manual**.


### ▶ Parking mode hardwiring kit (Optional)

The BlackVue dashcam will turn off when the engine is turned off. To record video while the engine is turned off, a hardwiring kit (such as the Power Magic Pro) is required. The Power Magic Pro powers your dashcam when the engine is off by hardwiring it to the automotive battery. A low voltage power cut-off function and a parking mode timer protect your vehicle's battery from discharge.

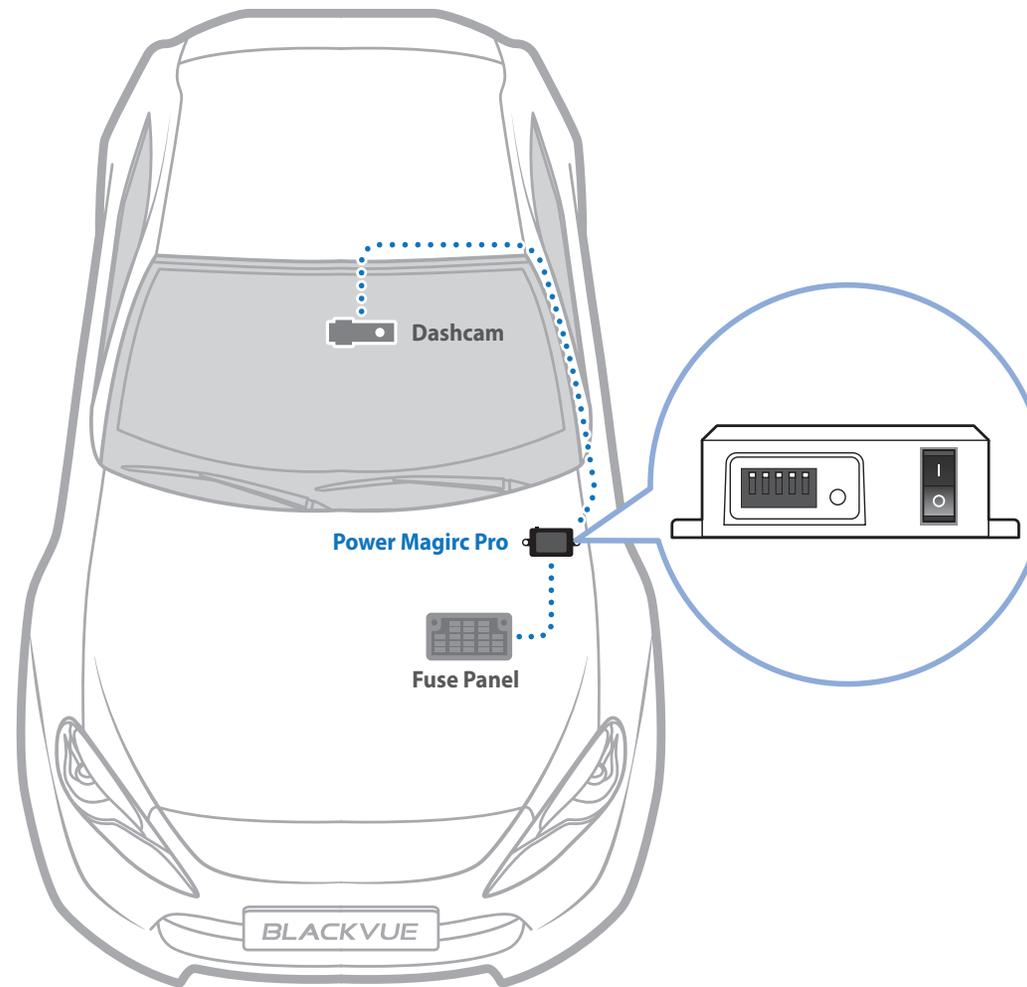

## ► Parking mode battery pack (Optional)

To record video when the engine is turned off without using the vehicle's battery, you can install a parking mode battery pack. The Power Magic Battery Pack B-112 powers a single dashcam for up to 12 hours after 1 hour of rapid charging. When the engine is off the battery pack powers the dashcam. When the engine is on the dashcam is powered directly from the vehicle's battery and the battery pack charges.

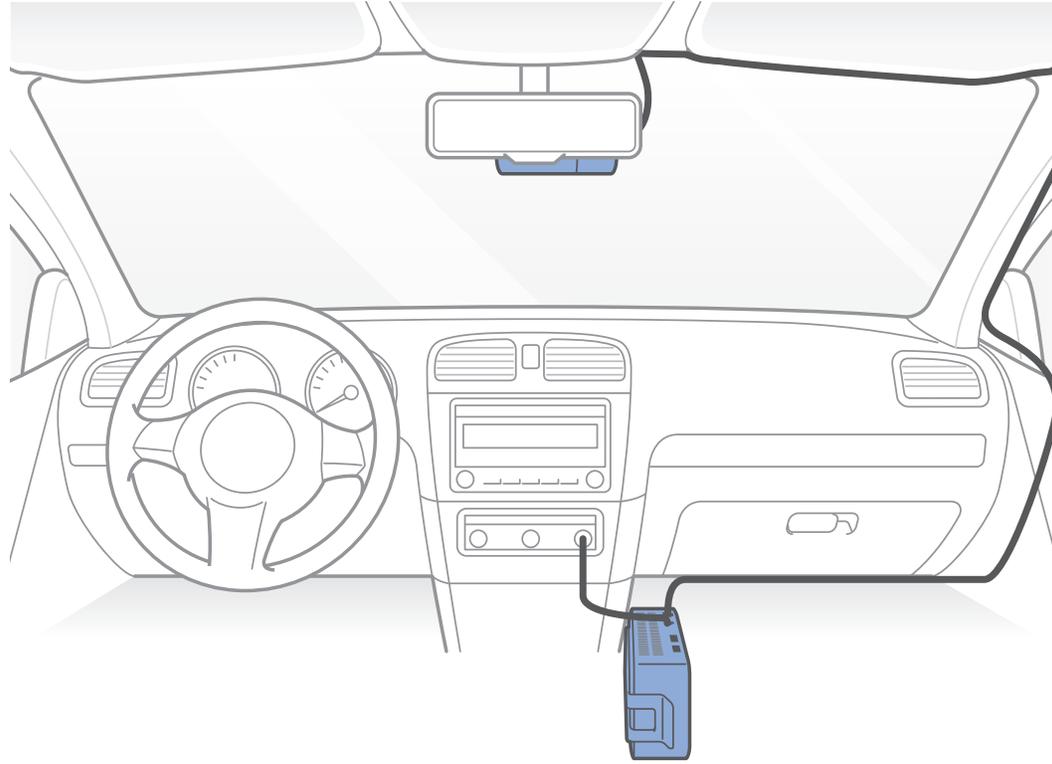

### **Changing / resetting direct Wi-Fi SSID and password**

The dashcam's Wi-Fi SSID and password can be changed/reset using one of the following methods.

#### **On-device Wi-Fi SSID and password reset**

Press and hold the Wi-Fi button on the dashcam, for 5 seconds and once voice instructions start, release the button. Then press once again to reset the Wi-Fi SSID and password to default.

\* The default Wi-Fi SSID and password can be found labeled on the dashcam when you remove it from its mount.

## ➤ Change Wi-Fi SSID and password over the Cloud


- 1 Login to the BlackVue app.
- 2 Select **BLACKVUE CLOUD**.


### Note

- You can access FW settings Over the Cloud only when the dashcam is ON and connected to the internet (Cloud). A blue colored icon means the dashcam is connected to the Cloud while a grey colored icon means that the dashcam is not connected to the Cloud.


- 3 Tap  next to your camera name and select **Camera settings** > **Firmware settings** > **Wi-Fi** > **Login credentials**.

You can change the camera's SSID and Wi-Fi login password.

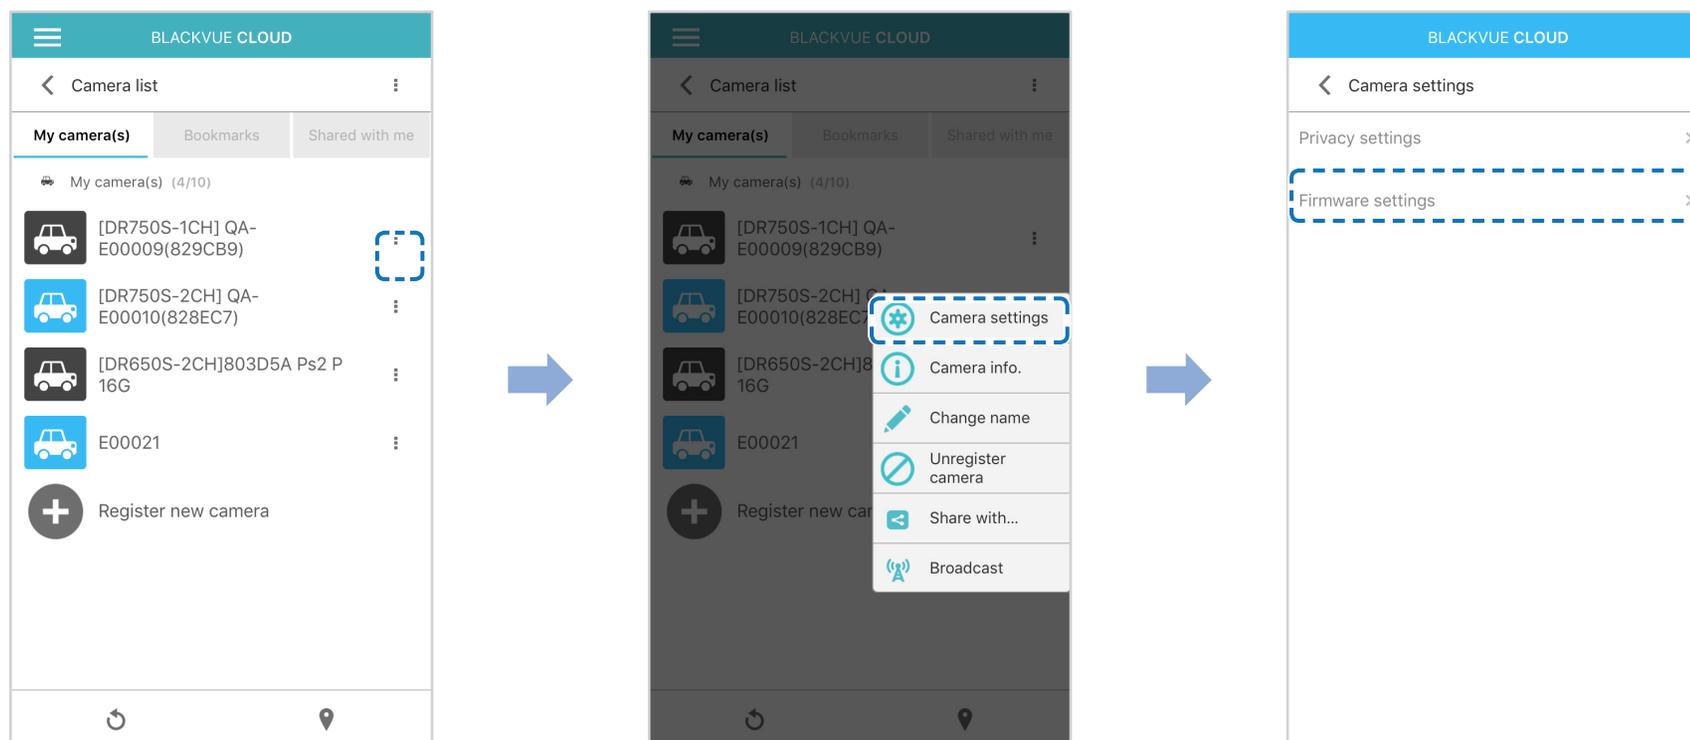

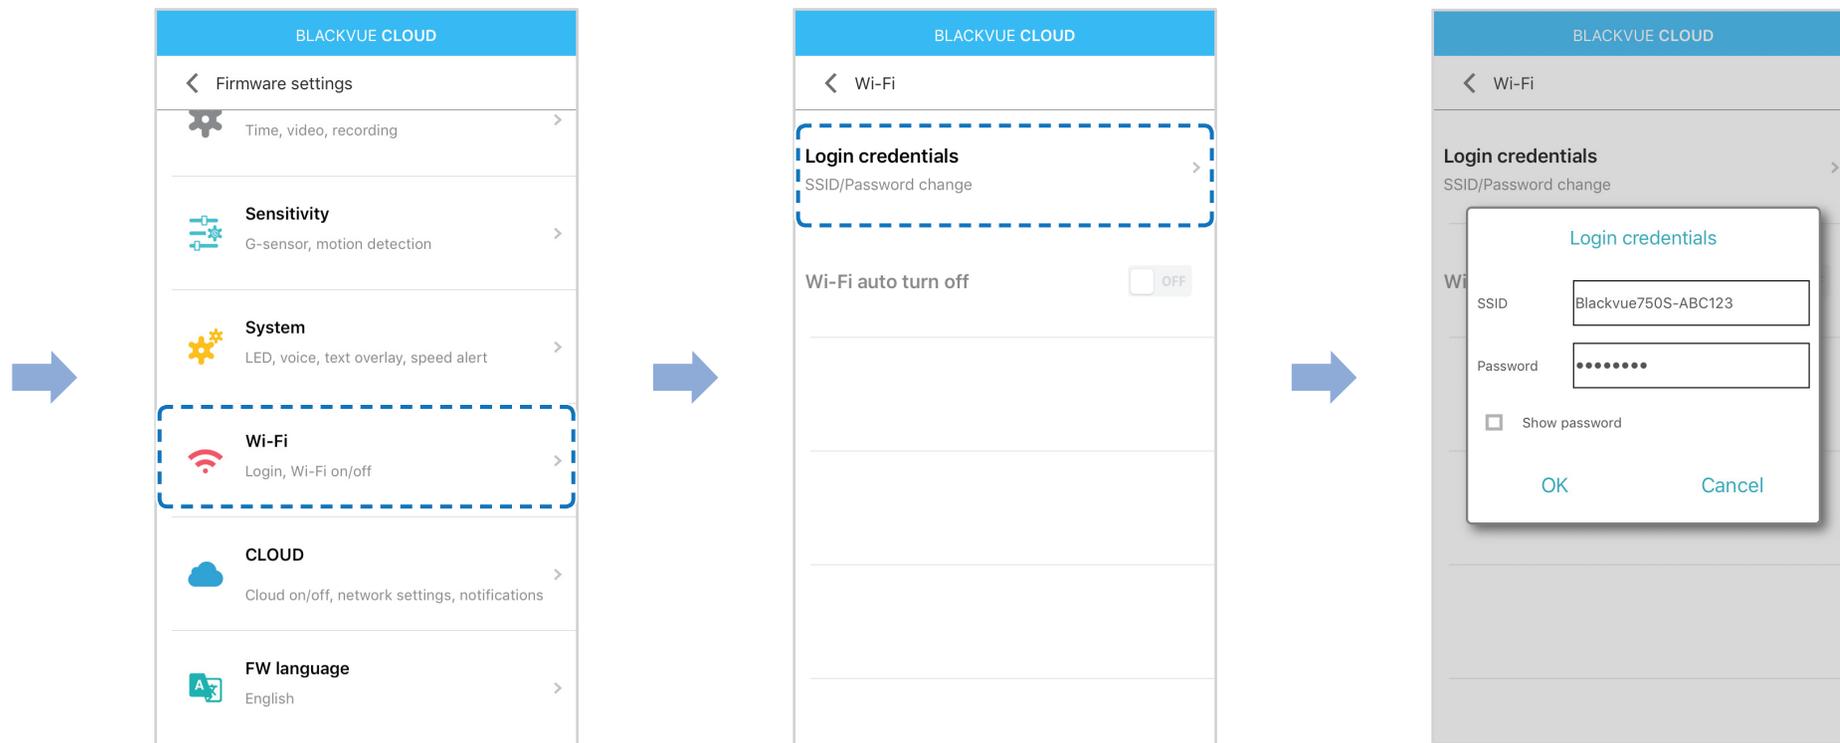

4 Go back to the Firmware settings menu, tap  and tap **Save and close**.

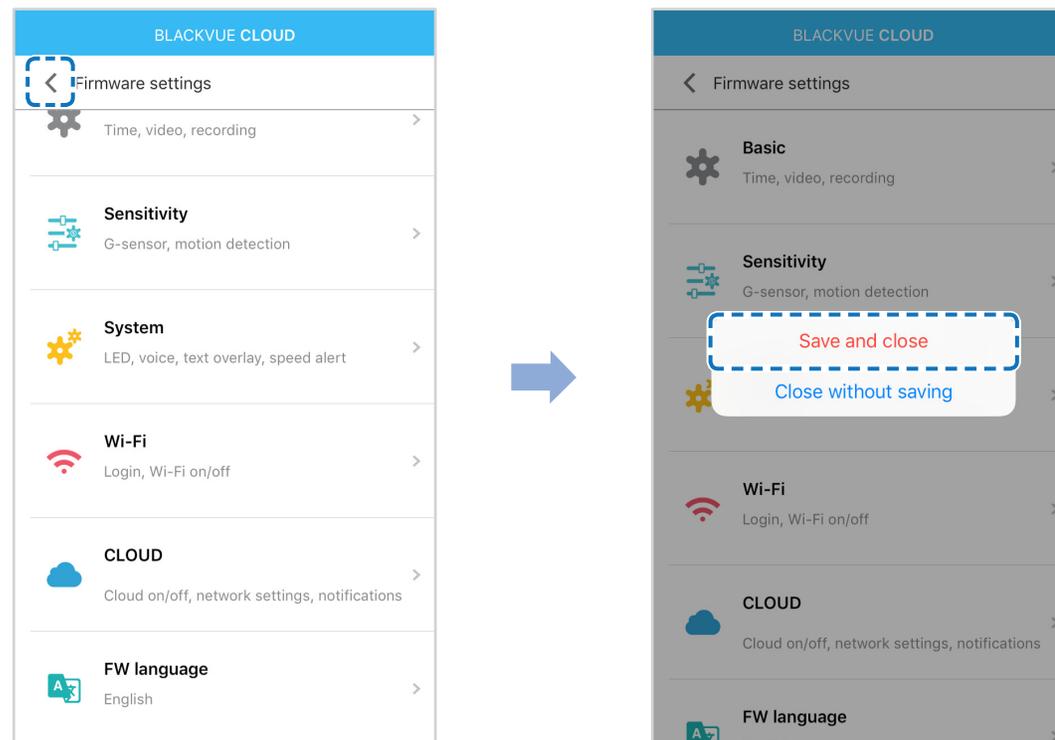

## Change the Wi-Fi password using BlackVue Viewer (Windows or Mac)

- 1 Remove the microSD card from the dashcam.
- 2 Insert the card into the microSD card reader and connect it to a computer.
- 3 Launch BlackVue viewer.  
\*You can download **BlackVue Viewer** from [www.blackvue.com](http://www.blackvue.com) > **Support** > **Downloads** and install it on your computer.
- 4 In BlackVue Viewer click on the  **Settings** button (Windows) or the  **BlackVue Viewer** menu (macOS) to open the BlackVue settings panel.
- 5 Click the **Firmware** tab, then the **Wi-Fi** tab and under **Login credentials** change the password.
- 6 Click **Save and close**.

## Product specifications

<b>Model Name</b>	DR750S-1CH
<b>Color/Size/Weight</b>	Black/Width 118.5 mm x Height 36 mm/88 g
<b>Memory</b>	microSD Card (16 GB/32 GB/64 GB/ 128 GB)
<b>Recording Modes</b>	Normal recording, Event recording (when impact is detected in normal and parking mode), Manual recording and Parking recording (when motion is detected) * For Parking mode recording, a Parking Mode Battery Pack (Power Magic Battery Pack) or a Parking Mode Hardwiring Kit (Power Magic Pro) is required.
<b>Camera</b>	STARVIS™ CMOS Sensor (Approx. 2.1 M Pixel)
<b>Viewing Angle</b>	Diagonal 139°, Horizontal 116°, Vertical 61°
<b>Resolution/Frame Rate</b>	Full HD (1920x1080) @ 60 fps Full HD (1920x1080) @ 30 fps HD (1280x720) @ 30 fps * Frame rate may vary during Wi-Fi streaming.
<b>Image Quality</b>	Highest, High, Normal
<b>Video Compression Mode</b>	MP4
<b>Wi-Fi</b>	Built-in (802.11n (2.4 – 2.4835 GHz))
<b>GPS</b>	Built-in
<b>Microphone</b>	Built-in
<b>Speaker (Voice Guidance)</b>	Built-in
<b>LED Indicators</b>	Recording LED, GPS LED, Wi-Fi LED, Front Security LED

<b>Button</b>	<p>Wi-Fi/Format button:</p> <ul style="list-style-type: none"> <li>* Press once to turn on/off Wi-Fi.</li> <li>* Press and hold for 5 seconds and once voice commands start, release the button. Then press once again to reset the Wi-Fi SSID and password or press and hold for 5 seconds to format the microSD card.</li> </ul> <p>Proximity sensor: Touching the proximity sensor turns on/off audio recording or triggers manual recording depending on the firmware settings.</p>
<b>Sensor</b>	3-Axis Acceleration Sensor
<b>Backup Battery</b>	Built-in super capacitor
<b>Input Power</b>	DC 12 V - 24 V (DC Plug:  (Ø3.5 x Ø1.35), MAX 1 A/12 V)
<b>Power Consumption</b>	<p>Avg. 250 mA (3 W at 12 V, when GPS and Wi-Fi is On)</p> <p>Avg. 200 mA (2.4 W at 12 V, when GPS and Wi-Fi is Off)</p> <p>* Actual power consumption may vary depending on use conditions and environment.</p>
<b>Operation Temperature</b>	-20 °C – 70 °C (-4 °F – 158 °F)
<b>Storage Temperature</b>	-20 °C – 70 °C (-4 °F – 158 °F)
<b>High Temperature Cut-Off</b>	Approx. 80 °C (176 °F)
<b>Certifications</b>	Front: FCC, CE, RoHS, Telec, WEEE
<b>Software</b>	<p>BlackVue Viewer</p> <p>Windows XP or higher and Mac Yosemite OS X (10.10) or higher</p>
<b>Application</b>	BlackVue Application (Android 4.4.2 or higher, iOS 9.0 or higher)
<b>Others</b>	Adaptive Format Free File Management System

\* STARVIS is a trademark of Sony Corporation.

## Recording time

Your dashcam will automatically turn on and start recording when it is connected to a power source.

Memory Capacity		Resolution	Full HD @ 60	Full HD @ 30	HD @ 30
16GB	Highest		2 HR 45 MIN	2 HR 45 MIN	4 HR
	High		x	3 HR 15 MIN	5 HR 20 MIN
	Normal		x	4 HR	8 HR
32GB	Highest		5 HR 30 MIN	5 HR 30 MIN	8 HR
	High		x	6 HR 30 MIN	10 HR 40 MIN
	Normal		x	8 HR	16 HR
64GB	Highest		11 HR	11 HR	16 HR
	High		x	13 HR	21 HR 20 MIN
	Normal		x	16 HR	32 HR
128GB	Highest		22 HR	22 HR	32 HR
	High		x	26 HR	42 HR 40 MIN
	Normal		x	32 HR	64 HR
Bitrate	Highest		12 Mbps	12 Mbps	8 Mbps
	High		x	10 Mbps	6 Mbps
	Normal		x	8 Mbps	4 Mbps

### Note

- If the microSD card is full, older files are deleted first to make space for newly-recorded videos.
- Total recording time is different depending on the memory capacity of the microSD card and the resolution of the video.

### Disposal of your BlackVue dashcam



1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. Contact local authorities to learn about disposal and recycling options available in your area.
2. The correct disposal of your BlackVue dashcam will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your BlackVue dashcam, please contact your city office, waste disposal service or the shop where you purchased the product.

## Customer Support

For customer support and firmware updates please visit [www.blackvue.com](http://www.blackvue.com)

You can also email a Customer Support expert at [cs@pittasoft.com](mailto:cs@pittasoft.com)

## Before Requesting Service

Please back up all important files and data before requesting service. In order to service the dashcam it may be necessary to delete all files and data from the dashcam. All servicing is provided on the basis that the user has backed up all necessary files and data before requesting service. Therefore Pittasoft Co., Ltd. will not be responsible for the loss of any files or data.

## Copyright & Trademark

- This instruction manual is protected by Copyright Law, and all rights to it are protected by law.
- It is prohibited to reproduce, copy, modify, or translate this instruction manual without permission.

 **BLACKVUE** BlackVue is the registered trademark of Pittasoft Co., Ltd. Pittasoft Co., Ltd. reserves all rights regarding all works related to the BlackVue brand such as product design, trademarks, and product-promotional videos. It is prohibited to reproduce, copy, modify, or use related works without permission. Any violation may be penalized in accordance with the relevant regulations.



YCK-DR750S-2CH

**Product** | Car Dashcam

**Model Name** | DR750S-1CH

**Manufacturer** | Pittasoft Co., Ltd. / South Korea

**Address** | 7F, BYC HIGHCITY Building A 131, Gasan Digital 1-ro, Geumcheon-gu, Seoul, Republic of Korea, 08506

**Customer Support** | [cs@pittasoft.com](mailto:cs@pittasoft.com)

**Product Warranty** | One-Year Limited Warranty

 [facebook.com/BlackVueOfficial](https://facebook.com/BlackVueOfficial)

[www.blackvue.com](http://www.blackvue.com)

**Made in Korea**