
Yealink

Certified for Microsoft Teams

WH62 Mono & WH62 Dual

DECT Wireless Headset

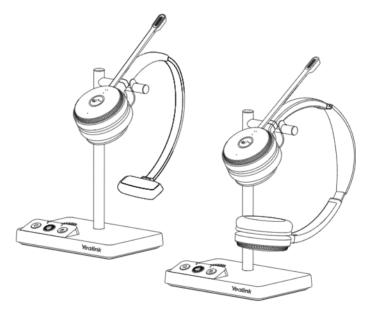

^{*} The pictures in this guide take the Teams version as an example.

Quick Start Guide

Excellent Work Partner for Phone and UC Communication

The Yealink WH62 is a new entry ie rel DECT wireless headset, with WH62 buar and WH62 Mono two in oders. Whick seamlessly with major UC prattoring and integrate natively with realink the phones. For crystal so ind experience, Yealink Supe. Wideband rechnology and Acorstic Stield Technology make you talk and hear clearly during phone calls and video conferencing. With easily on ear control interruption free, comfortable wearing. WH62 is a nice partner either for communicating or collaborating.

- · Acoustic Shield Technology
- · Optima Audio Experience
- · All Day Wearing Comfort
- · Built-in Ringer

- · Multiple Devices Connection
- Customi≥able Busylight
- · Easy Management
- Plug and Play

Native Integration

No more EHS adapters needed, connect desk phone directly with one USB cause And 2 Micro USB ports contained in the laster, supporting connect to HC and P phone simultaneously. Integrated deeply with realink in Phone of the cryuta. Call experience at the rulement of wealing WH62. Also work with popular UC platforms, achieving all-round collaboration.

Be Heard Crystal Clearly

With Yealink Acoustic Shield Technology, the two Mic.ophones built in WH62 block the background noise automaticall. Dut ensure participant voice is e heald clearly, greatly boost the communication efficiency.


Interruption Free

Busylight is enabled in WH62. With the light on the headset or BLT60 on the desk turning red, people around you would know that you are on the phone, instead of interrupting you unknowingly. Just stay tocused on conversation, for higher effi- iency, for better collaboration.

All-Day Comfort


Based on hundreds of headform evaluations and thousands of wearing comfort tests, WH62 well meets the ergonomic requirements. Besides, with premier soft leather cushions and lightweight design, you can wear it all day comfortably. For more workspace freedom, WH62 can also free you up to 160m away from the desk.

1 Package Contents

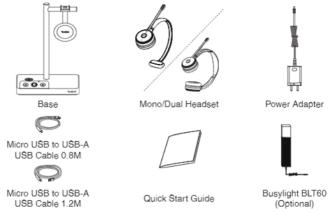

Note: We recommend that you use the included accessories, pecause other accessories may have compatibility issues that prefent them from - orking property.

2 Connection

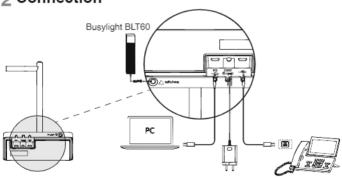

Note: Please make sure you connect the base to a DC power supply not just the USB power suppl... If you want to connect to Yeal nr T3 selies pholes, you need to purchase Yealink EHS35 .. ireless headset adapter separately.

3 Charge the Headset




Note:

- In case the head if t is unlife low pattery for the initial de, dock it to the char, inglease for 30 minutes.
- For the initial Jae, the headset is sinceasfully paired with the base when you'd ckit in the base.

4 Wear the Headset








5 Replace Ear Cushions



6 Usage

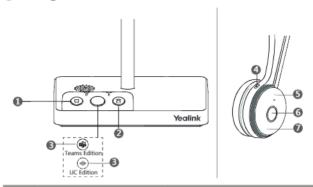

No.	Item	Action & Function		
1	PC Button	Press to enter the softphone dialing s reen answer or end a soft, hone's call		
2	Phone Button	Press to enter the pione dialing scieen, answer or end a phone's all.		
3	(.eas Euition) Teas Button	- Ho.d 'or ∠ seconds to act.vate Cortana ⟨this remulires Mi rosoft's support, Press to invoke the Teams client in the .dle state		
	(UC Edition, Voice Assistant Бutton	r.old for 2 se.onus to activate the voile assistant.		
4	Mte Button	Press to mute or unmute the microphone.		
5	olume Up Button	Press to turn up the volu. ne.		
6	Call Control Button	Press to answer or end a call. Double-tap to reje t a call Hold for 2 seconds to activate Cortana (this requires Microsofts support). Press to invoke the Teams client in the idle state.		
7	Volume Lown Button	Press to turn down the volume.		

Note: Before using the Teams functions, you should install the Microsoft Teams client on your PC.

Regulatory Notices

Operating Ambient Temperatures

- Operating temperature: +x5 in 194 F (0 to 40 C);
- Melative humiult.: 5% o 90%...onuque 5 1.
- _t_rale er perature: 2 t_+1i ∪ r (-30 ⊥ 70 C)

Wirenty

or product warraut the limited only in the unit itself, it ben used to maily in a colorable with the operating instruction ound the syme. I en-If o, ment tree are not lable, or dimine or ost resurting from the -- e of this product or for any claim, or in the tree are not lable. to produce with Yelling down and in gifting me are of the product, in the control of a fireform our layer, both the fireform parties etc. arisin... rum the use of this pruduct

... tue عه mu.

- DC symbol
- Is the च€ -altage symuol
- WEEE Warning symbol

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understant the meaning of the crossec-out wheelet bin symbol. Do not dispose of WEEL as unsorted municipal waste and have to collect such WLEE separately.

Restriction of Hazardous Substances [Ire-tive (FoHS)

this bevice complies with the requirements of the EU ...o. .S Directive ...tatements of compliance can be obtained by contacting support ≥ vealink.com.

all tylinst district

cave the eightruit up. Seau tacht safety hight (it up boiur) asy

A General Requirements

- . Before you install and use the device, read the safety instructions carefully and observe the situation during operation
- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash. Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center.
- . Please refer to the relevant laws and statutes while using the device, legal rights of others should be respected as well.

↑ Environmental Requirements

. Place the device at a well-ventilated place. Do not expose the device under direct sunlight.

. Keep the device dry and free of dust.

. Do not place the device on or near any in/ammable or fire-vulnerable object, such as rubber-mad. materials. . Keep the device away from any heat source or bar, fire, such as a candle or an electric heater.

⚠ Operating Requirements

. Do not let a child operate the device without guidance.

- . Do not let a child play with the device or any accessory in case of accidental swallowing.
- . Please use the accessories provided or authorized by the manufacturer only.
- . The power supply of the device shall meet the requirements of the input voltage of the device. Jease use the provided surge protec-
- tion power socket only . Before plugging or unplugging any cable, make sure that your hands are completely dry. *Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink,
- wet basement or near a swimming pool. . During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric
- Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable, to avoid lightning strike. "If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- . When there is smoke emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and
- unplug the power plug immediately.
- . ontact the specified maintenance center for repair.
- . Do not insert any object into equipment slots that is not part of the product or auxiliary product.
- . Before connecting a cable, connect the grounding cable of the device first. Lo not disconnect the grounding cable until you disconnect all other cables.

A Battery Requirements

- . Do not immerse the battery into water, which could short-circuit and damage the battery.
- . Do not expose the battery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to e. plode.
- . Do power the handset off before removing the battery.
- . Do not try to use the battery for the power supply of any device other than this handset.
- . Do not open or mutilate the battery, released electrolyte is corrosive and may cause damage to your eyes or skin.
- . Use only the rechargeable battery pack delivered with the handset or those rechargeable battery packs expressly recommended by Yealink.
- . Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.

A Cleaning Regulrements

- . Before cleaning the device, disconnect it from the power supply.
- . Use a piece of soft, dry and anti-static cloth to clean the device.
- . Keep the power plug clean and dry.

Troubleshooting

The unit cannot supply power to Yealink device

There is a bad connection with the plun.

- 1. Clean the plug with a dry cloth.
- Connect it to another wall pullet.
- The usage environment in out of operating to aperature range
- 1. use in the up, rating temperatur, range
- whe call elbetween the unit and the Yealth, delige is connected incorrectly
- 1. Connect the cable correctly
- ιου cannut rennect the calle prope I .
- 1. You n.a. ha e connected a wrong Yealin, de ce.
- 2. une the correct power _up_n_.
- Some aust, etc. may be in the port
- 1. Clean the port
- Contact your dealer or authorized ser ide facility for any lurthe questions.
- Local Catalities

This device con-piles with part 15 or the mUC Fulls s. Operation is subject to the rollowing two conditions 11, this device inat, not cause that with interference and β_0 this device must accept any interference received the using intervence under ray year of index representations of the provided by the party reproduction compliance could void the users authority to operate the equipment.

intole. This equipment has been tested and found to comply, with the limits for a leass Bid ital device, pursuant to part 1,0 of the Pr.O. Rules. I have limits are designed to pro-ide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency, energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Howe er, there is no guarantee that interference will not occur in a particular installation. If his equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to fit to correct the interference by one or more of the following measures:

- -Regrient or rejocate the receiving antenna.
- norease the separation between the eucipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an eliperienced radio. The technician for help.
- The equipment complies with FCC radiation exposure limit, set forth for an uncontrolled environment.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED WARNING

This device complies with Innovation, Science and Economic Development Janada (icence-e-empt RSS standard(e). Operation is subject to the following two conditions: (1) this, device may not cause interference, and ,2) this device mut accept any interference, including interference that histy cause undeuted operation of the device.

Le présentappareile, (conforme au: CNR d'industrie Canada applicables aux appareils radio exempts de licence. L'exploitationestautoris : e aux deux conditions suivantes (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareidoit accepter tout brouillageradioé-ectriquesubl, méviesi le brouillageest susceptible d'encompromettre le fonctionnement.

This Class B digital apparatus complies with Janadian ICES-003. Cetappareilnumurique de la clause B estconformeà la norme NMB-003 du Janada.

Les communications effectaées as moyen de cetappareil ne sont pas nécessairement protéques des indiscrétions.

EJJ Regulatory Information

Support . requency Bands and rower:

D_CT 1.8GHz-1.9GHz- 24 dBm

Contact Information

YEALINK NETWORK TECHNOLOGY OU LTD

309 3rd riggt No t 3. Yen Ding No th Hoad resti District

Xiamuri C.v. F. Jian. R.C.

YEALINK (EUROPE) .. ETWORK TLRH ... ULOGY & v.

Strawinskylaan 5127 Atrium Building Biri floor, 1077 2.1

AmsterJam, The Netherlands

YEALINK (U.A, ITETWORK TECHINOLOGY CO., LTD.

999 - Aaci, tree Street Suite 2300, Fulton, Atlanta, G A, 30309, USA

Made in China

Soriware

Yealink USB Connect

Yealink provides a USE device manager client - Yealink USB Connect, which you can use to personalize and manage your Yealink headsets.

Download it from the Yealink website nttps://www.jealink.com/jroduct/yuc

Note: WH6x support Yealink T27G/T4xS/T4U/T53/T5x N/T58/VP5t through USB connection, and WH62/63 support Yealink T3x with LHS35. To hale better experience, the phone firmware recommended to be v83 (xx.86.x.xx) or higher. You can find more detail in Yealink meadaget Compatibility Guide" from Yealink support website.

If your headset needs warranty service, the process is quick and easy. Hease go to https://ticket.yea/ir.k.com/page/headset/warranty-service.htm./ and pubmit RNIII Claim to Yealink

Need more help?



Yealink Documentation & Video



Yealink Headset Compatibility Guide

rechnica Support

Visit Yealink WIKI (in tp://sul.poi. yealink.com/) on the Inless filmwiller, guides, FAQ, Product Locuments, and more in the ter service, we cludedly recommend you to use Yealink Toketing system (https://toketyle.link.com/) to submit all your technical isgues.



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.
Web: www.yealink. om
Copyri,ht©.u22 YEALINK(XIAMEN) NETWOrk
TECHNOLOGY CO. LTD. A. rights, eserved.