

Microsoft Teams

WH63

DECT Wireless Headset



^{*} The pictures in this guide take the Teams version as an example.

Quick Start Guide

Excellent Work Partner for Phone and UC Communication

The Yealink WH63 is a new entry-level convertible DECT wireless headse. Work seamlessly with a act UC platforms and integrate natively with Yealink .P. Fix nes For crystal sound experience. Yealink Super Wideband HD Audio Technology and Acoustic Shield Technology make you talk and hear clearly during phone ratis and video conferencing. Easily finger-touch control, 19g lightweight design, interruption free, WH63 is a nice convertible headset for work.

- · Acoustic Shield Technology
- Optima Audio Experience
- · Four Wearing Options
- · Built-in Ringer

- · Multiple Devices Connection
- · Customizable Busylight
- · Easy Management
- · Plug and Play

Native Integration

No more EHS adapters needed, connell desk phane directly with one USB cable And 2 Nucrol USB ports in ontained in the base, surportinic connell with PC and phone sir ultimeously integrated deerly with Yealink IP Phones you can just reel the crystal call experience at the moment of wearing WH63. Also work with popular UC piaterins, achieving all-round collaboration.

Be Heard Crystal Clearly

With Yealink Acoustic Shield Technology, the two Microphones built in WH63 block the background noise automatically but ensure participant voice be heard clearly, greaty boost the communication efficiency.


Interruption Free

Busylight is enabled in WH63. With the light on the headset or BLT60 on the desk turning red, people around you would know that you are on the phone, instead of interrupting you unknowingly. Just stay focused on conversation, for higher efficiency, for better collaboration.

Multiple wearing options

WH63 supports different ways of wearing, ear-hook, headband, and neckband, satisfying personalized needs. It can also free you up to 120m away from the desk, enjoying larger workspace and bettering work experience.


1 Package Contents

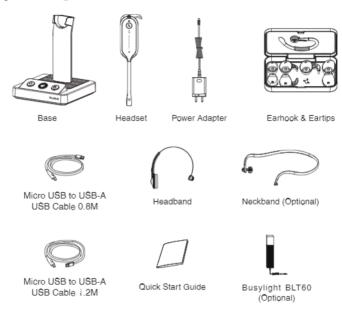


Note:

- We recommend that you use the included accessories, because other accessorie may
 have computibility issued that, revent them from working property.
- .t you want to bound to the series of series of the series
- of the eartip has been attached to the lieadset.

2 Connection

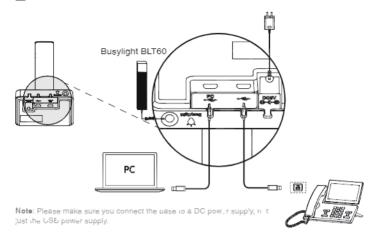


3 Charge the Headset

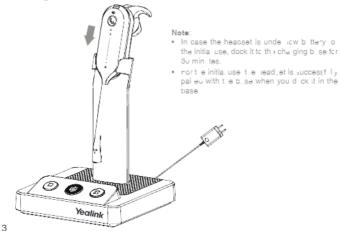

4 Wear the Headset


Eartip wearing style: faster to wear

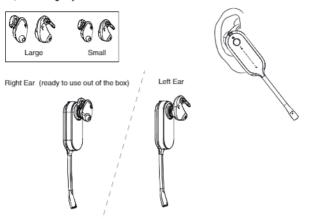


Headband wearing style: comfortable to wear



Earhook & Eartip wearing style: enhance wearing stability

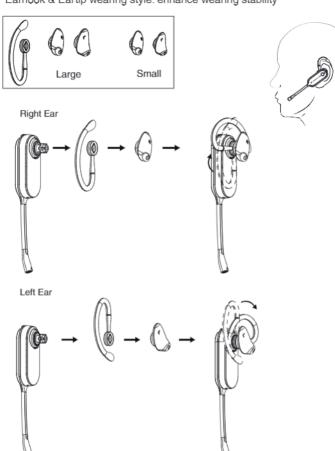


Neckband wearing style: preserve your hairstyle




Reassemble the neckband

Left Ear

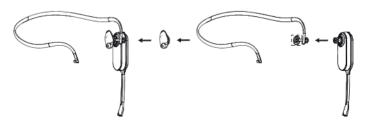

5 Usage

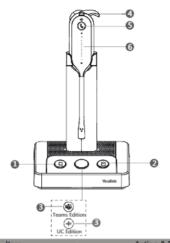


No.	Item	Action & Function		
1	PC Buiton	Fres enter the softphine dialing screen, answer or end in the property and		
2	Phone Button	Fires to enter the phone dialing so ean, answer or end a phone's co		
3	(Teanis EJition) Teams Buiton	 Jold for 2 seconds *, antivate Conton (this requires Microsoft's suppor) Fress to invoke the Teams Ulient in the idle state. 		
	(JC Euition), Voice Assistant Button	nold for ∠ seconds to activate the voice assistant.		
4	M te Button	Press to mute or unmute the microphone.		
5	Call Control Button	Press to answer or end a call Outle-tap to reject a call. Hold for 2 seconds to activate Cortana (this requires Microsoft's support) Press to invoke the Teams client in the idle state.		
υ	Voiume Conitrol Padei	Siide up or down to adjust voiume		

Note: Before using the Teams functions you should install the Microsoft Teams client on your . C

Software

Yealink USB Connect

Yeali sk provides a USB device manager client - Yealink USB Connect, which you call se so persolalize and manage your Yealink headsets.

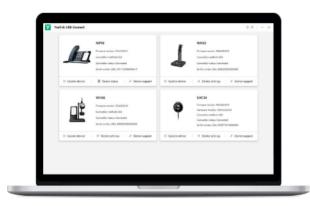

Download it iror., i., e Yealink website https://www.yealink.com/product/yuc

Regulatory Notices

Operating Ambient Temperatures

- Operation removalure +32 to 104°F 0 to 40°C)
- Relative huisidity: 5 6 to 90% nanco / enaint
- .stor_de terriperature: 22 t + .10° + (-30 to +70°C)

Our undust warranty is irrited on: it it to it if the lit it.e., when upen normally it accordance with the operation instrictions and the system envirgoment. We are not flaule in right was resulting from the Leip this propert, or or any glaim from a third varty We are, of flable or placery, with lealink Jevice ansing, om he use of this placety, we ale not a ple for financia, datange... ast offit in Inc. from hird parties etc., arising to " the use of this product

Explanati ... If the symbol

• Du symbol

.... is the DC voltage symbol.

WEEE Warning symbol

To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical To avoid the potential effects on the environment and human health as a result of the presence of managed of the crossed-out and electronic equipment should understand the meaning of the crossed-out

wheeled bin symbol. To not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately. Restriction of Hazardous Substances pirectine; oHS,

This device complies with the requirements of the E. J. RoHS Directive. Statements of compliance can be obtained by contaction support @ vealink com

S =tv l... runtions

ai/ theou incoustro.... Read these swicty i.... uctions before upo.

A General Requirements

Before you install and use the device, read the safety instructions carefully and observe the situation during operation.

- During the process of storage, transportation, and operation, please always keep the device dry and clean, avoid collision and crash.
- . Please attempt not to dismantle the device by yourself. In case of any discrepancy, please contact the appointed maintenance center

· Please refer to the relevant laws and statutes while using the device, Legal rights of others should be respected as well. A Environmental Requirements

Place the device at a well-ventilated place. Do not expose the device under direct sunlight.

- . Geep the device dry and free of dust.
- Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber-made materials.

. .eep the devine away from any heat source or Lare fire, such as a candle or an electric heater. A Operating Requirements

Do not let a child operate the device without guidance.

- Do not let a child play with the device or any accessory in case of accidental swallowing
- Please use the accessories provided or authorized by the manufacturer only.
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power socket only.
- Before plugging or unplugging any cable, make sure that your hands are completely dry.
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wet basement or near a swimming pool
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line, AD SL) twisted pair, the radio frequency cable) to avoid lightning strike.
- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug.
- . When there is smake emitted from the device, or some abnormal noise or smell, disconnect the device from the power supply, and unplug the power plug immediately.
- Contact the specified maintenance center for repair.
- . Do not insert any object into equipment slots that is not part of the product or auxiliary product
- *Lefore connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other cables.

A Battery Requirements

- . Do not immerse the battery into water, which could short-circuit and damage the battery.
- Do not expose the pattery to an open flame or leave the battery where it could be subjected to extremely high temperatures, which could cause the battery to explode.
- . Do power the handset off before removing the battery.
- . Do not try to use the battery for the power supply of any device other than this handset.
- *Do not open or mutilate the battery, released electrolyte is corrosive and may cause damage to your eyes or skin.
- ...se only the rechargeable battery pack delivered with the handset or those rechargeable battery packs expressly recommended by
- Defective or exhausted battery should never be disposed of as municipal waste. Return old battery to the battery supplier, a licensed battery dealer or a designated collection facility.

A Cleaning Regulrements

- · Before cleaning the device, disconnect it from the power supply.
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Troubleshooting

. Keep the power plun clean and dry. The unit cannot supply power to Yealink device.

There is a bad connection with the plug.

1. Clean the plug with a dry cloth. 2. Connect it to another wall outlet.

the usage entironment is out of operating temperature range.

1. Us in t.: operating temperatine range.

she calle between the init and the Y alink Jeville is connect id incorrectly.

Connect the nable over thy.

You annot connict the lable property.

1. Jou ay have connect d a wron __ ealin wevice. 2. Us the corect power upply.

come dust etc. ma, le in the no t.

1. Clean the port

contact your dealer or authorized survive racility for any jurthy industrions

FUCUAL HON

This divice complies with part 45 of the ACC Hules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and L, this device must accept any interference received including interference اده و espons ale ان عبر ۱۹۸۰ و approved by مارو پورپوم ان و t at f i ations ... و باروپوم و پروپوم و t at ... و t at ... و poul و باروپوم و ازووم و ازووم و t at ... و at ... compliance could void the user's authority to op-rath the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class - digital device, pursuant to part 15 of the CC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generative uses and can radiate radio frequency energy and. If not install id and used in accordance with the instructions, as cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to adio or televition reception, which can up date lined to turning the equipment off and on, the user is encouraged to try to con act the interference by one or More of the following Measures:

-Recrient or relocate the receiving antenna.

—.ncreaso the separation between the equipment and receiver.

-Connect the e-uipment into an outlet on a circuit of fi-rent from that to which the receiver is connected.

consult the dealer of an experienced radio TM technician for help.

The equipment complies with FCC radiation exposure it nits set forth for an uncontrolled environment. This trans mitter must not be co-located or ope ating in conjunction with any other antenna or transmitter.

Intit Walkland

This device complies with Innovation, Science, and Economic Developor at Canada Frence-exe of F.SS standard(s). Ophration is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesigned operation or the device.

Le p ésentappar-ilestronforme aux CNR d Industrie Canada applicables aux appareils radio exempts de licence. Lexploitationestautorisée aux doux conditions suivantes . (1) l'appareil no doit pas produire de brouillagg, et (2) l'utilisateur de l'appareildoit acceptor tout brouillage adioéle triquesubi, nêmes le brouillageest susceptible d'encompromett e le ionctionnement.

This Class B digital apparatus complies with Canadian ICES-00 Cetappareilnumerique de la classe B estconfol neà la no me NMB-0u3 du Janada.

Les communications effectuées au moyen de cetabuareil ne sont pau nécessairement protégue. Les indiscrétions.

EU Regulatory Information

Support Frequency Bands and Power:

DECT 1.8GHz-1.9GHz<: 24 dBm

Contact Information

, E. LIN., J. WORK TEUHNOLOGY CO. LTD.

3 9 3rd Floor of the true origins the stady multiplish into

Ala II 1 City, Chan, PR C

YEALIN ... (EUROPE) HETWORK 1EURI: OLOGR B.V. Sic winst; Juan 3127, Atrium Bulluing, 8th filter, 1077ZX

AmstorJain The Nethellands

YEALINK (USA) .. ETWOR TEC. I.. OLOGY CO., LT J.

959 Heachinee Street Suit - 23UL, r'ulton, Allanta, GA, 30309, USA

Made in China

Note: WH6x support Yea(ink 127G/T4;S/14U/T53/T5xW/T58/VP59 through USB connection, and whose support Yealink T5x with EHS35. To have better experience, the phoro-firmware recommended to be v&o (xx 06 x xx) or higher. You can find mode distance of tail in "Ye3 ink Headset Compatibility Guide" from Yealink support we site

if your headset needs warranty se vice, the process is quick and easy. Please go to https://ti.ket.yealink.cum/page/headset/warranty-service.htm. and subruit R.MA Claim to Yealink.

Nesd more help?



Yealink Documentation & Video



Yealink Headset Compatibility Guide

Technical Support

W..it Yealink Wird (http://support.yeari..k.com/) for the latest fire-ware geliuks. FAQ, Product ducuments, and mole. For Jetter service, we sincerel, re-commend to use Yealink Ticketing system (https://ticket.yealink.com) to sub-nit all your technical issues.



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,L.; D. W.bb. www.yea nk..om copyright@2022 YEALINK_LXIAMEN) NETWORK TECHNOLOGY CO.,LTD. All lights reserved.